



**NOTE: Wire dimming conductors as Class 1**

### 1 SINGLE FIXTURE

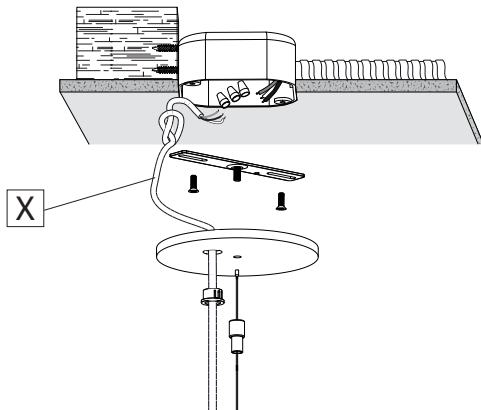


Locate ceiling mounting points according to supplied client drawing. Make a knot in the power cord (G) and then connect it to the ceiling power feed.

### 2 POWER SIDE

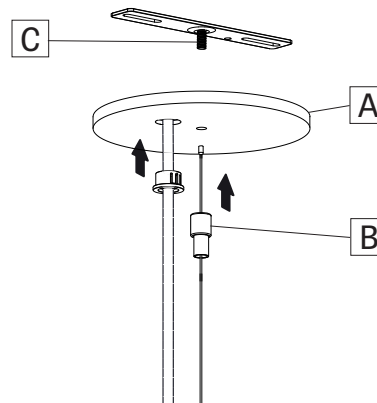


Secure canopy (A) with slip ring (B) on threaded rod (C).

### 3 NON-POWER SIDE

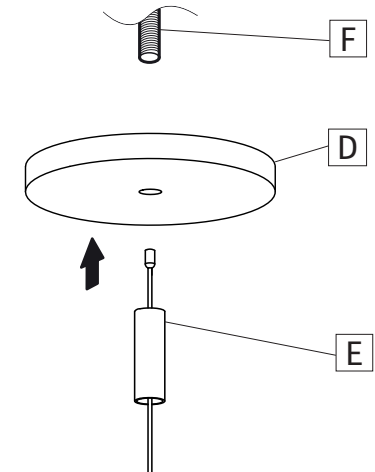


Secure canopy (D) with cable coupler (E) on crimp strud (1/4"-20) (F) (by other).

### 4

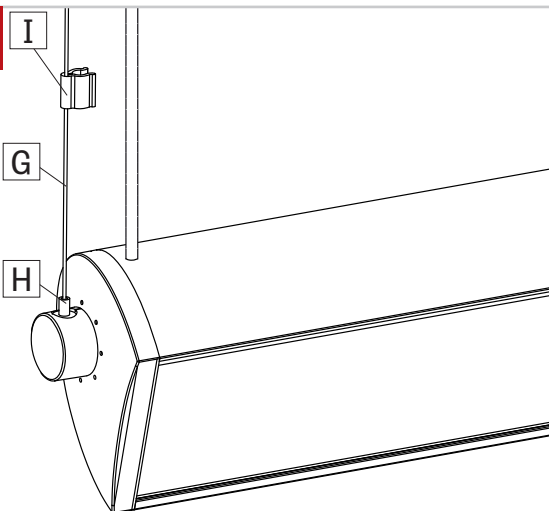


Insert the aircraft cable (G) into the cable gripper (H) and repeat on both sides of fixture. Secure power cord to aircraft cable with plastic clip (I).

### 5

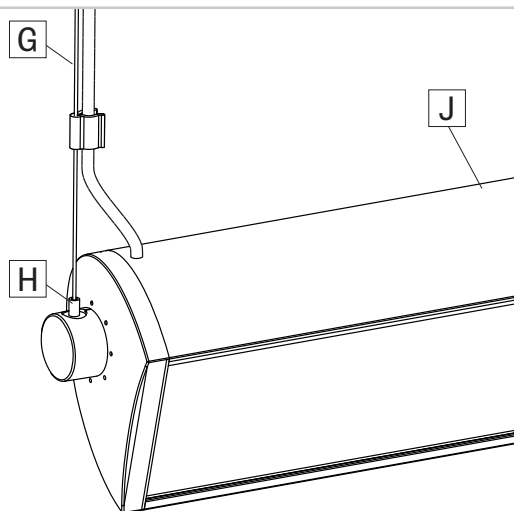


Level fixture (J) using the cable grippers (H). To adjust the cable (G) height, push the feeder tube downward.

### 6 CONTINUOUS SYSTEM

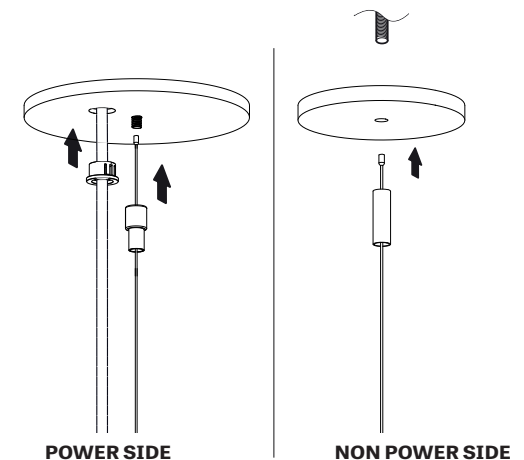


For a continuous system, repeat steps 1 to 3 for all mounting.

7

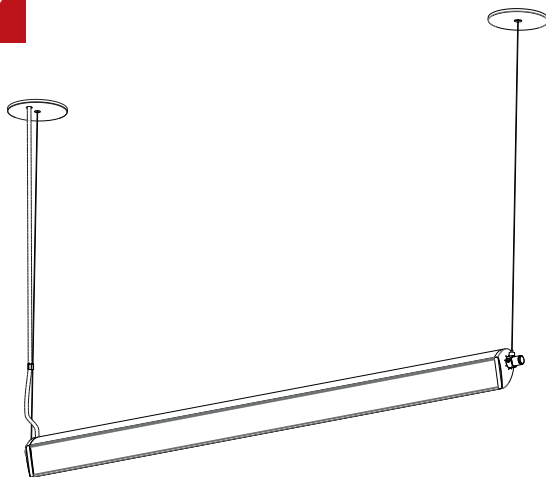


Install the first fixture as shown in steps 1 to 5.

8

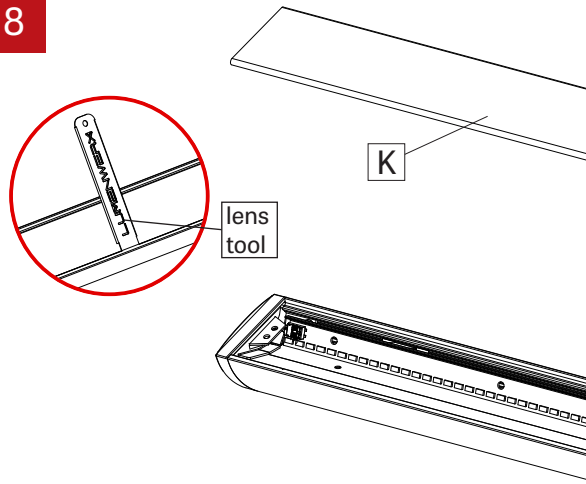


Remove the lens (K) from the second fixture, with the included lens tool.

9

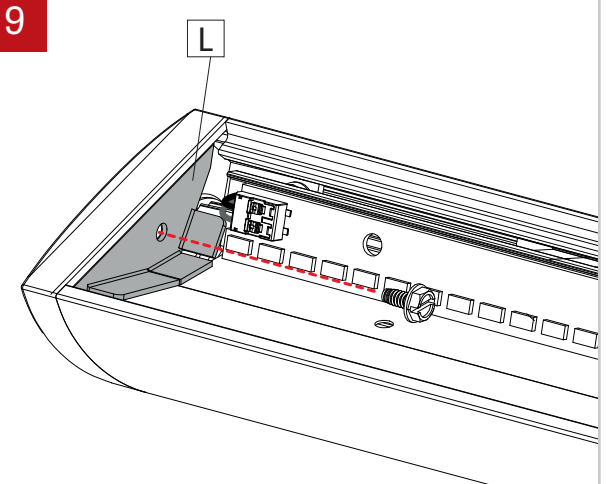


Unscrew and remove the end cap covers (L) on both sides of the second fixture. Place them in a safe place.

10

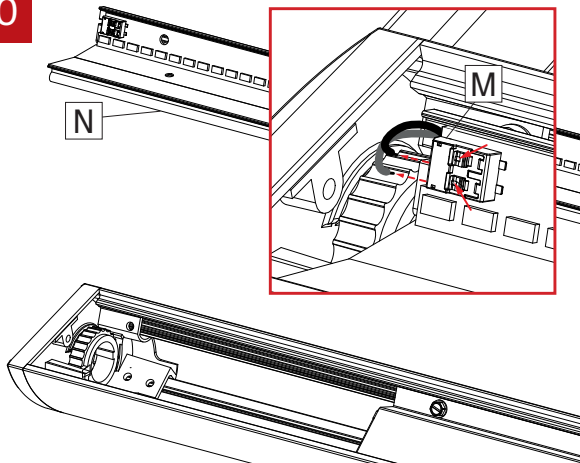


Disconnect LED moxex connectors (M) by taking a pointed object and pressing on the two tabs on the top. Then remove the reflector (N) from the fixture and place it in a safe place.

11

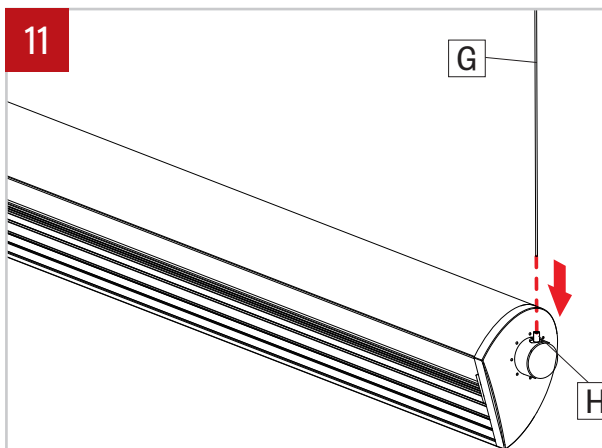

Install the second fixture's cable (G) on the cable gripper (H).

12

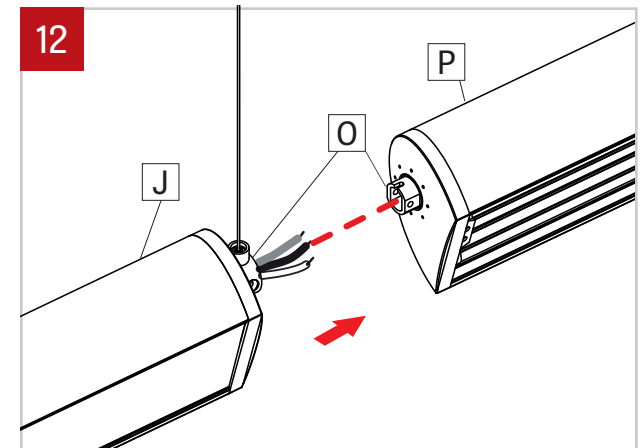

Pass the wires from the first fixture inside the second fixture. Align the joiners (O) at the end of the first two fixtures (J) and (P) and connect them.

