## LUMENWERX



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety. Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

Wire dimming conductors as Class 1.




For electrical connections, follow the wiring diagrams on page <u>12 and 13</u> according to specified drivers in product configuration.


See pages <u>7 to 11</u> for Driver in Junction Box installation instructions


## OVERVIEW (Driver in Cylinder)

#### Junction box (by others)

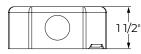


Standard 4" octagonal junction box

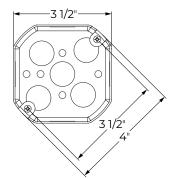

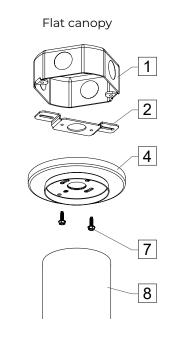

#### Items list

1	Junction box (by others)
2	Crossbar
3	Mounting plate
4	Flat canopy assembly
5	Conduit canopy assembly
6	Adapter piece
7	6-32 screw
8	Housing assembly

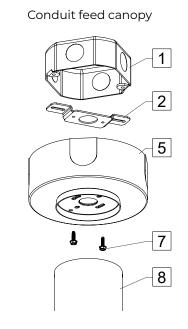


Tools required


-	Allen key 5/64
_	Philips screwdriver

- Socket screwdriver 1/4"

Gypsum cutter or milling hand tool

#### Direct mount

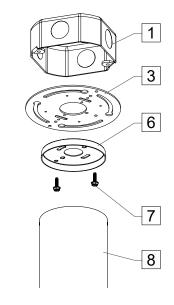

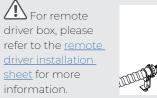



www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.


# LUMENWERX

Driver in Cylinder


## FLAT CANOPY

## **1** REMOVE SET SCREWS.

Remove set screws [A] from the housing assembly [B].

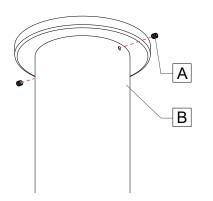


Attach the canopy assembly **[E]** with provided hex screws [C] onto the crossbar [D].

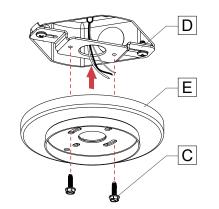


## **2** DETACH CROSSBAR.

Remove hex screws **[C]** to detach the crossbar **[D]** from the canopy assembly [E]

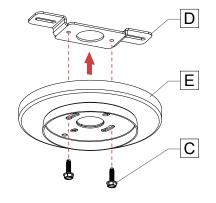


Make electrical connections between the fixture cable **[G]** and the main power **[H]** using wire nuts (by others).

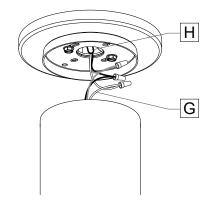


## **3** INSTALL CROSSBAR.

Attach and secure the crossbar **[D]** onto the junction box [F]

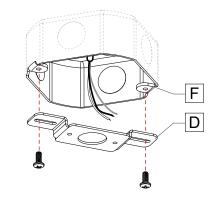

Place the housing assembly **[B]** over the canopy assembly [E] and secure with the provided set screws [A].

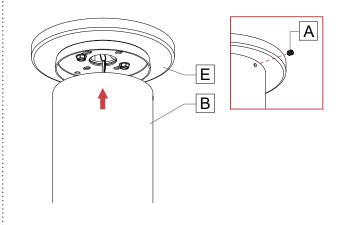

Intertek

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.


LUMENWERX

#### Driver in Cylinder

CONDUIT FEED CANOPY


## **1** REMOVE SET SCREWS.

Remove set screws [A] from the housing assembly [B].

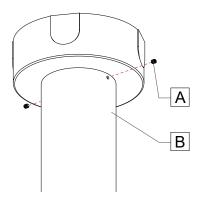


Remove the necessary knock outs to allow the conduits to connect onto junction box.

Attach the canopy assembly [E] with provided hex screws [C] onto the crossbar [D].

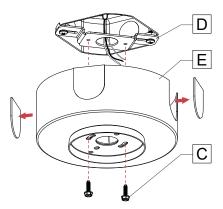


## **2** DETACH CROSSBAR.

Remove hex screws **[C]** to detach the crossbar **[D]** from the canopy assembly [E].

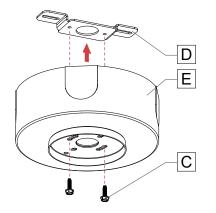


Make electrical connections between the fixture cable **[G]** and the main power **[H]** using wire nuts (by others).

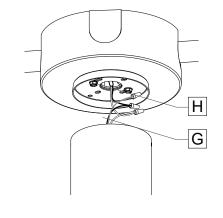


## **3** INSTALL CROSSBAR.

Attach and secure the crossbar **[D]** onto the junction box [F]

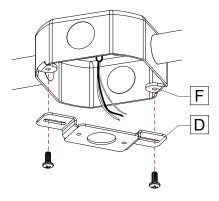

Place the housing assembly **[B]** over the canopy assembly [E] and secure with the provided set screws [A].

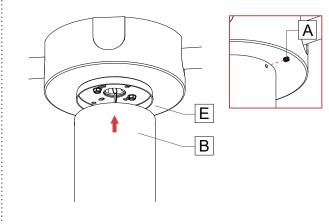



www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

# LUMENWERX


## DIRECT - JUNCTION BOX (Install option A - New construction)

Driver in Cylinder

## I INSTALL JUNCTION BOX AND MOUNTING PLATE.

Install and reinforce junction box **[A]** (by others) to ceiling structure.


Mount and turn the mounting plate **[B]** to place on the junction box. Tighten screws to secure the mounting plate to the junction box.

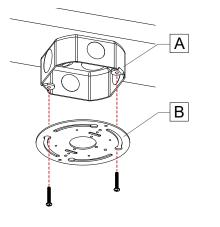


## **2** PREPARE DRYWALL CEILING.

Install the drywall **[C]**. Prepare the area where the fixture is going to be installed. Cut hole in the drywall by using provided template cutout hole.



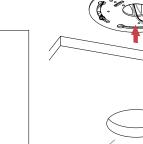

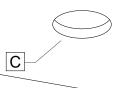



## **3** INSTALL ADAPTER PIECE.

Remove set screws **[D]** from the housing assembly **[E]**.

Pass the main power cable **[F]** through the adapter piece **[G]**.


Attach the adapter piece **[G]** with provided hex screws **[H]** onto the mounting plate **[B]**.

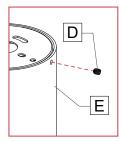

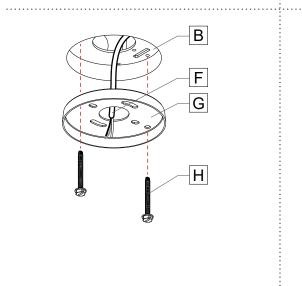

## .4 MAKE ELECTRICAL CONNECTIONS.

Make electrical connections between the fixture cable **[I]** and the main power **[F]** using wire nuts (by others).

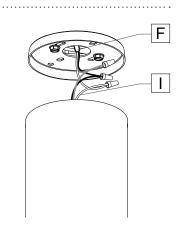




www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

## LUMENWERX

## **5** INSTALL HOUSING ASSEMBLY.

Place the housing assembly **[E]** back to the adapter piece **[G]** and secure with the provided set screws **[D]**.

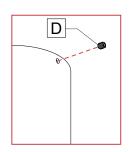





## LUMENWERX


Driver in Cylinder


## DIRECT - DIRECT FEED (Install option B - Remodel)

## INSTALL ADAPTER PIECE TO CEILING.


Remove set screws **[A]** from the housing assembly **[B]**.

Locate where the fixture will be installed. Use the adapter piece **[C]** as a model to mark 2 mounting points and a 7/8" dia hole.

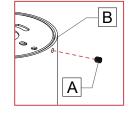


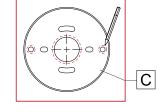

Pierce a 7/8" dia hole and bring the power cable **[D]** through the hole and connect the power cable to the adapter **[E]**.

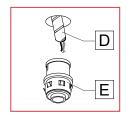


Install screw anchors **[F]** where the hole was made and Install the adapter piece **[C]** with screws.

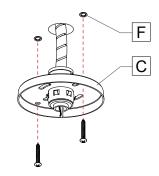


## **2** MAKE ELECTRICAL CONNECTIONS.

Make electrical connections between the fixture cable **[G]** and the main power**[D]** using wire nuts (by others).

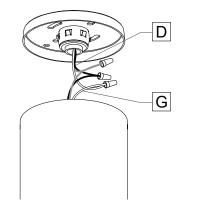

## 

Place the housing assembly **[B]** back to the adapter piece **[C]** and secure with the provided set screws **[A]**.

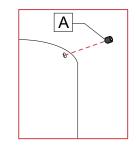





www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

#### OVERVIEW (Driver in Junction Box)


#### Junction box (by others)

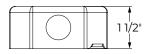


Standard 4" octagonal junction box

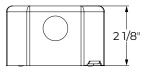

Deep junction box

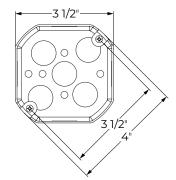

Flat canopy with deep J-box

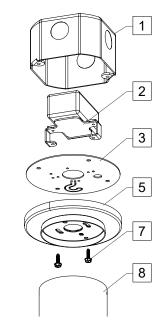


Items	list
1001113	noc

1	Junction box (by others)	
2	Driver bracket	
3	Fixed mounting plate	
4	Cross bar	
5	Flat canopy assembly	
6	Conduit canopy assembly	
7	6-32 screw	
8	Housing assembly	

## LUMENWERX

See pages <u>1 to 6</u> for Driver in Cylinder installation instructions

Conduit feed canopy with standard J-box

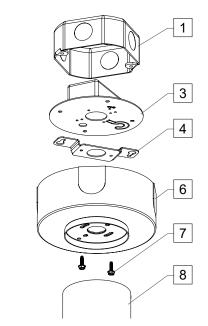

#### Tools required

- Allen key 5/64
- Philips screwdriver
- Socket screwdriver 1/4"



www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.


# LUMENWERX

Driver in Junction Box

## FLAT CANOPY WITH DEEP JUNCTION BOX


## **1** REMOVE SET SCREWS.

Remove set screws [A] from the housing assembly [B].

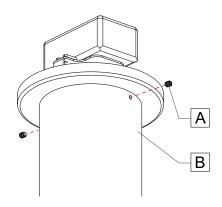


## **4** INSTALL MOUNTING PLATE. .....**5** INSTALL CANOPY ASSEMBLY.

Mount and secure the fixed mounting plate [D] on the junction box [H].

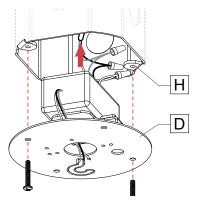


## **2** DETACH MOUNTING PLATE.

Remove hex screws **[C]** to detach the mounting plate [D] from the canopy assembly [E].

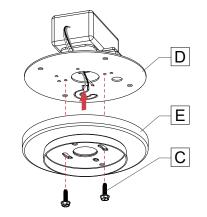


## 

Pull the wires [I] from the driver box through the canopy assembly [E]. Attach the canopy assembly [E] with provided hex screws **[C]** onto the fixed mounting plate [D].

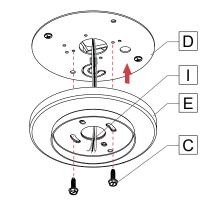


## **3** MAKE ELECTRICAL CONNECTIONS.

Make the electrical connections between the main power cable [F] and the wires [G] from the driver box with the wire nuts (by others)

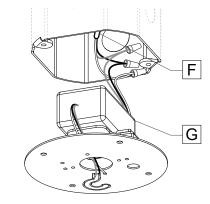

## .....6 MAKE ELECTRICAL CONNECTIONS. ......

Make electrical connections between the fixture cable [J] and the wires from the driver [I] using wire nuts (by others).

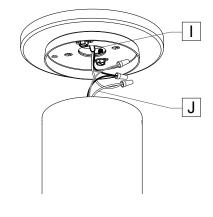




www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

## LUMENWERX

## 7 INSTALL HOUSING ASSEMBLY.

Place the housing assembly **[B]** over the canopy assembly **[E]** and secure with the provided set screws **[A]**.

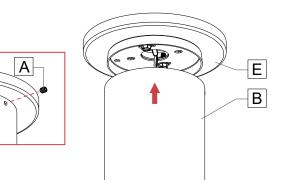




# LUMENWERX

Driver in Junction Box

## CONDUIT FEED CANOPY WITH STANDARD JUNCTION BOX


## **1** REMOVE SET SCREWS.

Remove set screws [A] from the housing assembly [B].

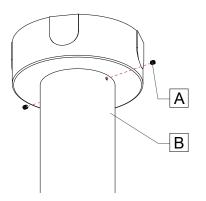


## 

Fix the fixed mounting plate **[D]** to the J-box **[H]** with screws.

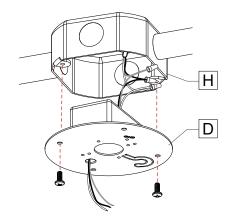


## **2** DETACH FIXED MOUNTING PLATE.

Remove hex screws **[C]** to detach the fixed mounting plate [D] from the canopy assembly [E].

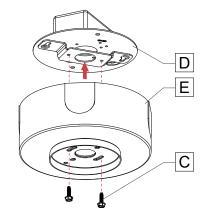


Pull the wires [I] from the driver box through the cross bar [J].

Fix the cross bar [J] to the fixed mounting plate [D] by turning.

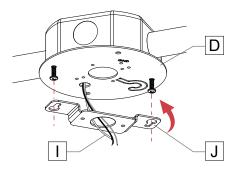

## **3** MAKE ELECTRICAL CONNECTIONS.


Make the electrical connections between the main power cable [F] and the wires [G] from the driver box with the wire nuts (by others).

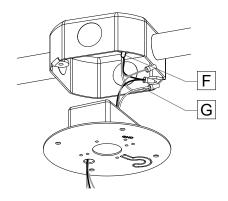

#### .....6 INSTALL CANOPY ASSEMBLY. . . . . . . . . . . . . . . . .

Remove the necessary knock outs to allow the conduits to connect onto junction box.

Attach the canopy assembly [E] with provided hex screws [C] onto the crossbar [J].

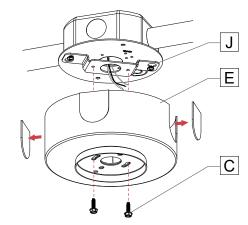

Intertek

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

# LUMENWERX


## **7** MAKE ELECTRICAL CONNECTIONS.

Make electrical connections between the fixture cable **[K]** and the wires **[I]** from the driver using wire nuts (by others).

# Т K

# Driver in Junction Box

Place the housing assembly [B] over the canopy assembly [E] and secure with the provided set screws [A].

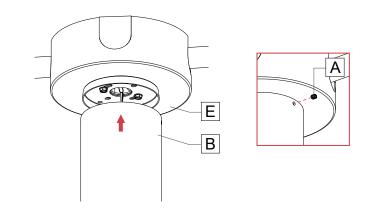




www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

## WIRING DIAGRAMS (1 Circuit)

For electrical connections, follow the wiring diagrams according to specified drivers in product configuration.

#### **INTEGRAL DRIVER - STATIC WHITE, SOLA**

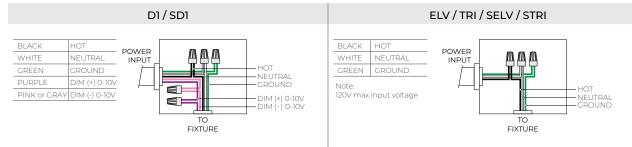


BLACK

WHITE


GREEN

Note:


#### **REMOTE DRIVER - STATIC WHITE, SOLA**

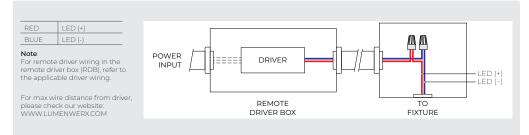

#### RD1 / RELD1 / RELD0 / RSD1

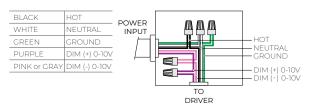



RLDE1

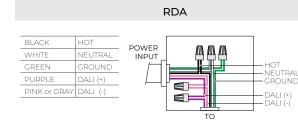

DRIVER

#### RLTEA2W / RELV / RTRI / RSELV / RSTRI

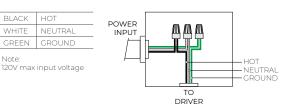

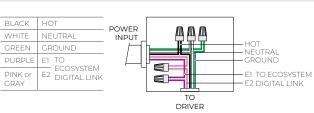





www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC. Lumenwerx ULC. reserves the right to change or modify product specifications without notification.


13/13

#### **REMOTE DRIVER - DUO**

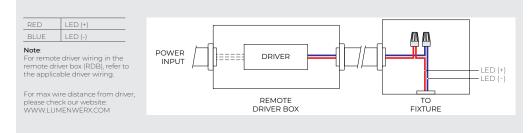

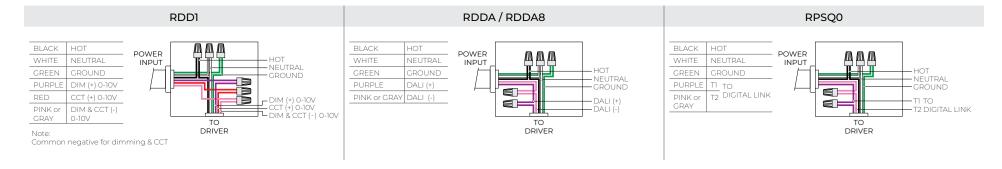

RDMX

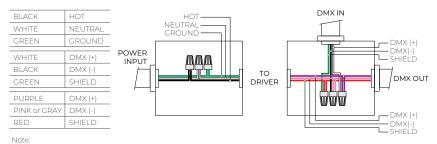

- Must follow DMX wiring architecture

Intertek

- Use low capacitance wiring for DMX network



## LUMENWERX