

INSTALLATION INSTRUCTIONS



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Disconnect power before installation or servicing.



Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.



Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.



Wire dimming conductors as Class 1.



A luminaire with more than one power supply connection means shall be connected to only one branch circuit.



For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.




For luminaires installed in wet locations, properly seal all mounting and electrical points.




Warranty claims will not be accepted if incorrect driver or light element is used.

INSTALLATION INSTRUCTIONS

SURFACE MOUNTING

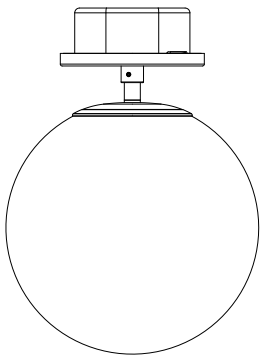


FLR - Flat round canopy

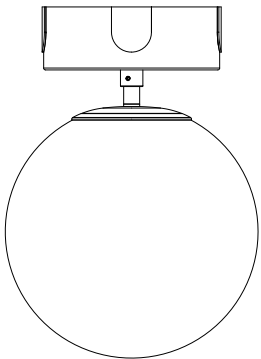

CDR - Conduit feed round canopy

WALL MOUNTING

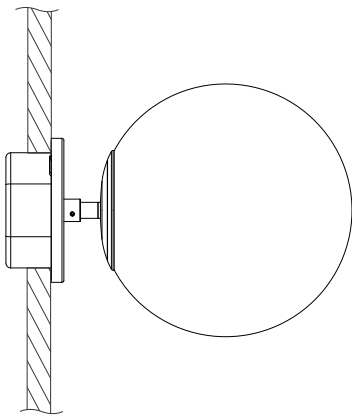

FLR - Flat round canopy



For electrical connections,
please refer to the [wiring
diagram guide](#).



For remote driver box
installation instructions,
please refer to the [remote
driver installation sheet](#).



Shown with Surface. Also
applicable to Wall.




INDEX

Flat canopy	P3
Conduit feed canopy	P5

FLAT CANOPY


1 DETACH GLOBE BASE.

Loosen the two set screws [A] and detach the base of the Globe.

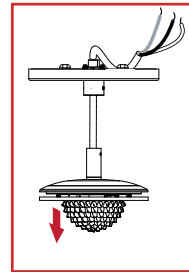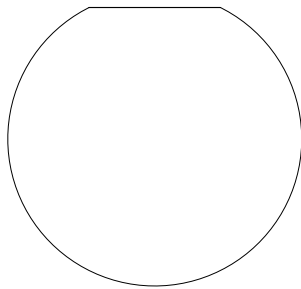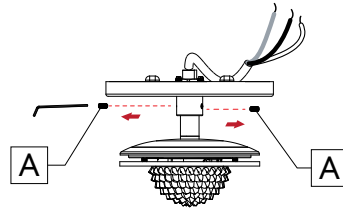

2 DETACH CANOPY.

Detach canopy [B] from the mounting plate [C].

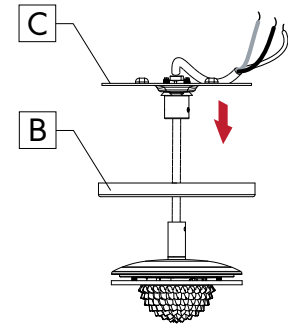


3 MAKE ELECTRICAL CONNECTIONS.


Make electrical connections between the fixture cable [D] and the main power or the remote driver feed [E] using wire nuts (by others).

Note: Number of wires may vary.

CANOPY DRIVER

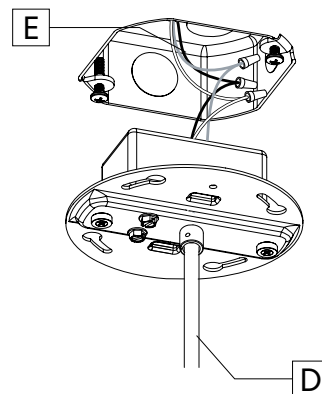



REMOTE DRIVER

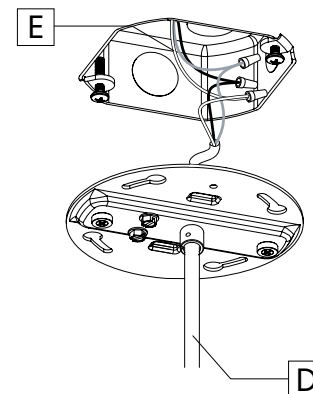

FLAT CANOPY



4 FIX MOUNTING PLATE.

Mount and turn the mounting plate [C] on the junction box. Tighten screws [F] to secure the mounting plate.

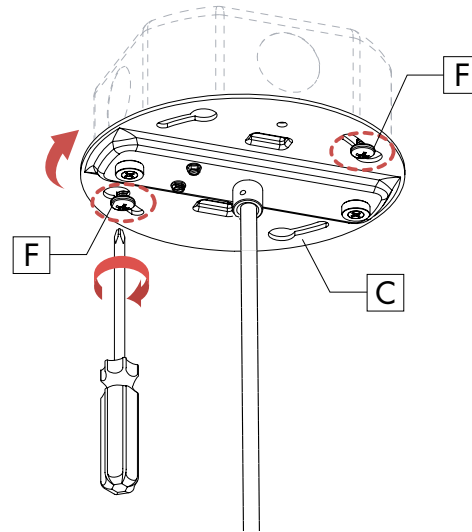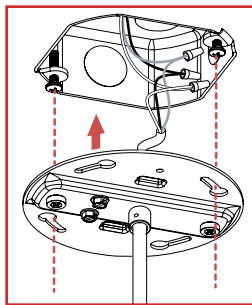


6 REINSTALL GLOBE BASE.

Reinstall the base of the Globe and tighten the two set screws [A].

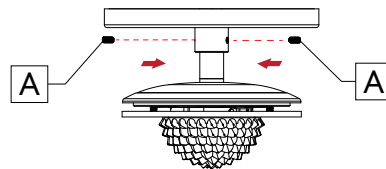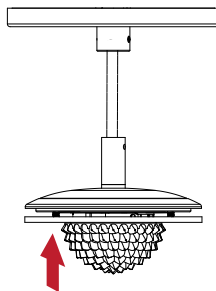


5 MOUNT CANOPY.

Mount the canopy [B] on the mounting plate with the magnets [G].

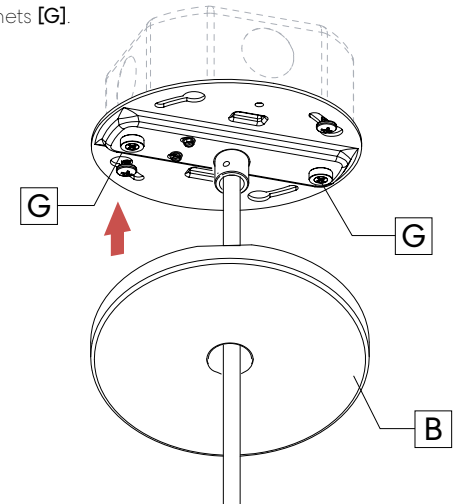

7 INSTALL GLOBE.




Install the Globe by screwing it on the base.

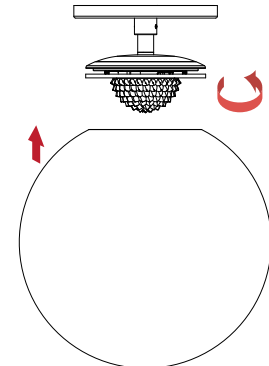

CONDUIT FEED CANOPY


1 DETACH GLOBE BASE.

Loosen the two set screws [A] and detach the base of the Globe.

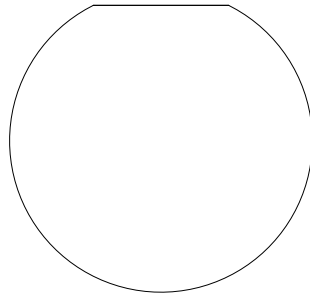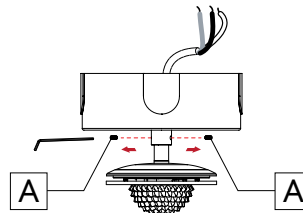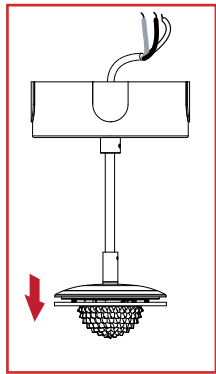

2 DETACH CANOPY.

Detach canopy [B] from the mounting plate [C].

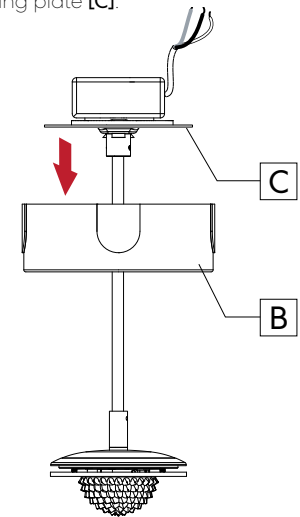


3 MAKE ELECTRICAL CONNECTIONS.


Make electrical connections between the fixture cable [D] and the main power or the remote driver feed [E] using wire nuts (by others).

Note: Number of wires may vary.

CANOPY DRIVER

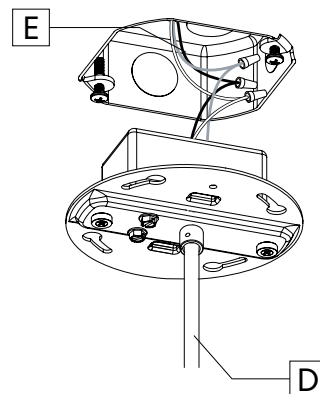



REMOTE DRIVER

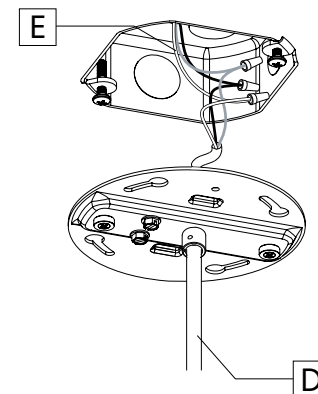

CONDUIT FEED CANOPY



4 FIX MOUNTING PLATE.

Mount and turn the mounting plate **[C]** on the junction box. Tighten screws **[F]** to secure the mounting plate.

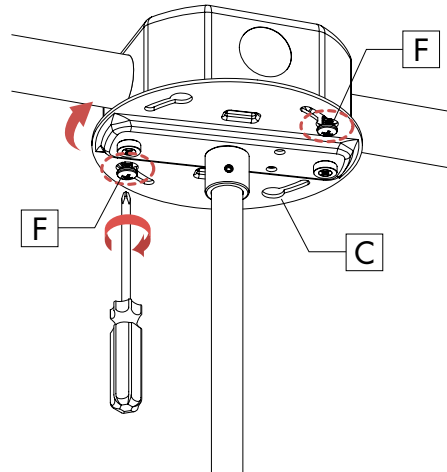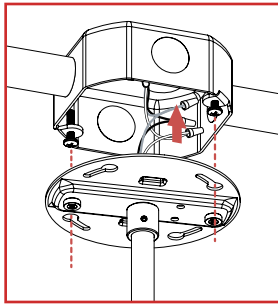

6 REINSTALL GLOBE BASE.


Reinstall the base of the Globe and tighten the two set screws **[A]**.

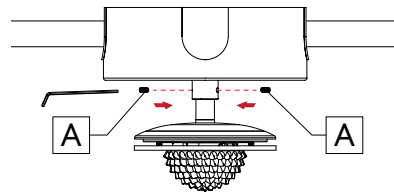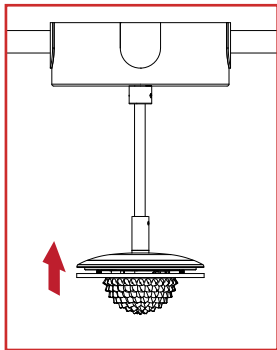

5 MOUNT CANOPY.

Remove the necessary knock outs to allow the conduits to connect to the junction box.

Mount the canopy **[B]** on the mounting plate with the magnets **[G]**.

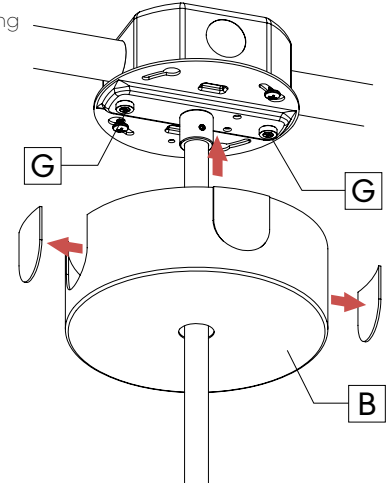

7 INSTALL GLOBE.

Install the Globe by screwing it on the base.

