


IMPORTANT: Installation instructions are shown with Mikro and applies to Mikro and Mikro Plus

NOTE: Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

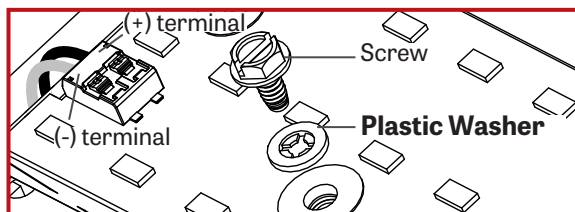


1

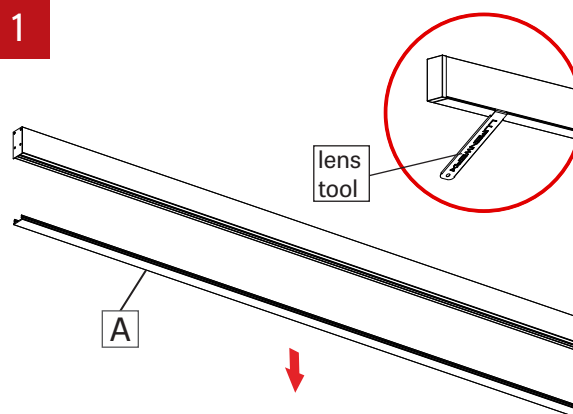


Make sure the power to the fixture is turned off. Remove the lens (A).

2

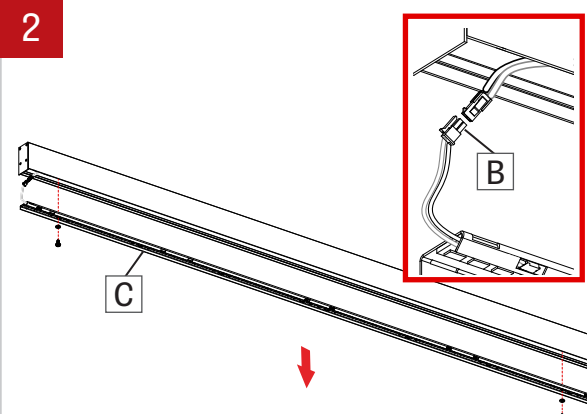


Disconnect the moxex quick connector (B) from the LED board. Unscrew and remove the cartridge (C) from the fixture. Put it in a safe place.

3

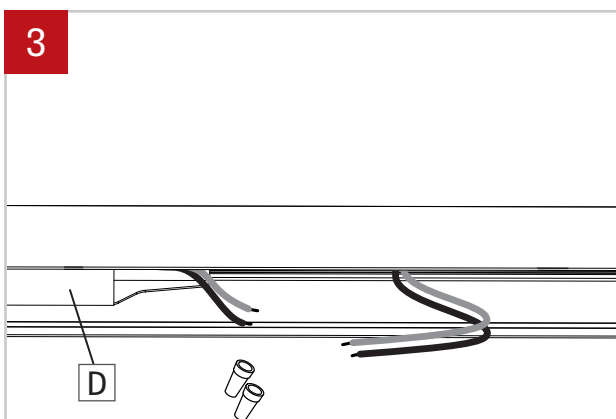


Disconnect wires from the driver (D).

4

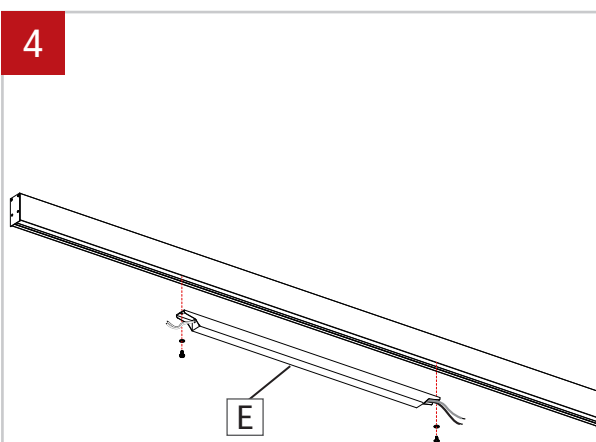

Unscrew the driver (E) from the fixture. Replace the driver and make electrical connections.

5

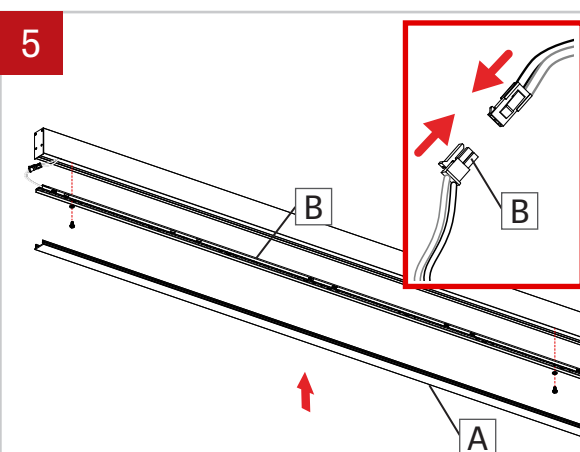

Reconnect the moxex quick connector (B) to the LED board. Screw back the cartridge (C) by **using screw with plastic washer. Do not apply too much pressure.** Put the lens (A) back in place.