


IMPORTANT: Installation instructions are shown with Mikro and applies to Mikro and Mikro Plus

NOTE: Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

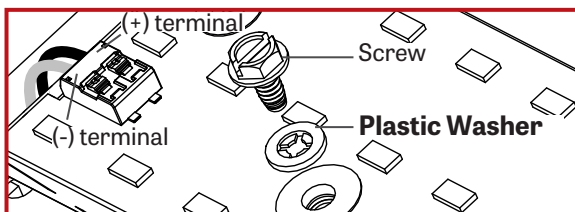


1

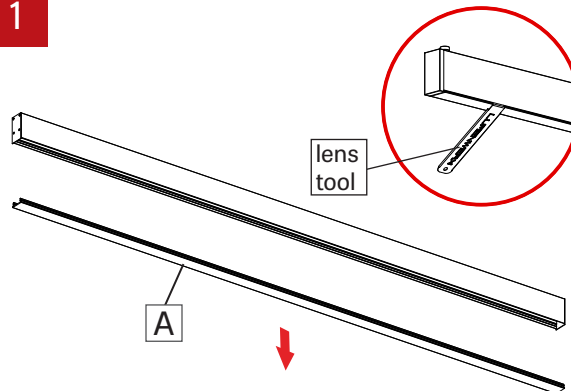


Make sure the power to the fixture is turned off. Remove the lens (A) with the included lens tool.

2

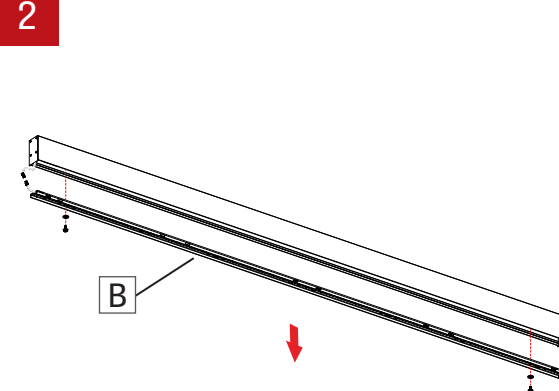


Unscrew the cartridge (B) and remove it from the fixture.

3

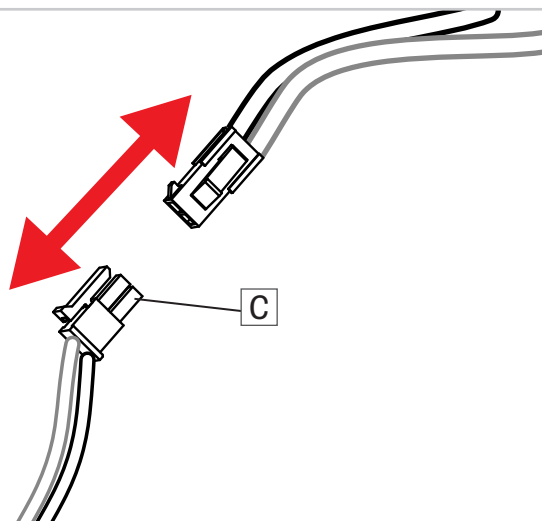


Disconnect the moxex quick connector (C) of the LED board.

4

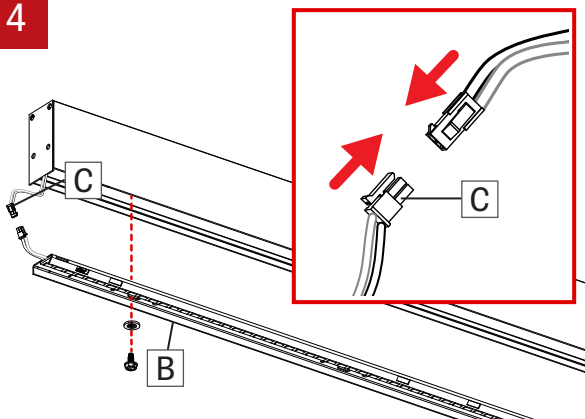

Replace the cartridge (B) and reconnect the LED board by connecting the moxex quick connector (C). Make sure that the wire is not hiding any LED chip. Screw the cartridge (B) back in place by **using screw with plastic washer. Do not apply too much pressure.**

5

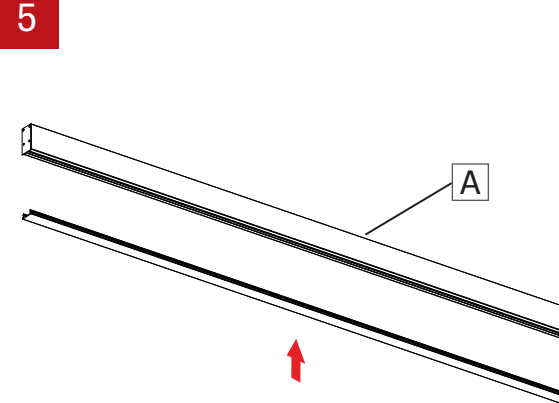

Reinstall the lens (A).