

DRYWALL REMOTE DRIVER - INSTALLATION




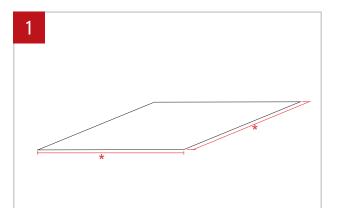



If the drywall ceiling is already installed, make a hole in the ceiling large enough to be able to fix the driver box between two studs (*).

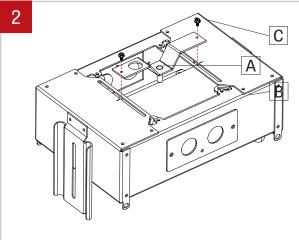


Unscrew and remove the cable coupler bracket (A) from the driver remote box (B). Keep the screws (C) and the bracket (A) in a safe place.

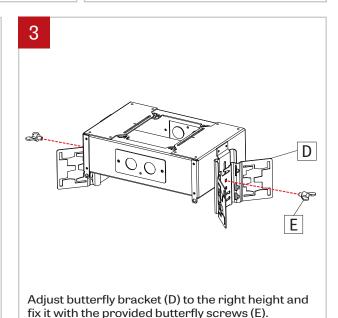

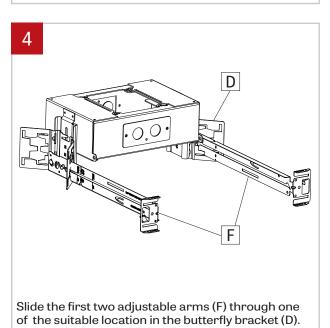

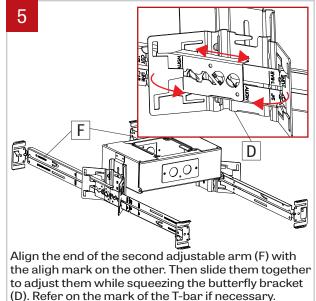


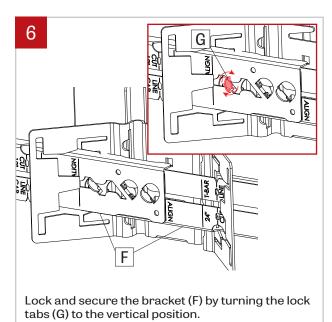




DRYWALL REMOTE DRIVER - INSTALLATION



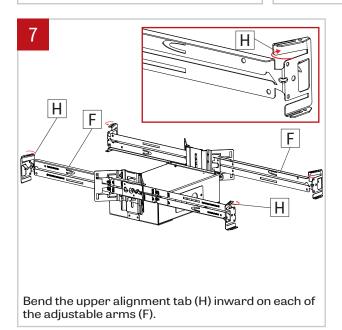


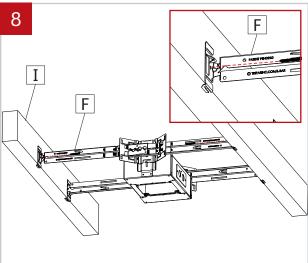



Raise the fixture between the stud and secure


the adjustable arms (F) to the studs (I) by using

screws.

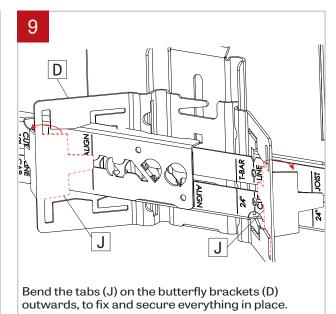

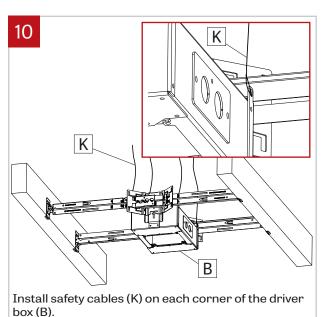

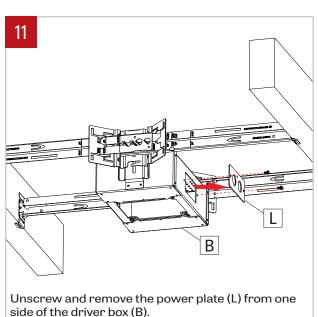


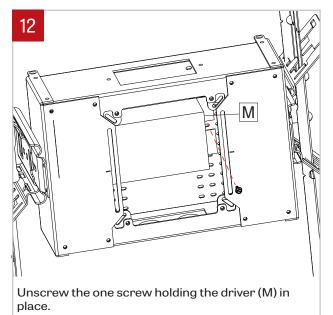




DRYWALL REMOTE DRIVER - INSTALLATION




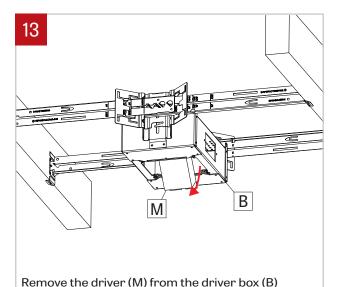



by pushing it to the bottom of the box and then

rotating it.

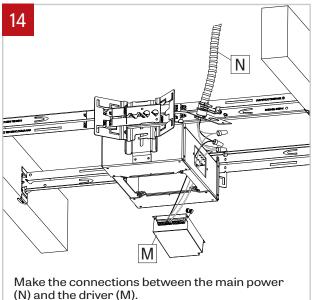


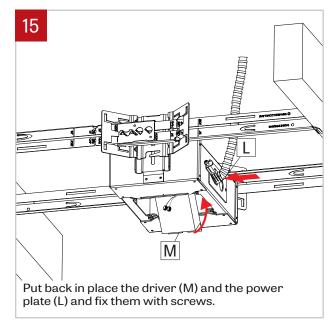

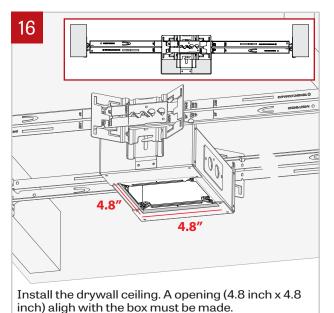

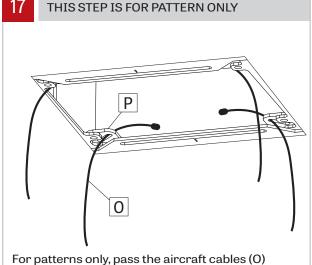

through the cable brackets (P), which are attach to

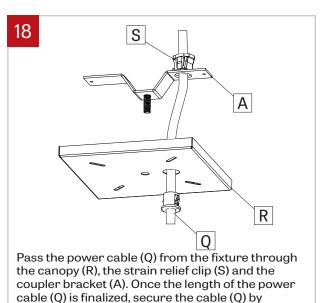


closing the strain relief clip (S).

the driver box.

DRYWALL REMOTE DRIVER - INSTALLATION



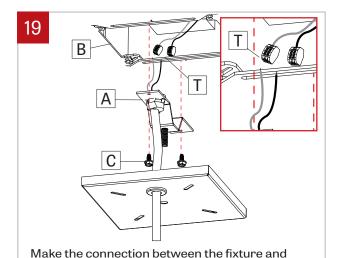

the driver with the quick connector (T). Then, fix the coupler bracket (A) to the driver box (B) with screws (C). Use the marks on the driver box to

aligh the bracket in the middle.

