POP RECESSED ROUND

DRIVER REPLACEMENT - INSTRUCTIONS





NOTE: Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

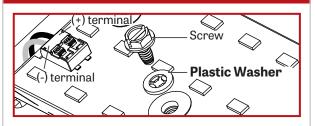


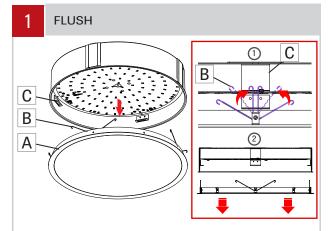



Make sure that the power to the fixture is turn off. Pull down the lens (A) to get acces to the springs (B). Squeeze the springs (B) to release them from the brackets (C). Once all the springs (B) have been released, slowly lower lens (A).

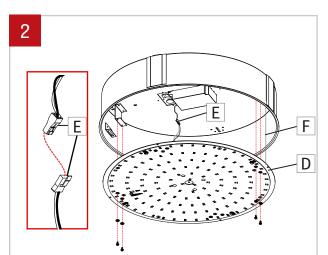

Unscrew the LED plate holder (D) to get acess to the driver (E). Disconnect quick connectors (E) between driver and LED board. Remove security cable (F).

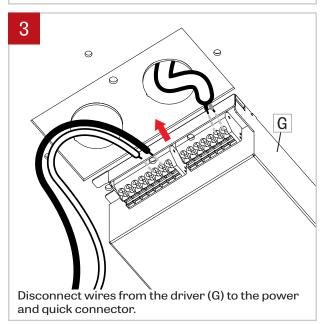

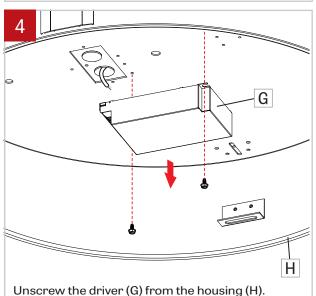

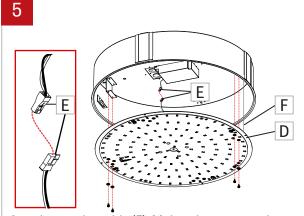


Attach security cable (F). Make wires connection between the driver and the LED board by connecting quick connectors (E). Screw the LED plate holder (D) back in place by usings screws with plastic washers. Do not apply too much pressure.

Replace the driver and reconnect the wires.

POP RECESSED ROUND

DRIVER REPLACEMENT - INSTRUCTIONS



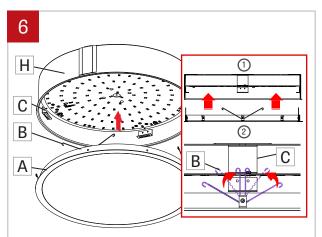

Squeeze, align and insert the springs (B) into the brackets (C) that are further inside the housing. Once all the springs (B) are properly installed, slowly push the lens (A) in the housing (H) as far as the brackets (C) allow.

