

POP RECESSED ROUND

Grid Ceiling



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Wire dimming conductors as Class 1.




For electrical connections, please refer to the [wiring diagram guide](#).



1 PREPARE CEILING OPENING.


Caution: Make sure the electrical power is turned off.

Remove ceiling tiles **[A]** where the fixture will be installed and adjacent tiles for easy access during installation.

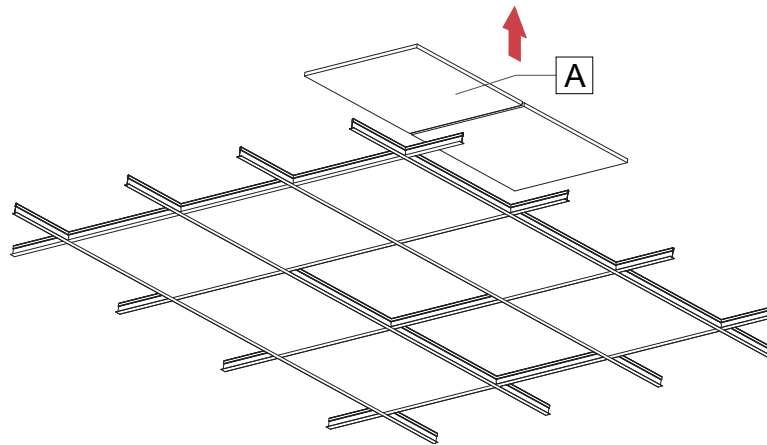


2 REMOVE LENS.

Pull the lens **[B]** to get access to the springs **[C]**, and squeeze the springs **[C]** to release them from the brackets **[D]**. Once all the springs **[C]** have been released, slowly remove the lens **[B]**.

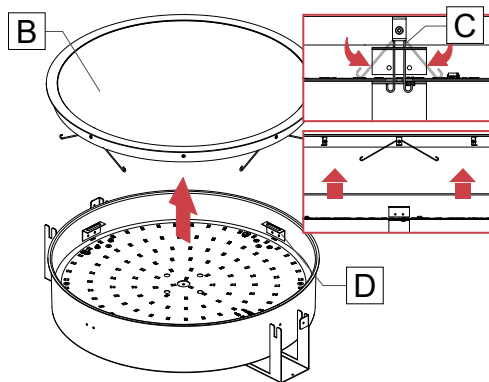

3 REMOVE LED PLATE.

Unscrew the LED plate holder **[E]** to get access to the driver **[F]**. Disconnect quick connectors **[G]** between the driver and the LED board. Remove the safety cable **[H]**.

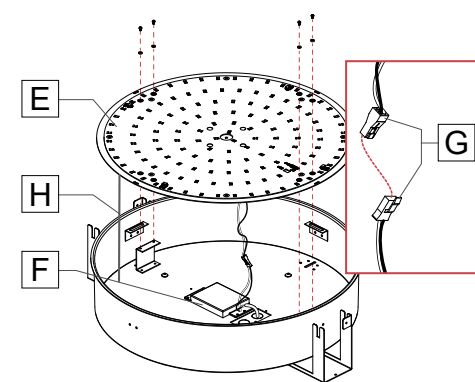


POP RECESSED ROUND

Grid Ceiling



4 REMOVE MOUNTING BRACKET.

Unscrew and remove the mounting bracket [I] on the housing [J]. Place them in a safe place.

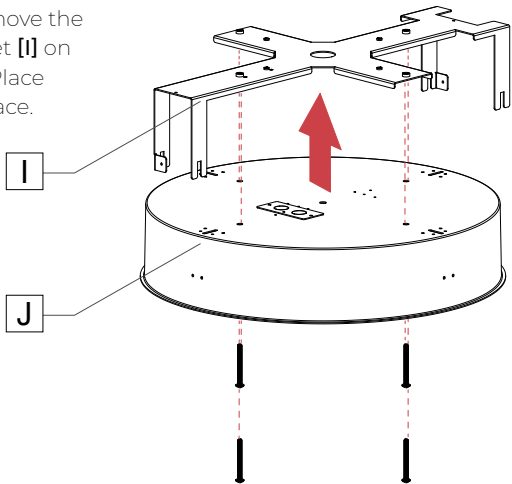


5 FIX HOUSING TO CEILING TILE.

Cut the ceiling tile [A] according to the dimension [*] specified in the table below.

Place the cut ceiling tile [A] on the housing [J].

Size	Cut-out dimensions
12"	Ø 11 3/8"
24"	Ø 21 1/4"
36"	Ø 35 3/8"

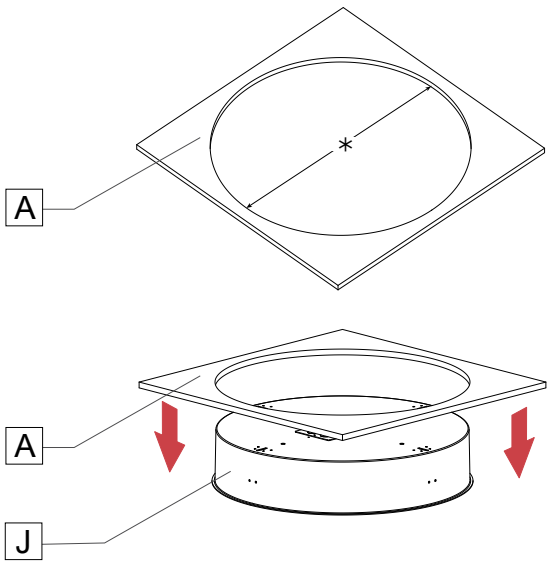

6 MAKE ELECTRICAL CONNECTIONS.




Remove the power plate [K] from the fixture.

Pass the armored main power cable [L] (by others) through the cable connector [M] (by others), and install onto the power plate [K].

Warning: A luminaire with more than one power supply connection means shall be connected to only one branch circuit.

Make electrical connections between the armored main power cable [L] and fixture cable [N] using wire nuts [O] (by others).

Push connected wires inside the fixture. Reinstall the power plate [K] onto the fixture and tighten the two screws.

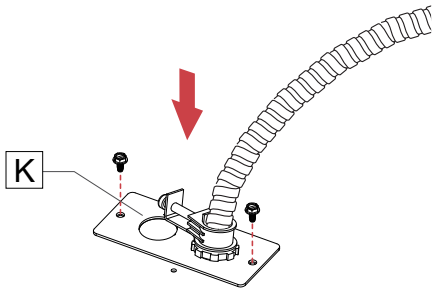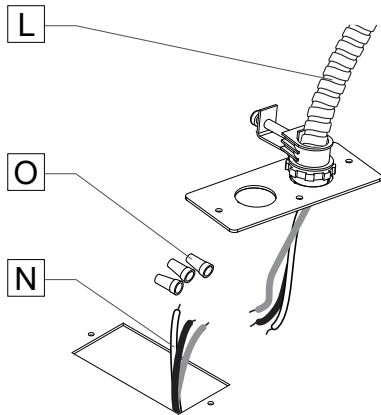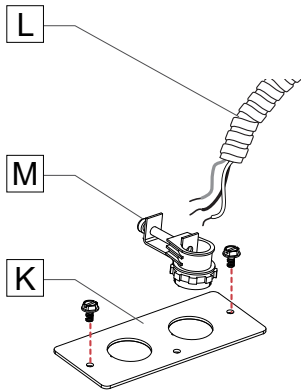


POP RECESSED ROUND

Grid Ceiling



7 FIX BRACKET TO HOUSING.


Fasten the mounting bracket [I] to the housing [J] by using screws.

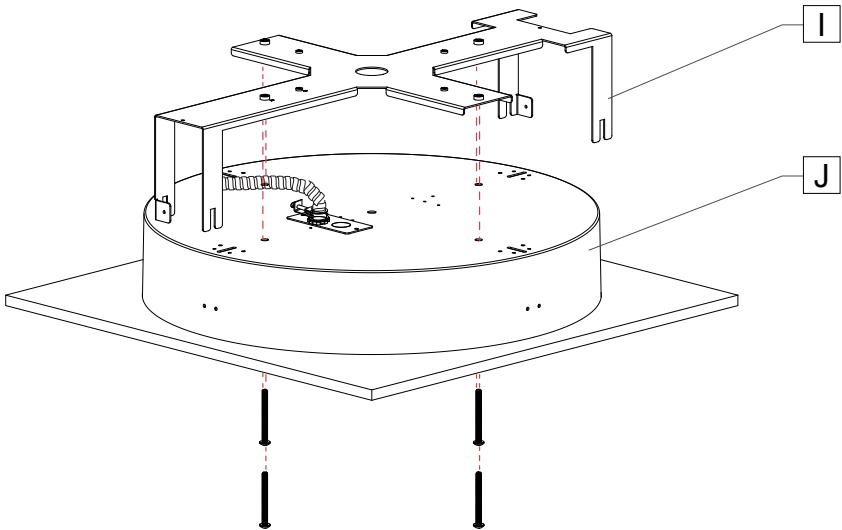


8 INSTALL FIXTURE ON T-BAR GRID.

Insert the fixture [J] attached to the ceiling tile [A] above the ceiling grid. Then lower onto the T-bar grid [P].

INSERT FIXTURE

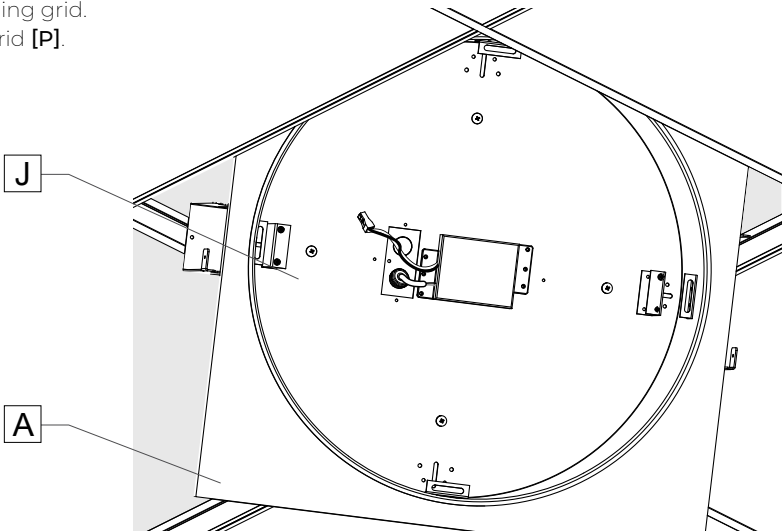

LOWER FIXTURE

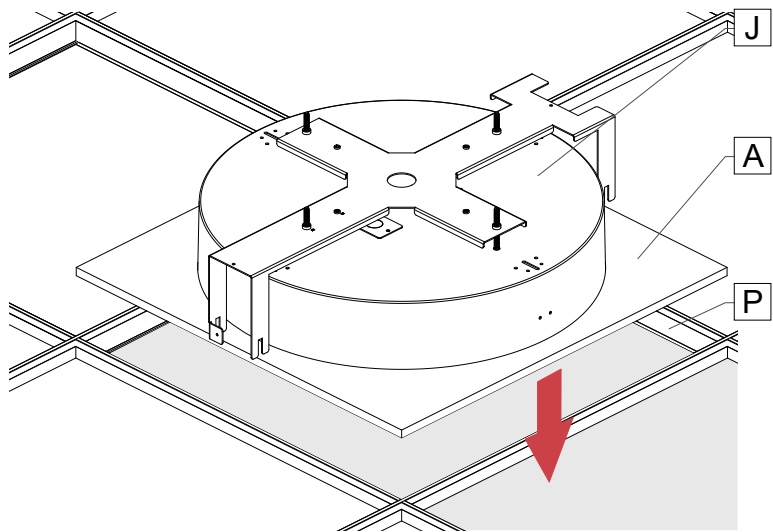


POP RECESSED ROUND Grid Ceiling




9 SECURE FIXTURE.

Attach safety wires [Q] to the mounting bracket [I].

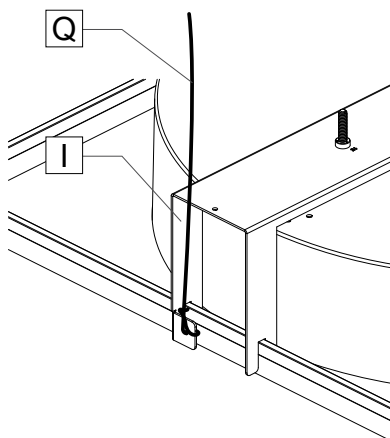


10 REINSTALL ADJACENT TILES.

Reinstall the adjacent tiles on the T-bar grid [P].

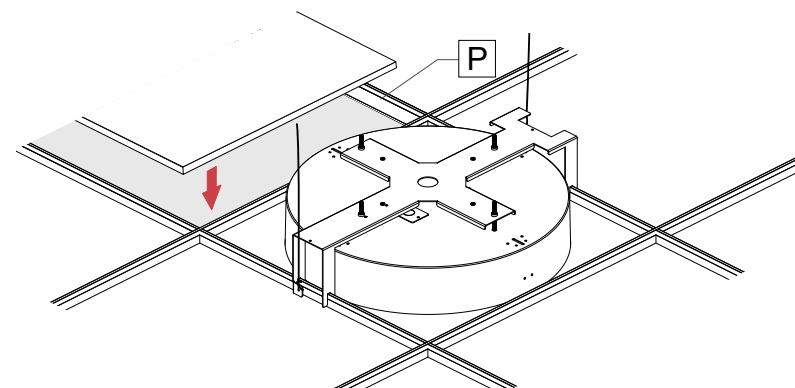

11 REINSTALL LED PLATE.

Attach the safety cable [H]. Make the wire connections between the driver [F] and the LED board [E] by using quick connectors [G]. Screw the LED board [E] back in place by using screws and plastic washers. Do not apply too much pressure.

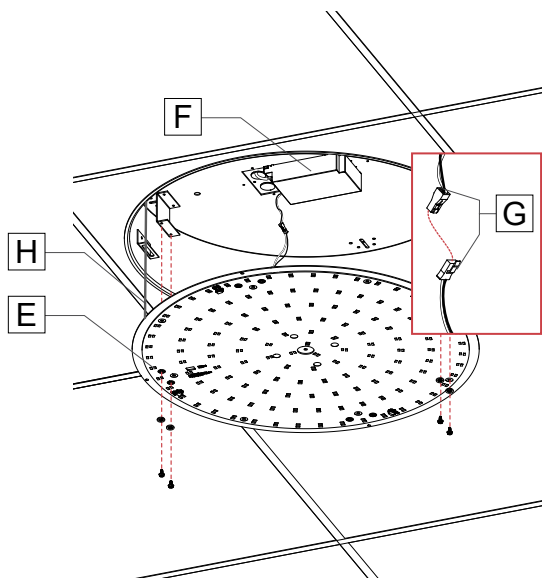

Warning: Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure.

12 REINSTALL LENS.

Squeeze the springs [C], align and insert into the brackets [D] that are inside the housing. Once all the springs [C] are properly installed, slowly push the lens [B] in the housing [J] as far as the brackets [D] allow.

