

# SHELL

## Square - Recessed - Remote Driver

LUMENWERX



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Wire dimming conductors as Class 1.




Do not handle fixture by the wires.



Shown with Shell 8" x 8". Applicable for all sizes.


### 1 INSTALL REMOTE DRIVER BOX.

Please refer to the remote driver box installation sheet for more information.

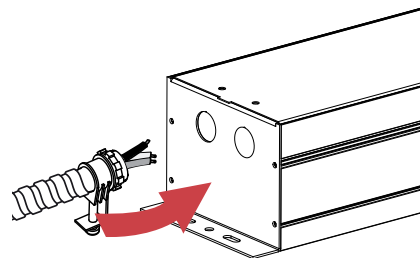


### 2 PREPARE THE CEILING.

Prepare the area where the fixture is going to be installed. Cut the hole in the drywall ceiling.

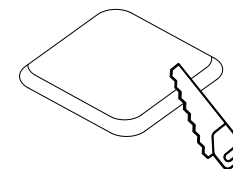



#### CUTOUT SIZES

FIXTURE SIZES	L (Length)	R (Radius)
SHELL 8" x 8"	8-5/32" x 8-5/32"	0.75"
SHELL 12" x 12"	12-5/32" x 12-5/32"	1.0"
SHELL 16" x 16"	16-5/32" x 16-5/32"	1.275"

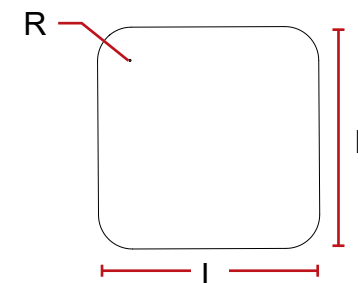


### 3 INSTALL THE FLANGE.

Insert the flange [A] in the hole and bend the brackets [B] over the ceiling. Secure bent brackets with screws [C] on ceiling.

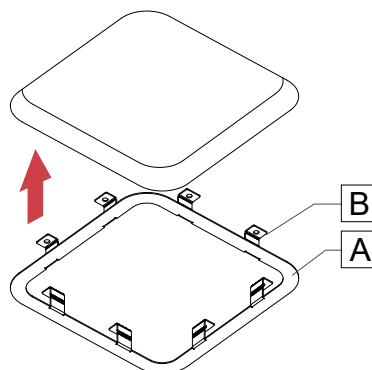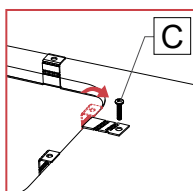

### 4 REMOVE THE J-BOX COVER.

Unscrew and remove the J-box cover [E] from the J-box [D].

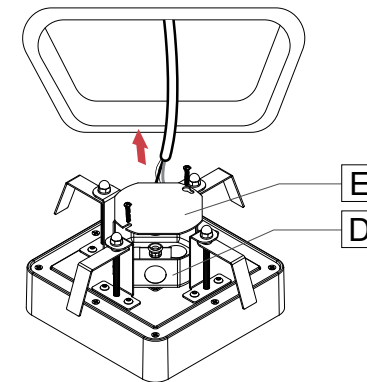


# SHELL

## Square - Recessed - Remote Driver

### 5 MAKE ELECTRICAL CONNECTION.

Make low voltage electrical connection between the fixture wires [F] and the remote driver wires [C] inside the J-box [D] using wire nuts [H].


**Warning:** Power must come from single branch circuit.

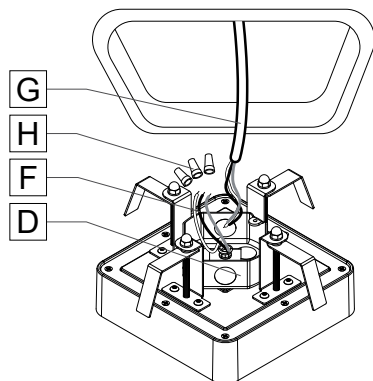

### 6 ROTATE THE BRACKETS.


Reinstall the cover [E] on the J-box [D]. Rotate the brackets [I] until they are placed inside of the fixture area.

**NOTE:** Do not let the fixture hang by the wires.

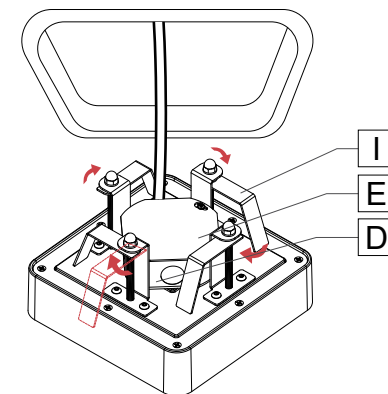

### 7 INSERT THE FIXTURE IN THE CEILING CUT-OUT.


Insert the fixture [J] through the flange [A] in the ceiling cut-out.

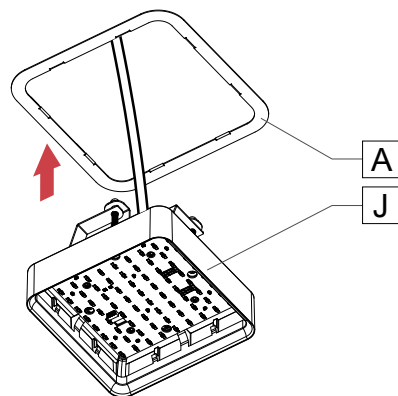

### 8 INSTALL THE FIXTURE.

Locate the 4 rotating screws [K] inside the fixture [J]. Turn the screws until they come into a locking position.

**NOTE:** For Adjustable fixtures, align the fixture flush or below the ceiling at the desired height.

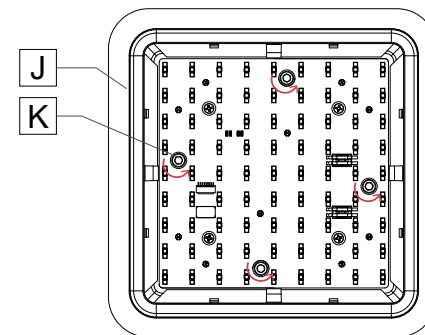




# SHELL

## Square - Recessed - Remote Driver

LUMENWERX

### 9 INSTALL THE LENS.

Align the snapping features [K] between the fixture [F] and the lens [L]. Put the lens [L] in place.

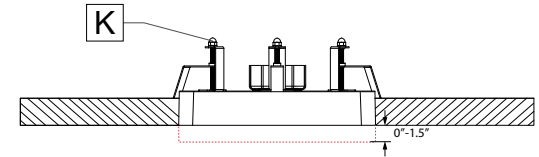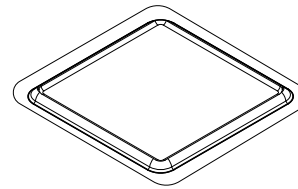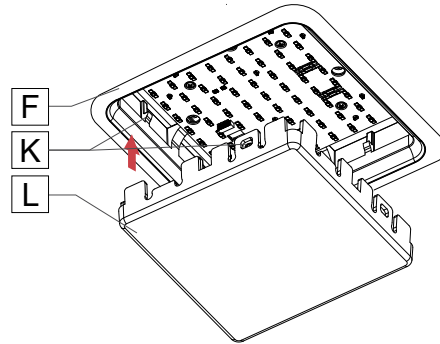

**FINAL LENS POSITION:** For Adjustable fixtures, the fixture can be flush or drop up to 1.5".