

# UBIK CUBE

## Recessed - Driver Replacement

LUMENWERX



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.




Wire dimming conductors as Class 1.

Do not install the fixture with insulation directly on the fixture.


### 1 UNINSTALL THE FIXTURE.

Pull the fixture **[A]** down and disconnect the quick connector **[B]** between the driver and the fixture.

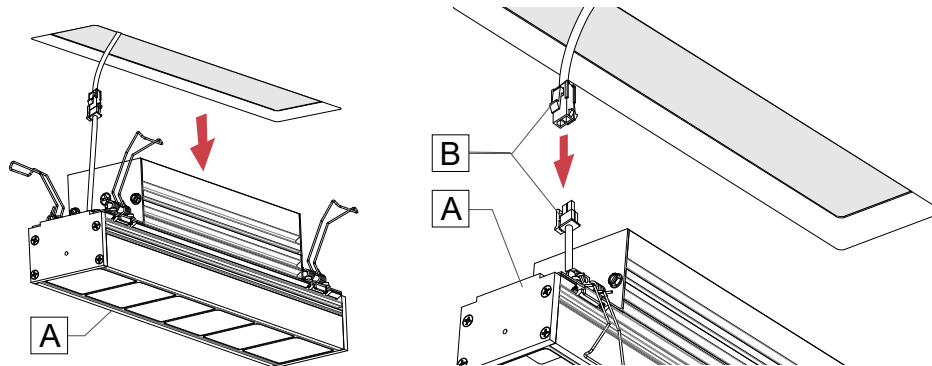


### 2 PULL OUT THE DRIVER.

Detach the driver box **[C]** (with the driver **[D]** attached to it) from the plate **[E]** using a screwdriver **[F]** and pull it out through the fixture cut-out.

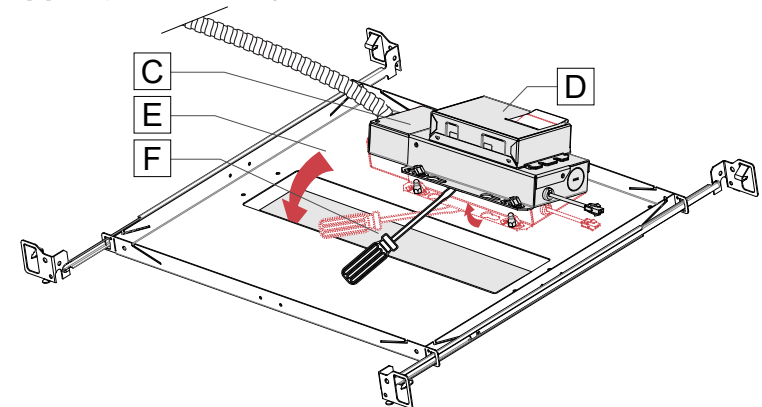


### 3 REPLACE THE DRIVER.


Unscrew the driver holder **[G]** and remove it from the driver box **[C]**.

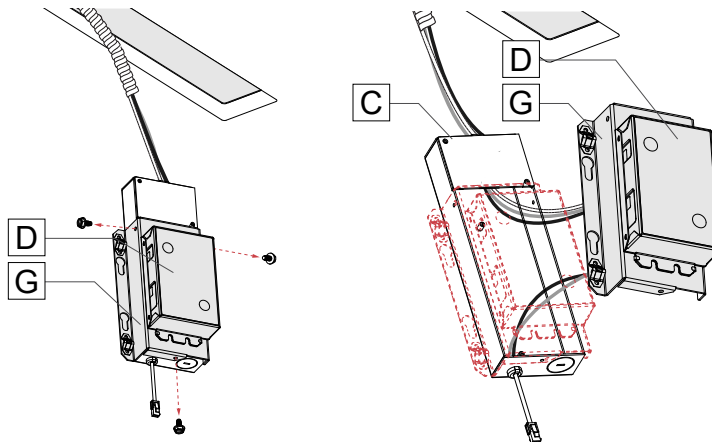

Remove the driver **[D]** from the driver holder **[G]** by unscrewing the nuts **[H]** from the rods **[I]**.

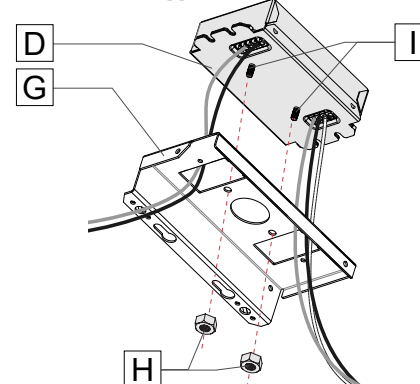

Disconnect the driver by pulling the wires. Replace the old driver **[D]** with a new driver **[J]** and make the electrical connection. Number of wires may vary.

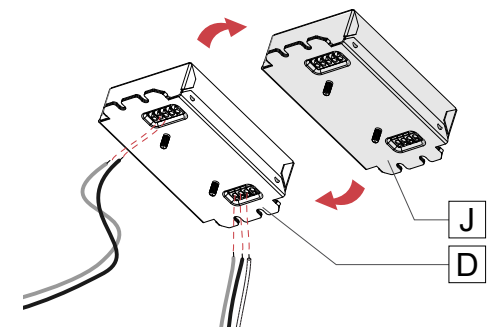


# UBIK CUBE

## Recessed - Driver Replacement


LUMENWERX

### 4 ASSEMBLE THE NEW DRIVER.

Assemble the new driver [D] on the driver holder [G] by screwing the nuts [H] on the rods [I]. Place them back on the driver box [C].

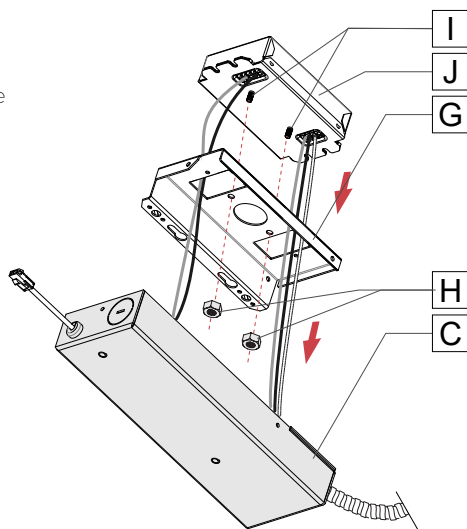


Screw the driver holder [G] back on the driver box [C].

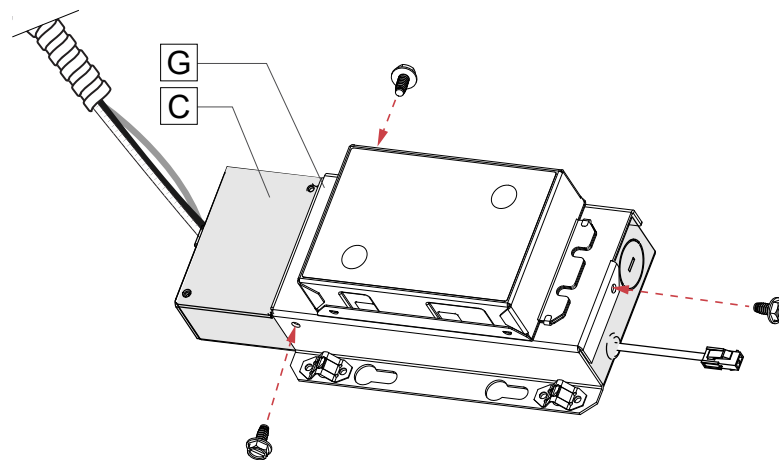

### 5 INSTALL NEW DRIVER.

Insert the driver box [C] (with the new driver [D] attached to it) into the fixture cut-out.

Use the retaining clip [K] on the plate to secure the driver box [C]. The driver box [C] should sit properly on the pins [L].

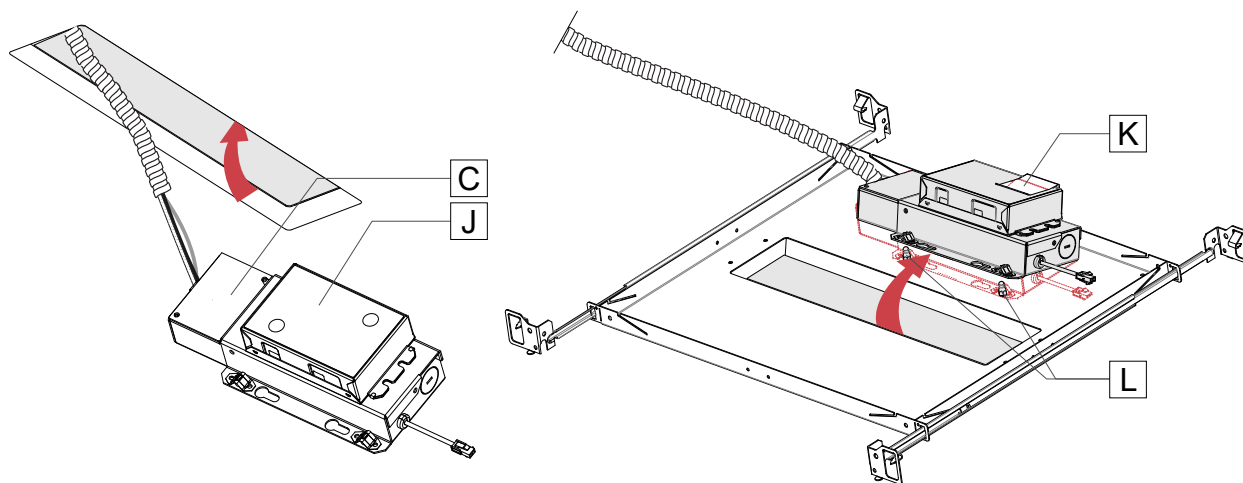

### 6 REINSTALL THE FIXTURE.

Make the connection between the driver quick connector [B1] and the fixture quick connector [B2]. Bend the springs [M] upward. Install the fixture [A] into the cut-out.

