

UBIK CUBE

Recessed - Remodel

LUMENWERX

! This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.


! Wire dimming conductors as Class 1.

1 PREPARE THE CEILING.

UBIK CUBE	DIMENSIONS	
	Cut-out	Clearance Height
UBICUB6	2 29/32" x 6 19/32"	6"
UBICUB12	2 29/32" x 12 19/32"	4"
UBICUB18	2 29/32" x 18 19/32"	4"



TRIM

Prepare the area where the fixture is going to be installed. Cut a hole in the drywall according to the dimensions shown in the table.

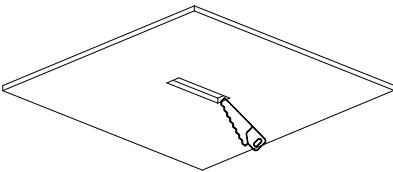

MUD FLANGE

Cut a hole in the drywall according to the dimensions (as shown in the table). Remove the paper layer [A] from the double sided tape. Place and stick the mud flange bracket [B] into the prepared area. Then plaster and sand over mud flange bracket [B] to create a smooth finish. Do not use screws. Staples are ok.

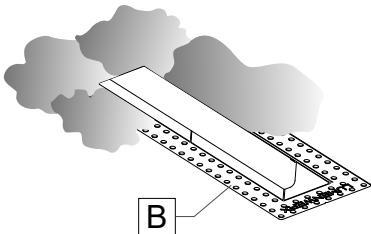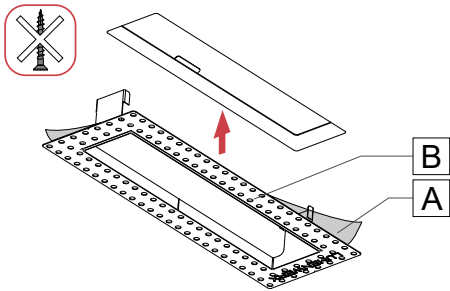

2 INSTALL THE DRIVER.





If using an INTEGRAL DRIVER:

Pull out the main power cable [C] through the ceiling cut-out. Unfasten the driver box cover screw slightly and pivot the cover [D] to open and access the wires.

Bring the main power cable [C] into the integral driver box [E] and make the electrical connection using wire nuts [F]. Number of wires may vary.

Close and fasten the cover [D]. Push the integral driver box [E] into the cut-out.

Secure the integral driver box [E] near the cut-out on a solid surface using screws [G].

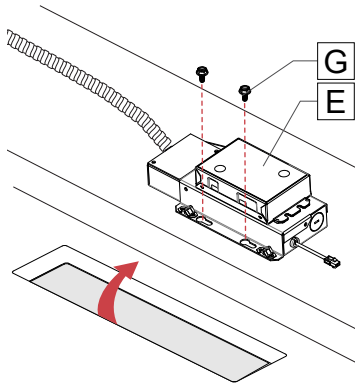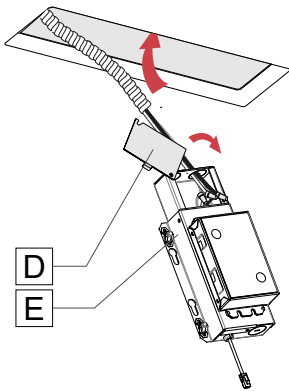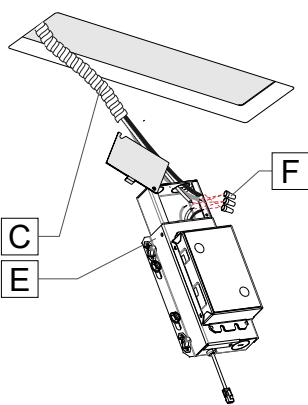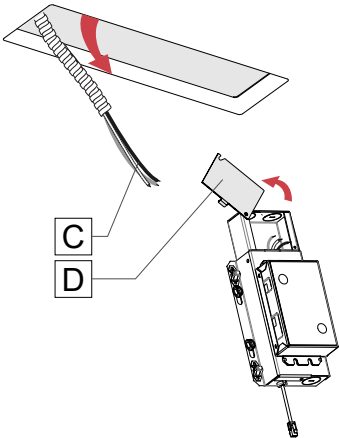

UBIK CUBE

Recessed - Remodel

LUMENWERX


If using a REMOTE DRIVER:

NOTE: Please refer to the remote driver installation sheet for more information.

Pull out the main power cable [C] through the cut opening of the fixture. Unfasten the screws slightly and pivot the cover [H] to open and access the wires.


Bring the main power [C] into the remote driver box [I]. Make the electrical connection between the remote driver box [I] and the main power cable [C] with the wire nuts [F]. Number of wires may vary.

Close and fasten the cover [H]. Push the remote driver box into the cut hole. Secure the remote driver [I] in a safe place.

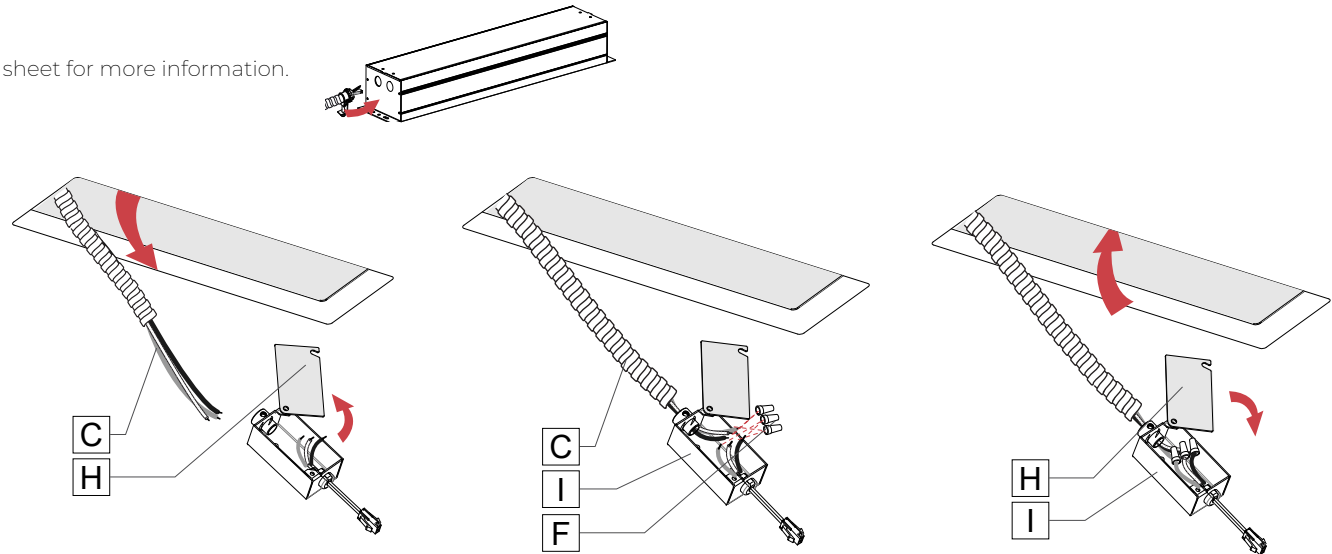

3 CONNECT THE FIXTURE TO DRIVER.

Make the connection between the driver quick connector [J] and the fixture quick connector [K].

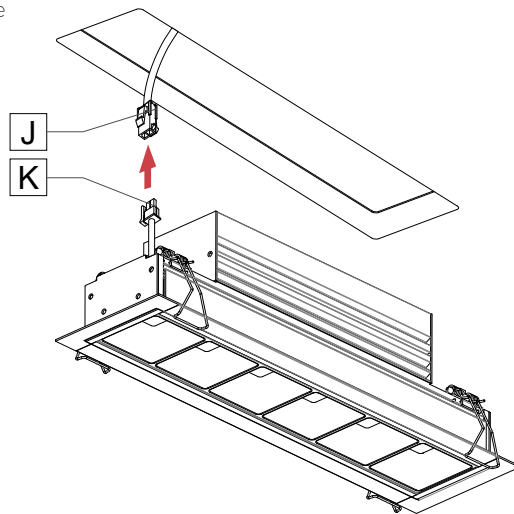

4 INSTALL THE FIXTURE.

Bend the springs [L] upward. Install the fixture [M] into the cut-out.

