

INSTALLATION INSTRUCTIONS



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Disconnect power before installation or servicing.



Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.



Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.



Wire dimming conductors as Class 1.



A luminaire with more than one power supply connection means shall be connected to only one branch circuit.



For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.



For luminaires installed in wet locations, properly seal all mounting and electrical points.



Warranty claims will not be accepted if incorrect driver or light element is used.


OBE

Pendant - Flat Canopy



INSTALLATION INSTRUCTIONS

POWER CORD

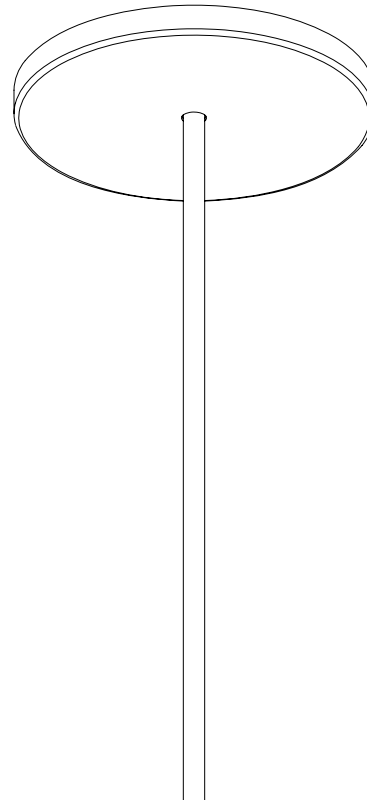


For electrical connections,
please refer to the [wiring
diagram guide](#).



For remote driver box
installation instructions,
please refer to the [remote
driver installation sheet](#).



POWER CORD

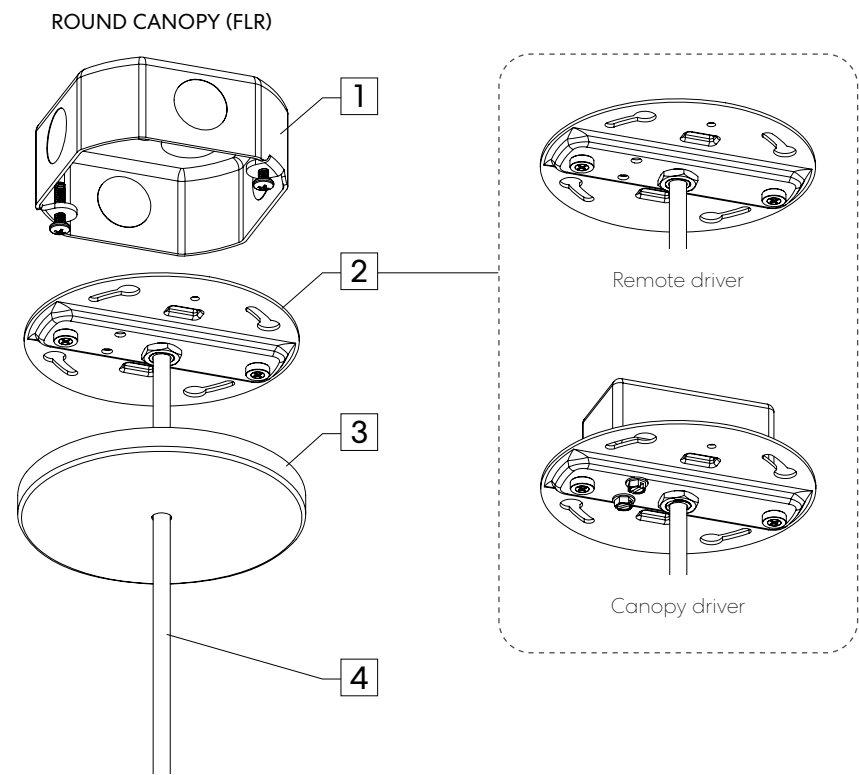

ITEMS LIST

1	Standard J-box (by others)
2	Mounting plate
3	Flat canopy
4	Power cord

TOOLS REQUIRED


- Flat head screwdriver
- Phillips screwdriver
- Power cord cutter (as required)
- Wire stripper (as required)

CANOPY SIZE

ROUND	Ø 4 1/2" Height 3/8"
-------	-------------------------


POWER CORD

1 DETACH CANOPY.

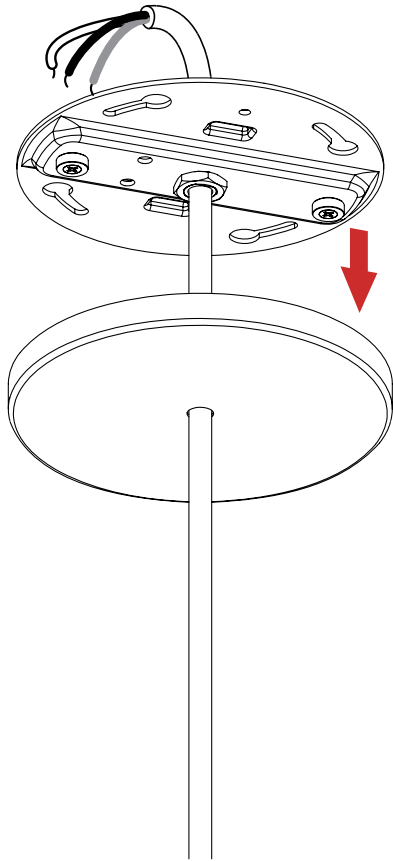

2 ADJUST POWER CORD LENGTH. **OPTIONAL**


2-1 Untighten the cable holder.

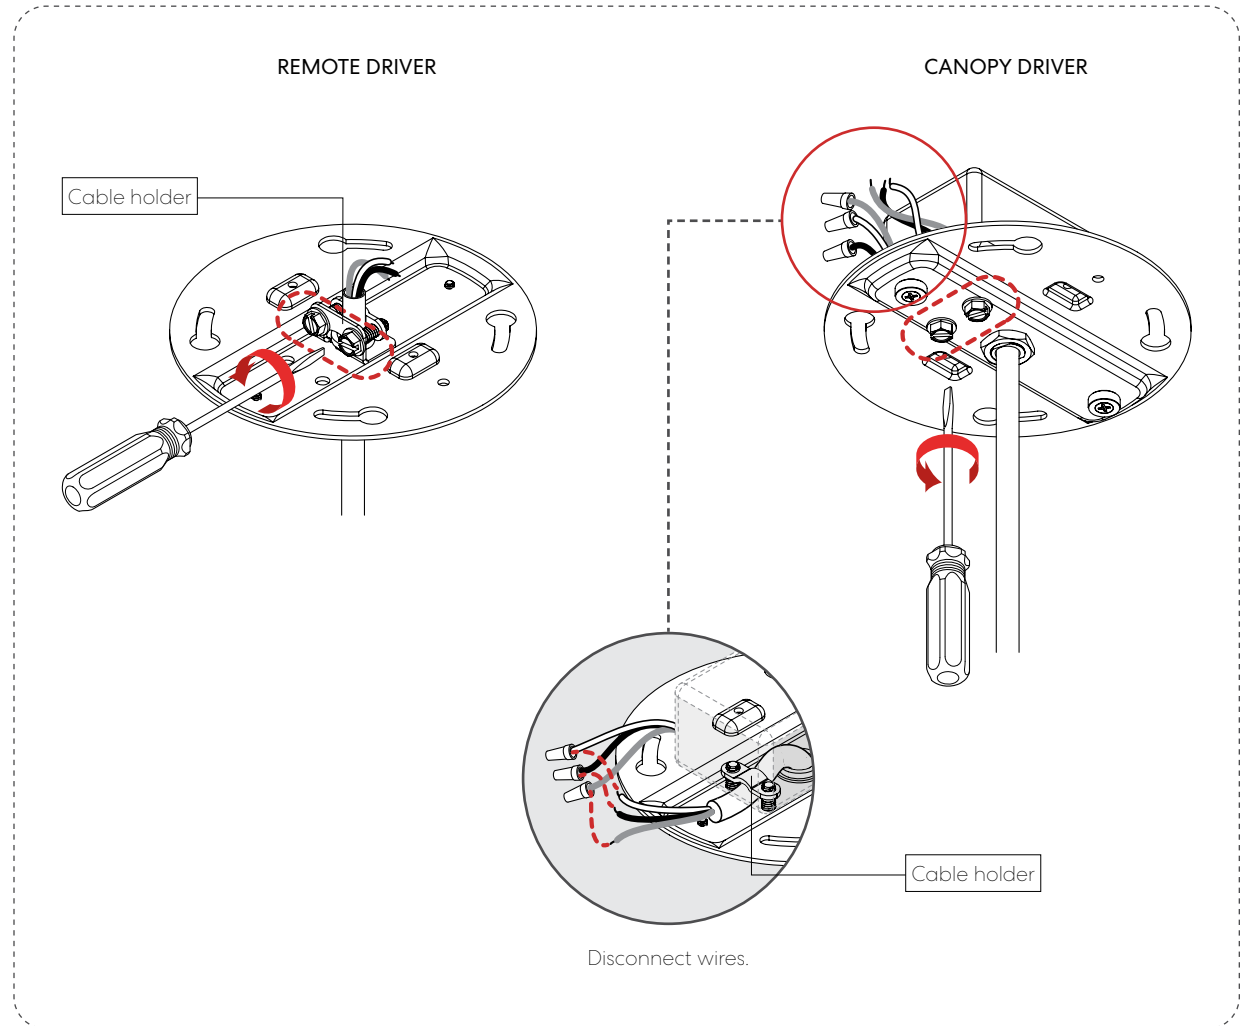


POWER CORD

2 ADJUST POWER CORD LENGTH. **OPTIONAL**


2-2 Adjust power cord length.

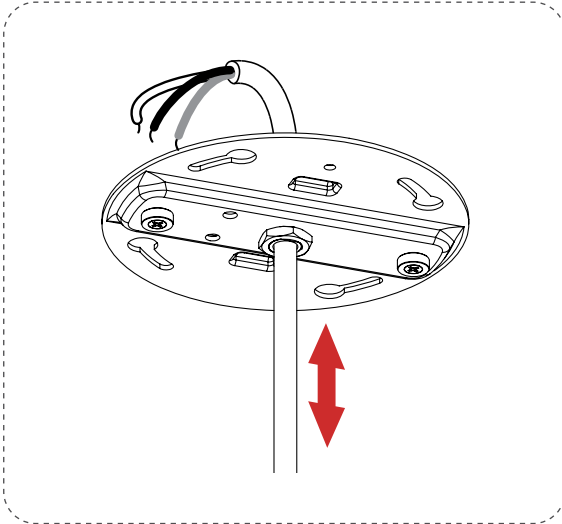

2-3 Cut the excess power cord.

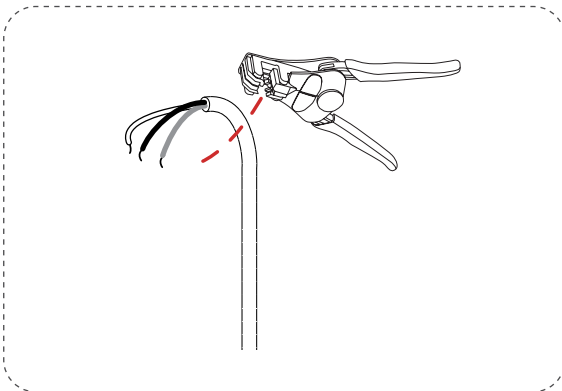


2-4 Tighten the cable holder.

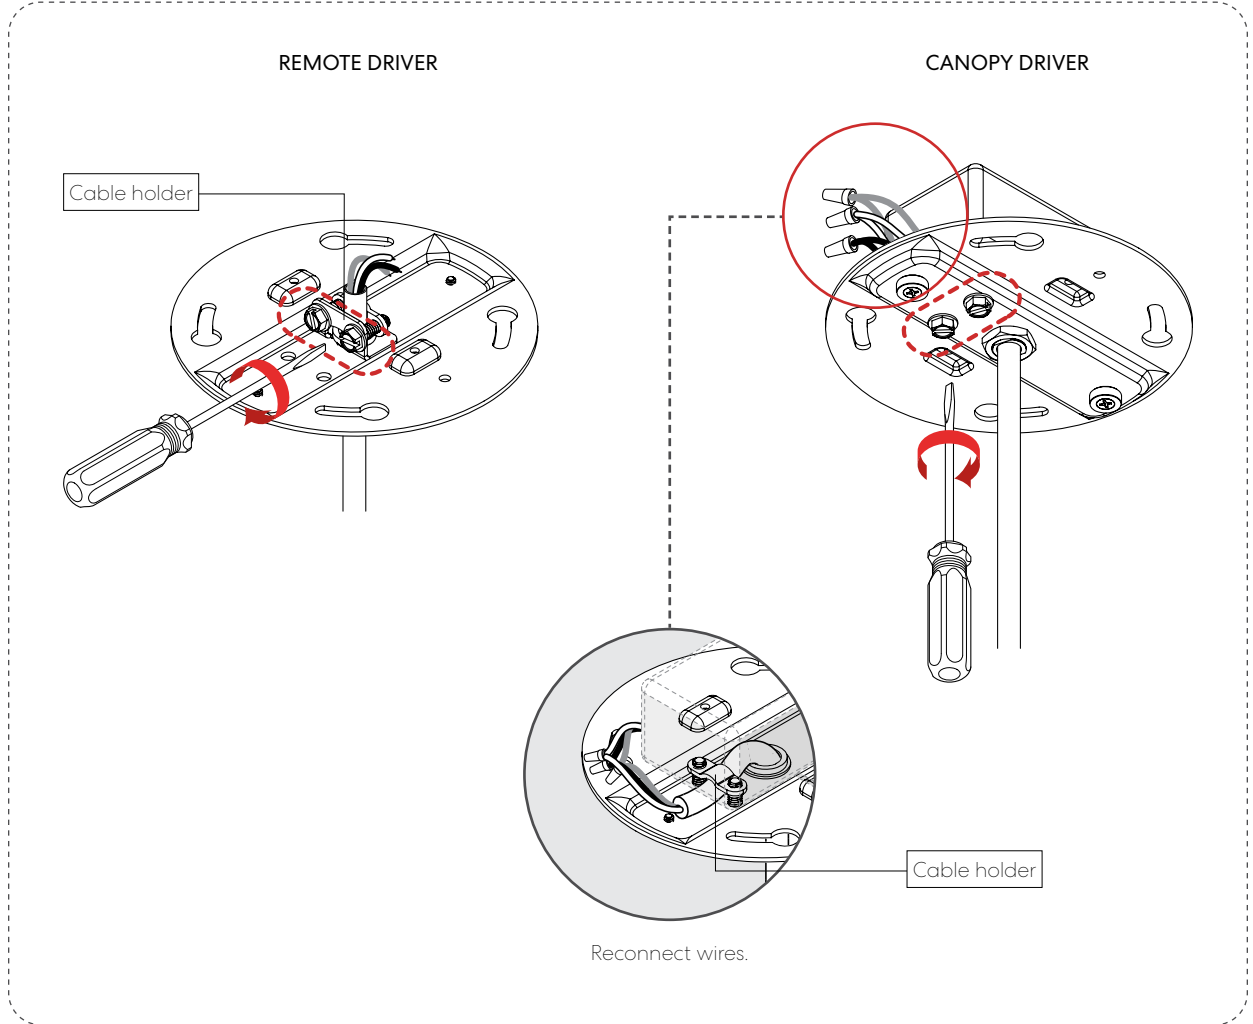


POWER CORD

3 MAKE ELECTRICAL CONNECTIONS.

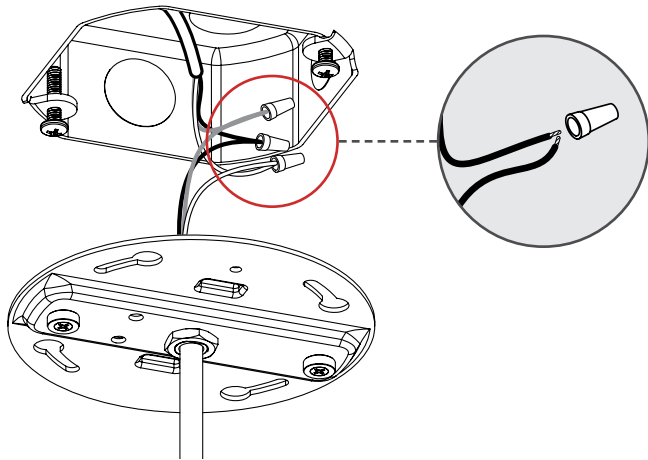

Note: Number of wires may vary.

5 MOUNT CANOPY.

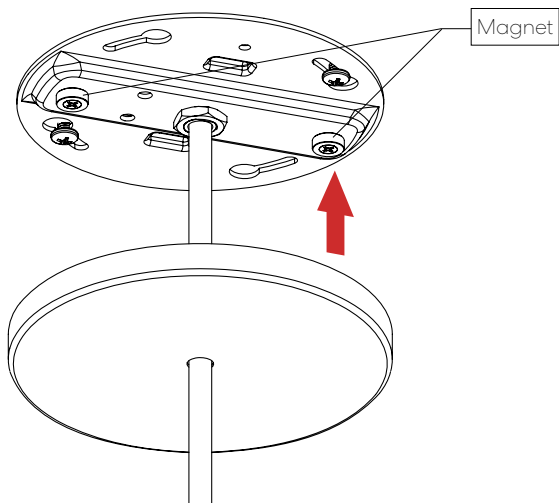

4 FIX MOUNTING PLATE.

