



1 SINGLE FIXTURE

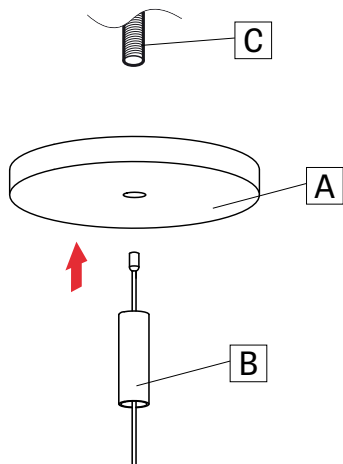

Secure canopy (A) with cable coupler (B) on crimp stud (1/4"-20) (C) (by other).


2

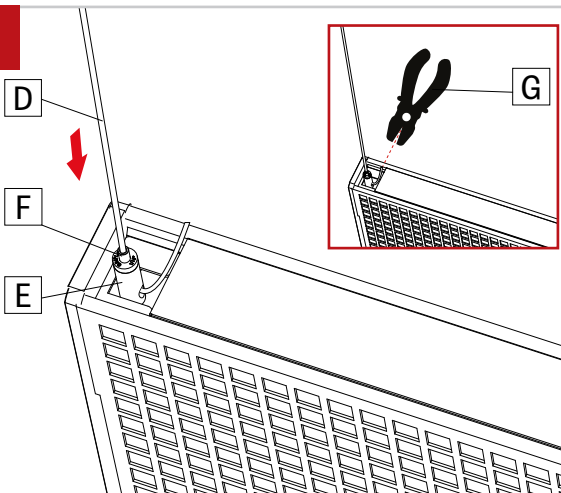

Insert the aircraft cable (D) into the griplock (E). Adjust the cable (D) length by pushing the feeder tube (F) and **cut the excess cable** with an aircraft cable cutter (G).


3

CONTINUUNOUS SYSTEM

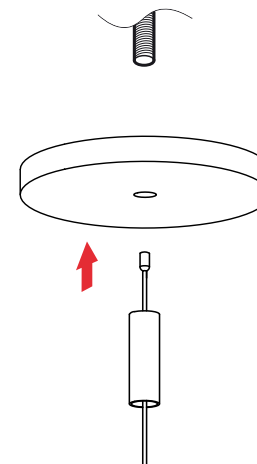


For a continuous system, repeat step 1.

4

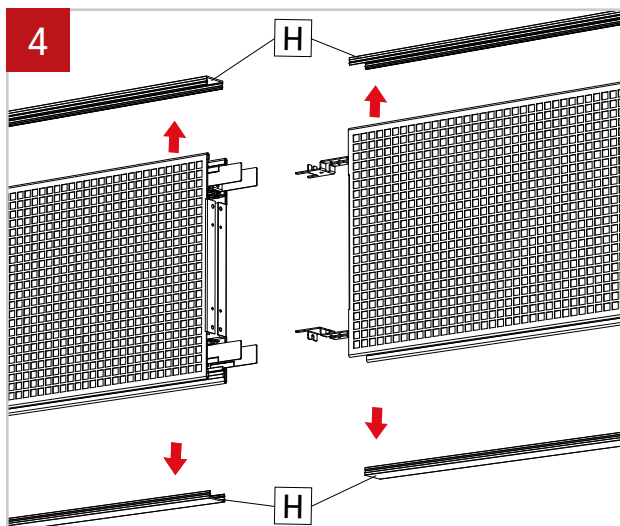


Remove the covers (H) on both sides of the fixtures with the included lens tool.

5

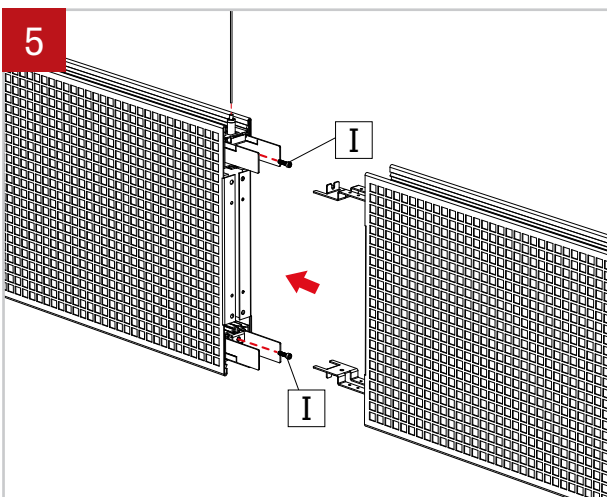

Install the aircraft cables on the first fixture. Then install it on the second fixture (as shown in step 2). Remove the screw (I) on the joiner and put it in a safe place.

6

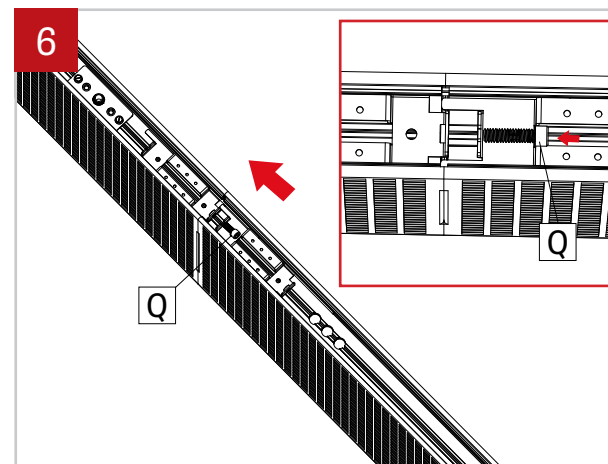

Join fixtures using align pins as guide. Put back in place the provided screw (Q) (using 3/16" Ball-End Screwdriver provided). Tight the screw (Q) to pull the extrusions together. Repeat steps 5 and 6 for all others fixtures in the run.

