

CANYON

DRIVER REPLACEMENT - INSTALLATION INSTRUCTIONS




NOTE: Wire dimming conductors as Class 1

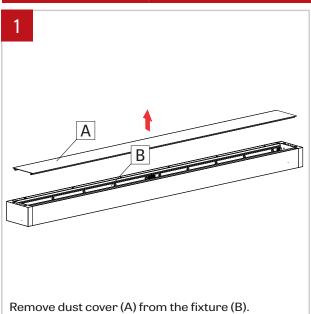


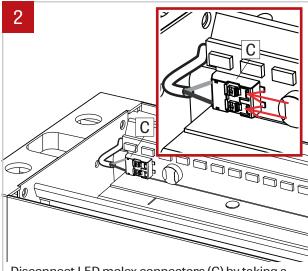



Disconnect LED molex connectors (C) by taking a pointed object and pressing on the two tabs on the top.

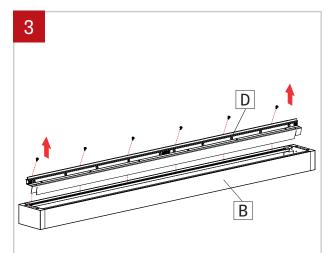

Unscrew the side reflector (D) and remove it from the fixture (B). Place the side reflector (D) in a safe place.

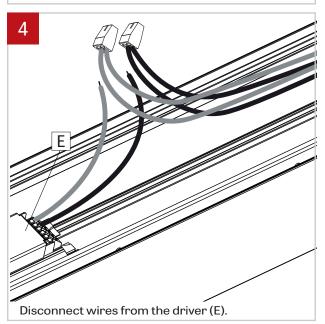

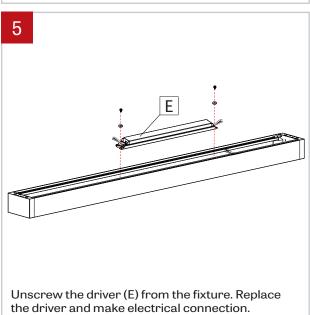

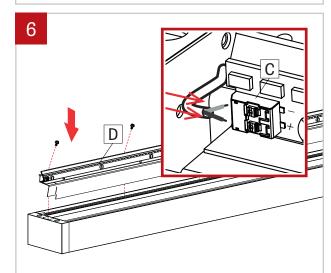

Reconnect LED molex connectors (C) to the side reflector (D). Reinstall the side reflector (D).

CANYON

DRIVER REPLACEMENT - INSTALLATION INSTRUCTIONS



