


CANYON FLUORESCENT

BALLAST REPLACEMENT - INSTALLATION


NOTE: Wire dimming conductors as Class 1

1

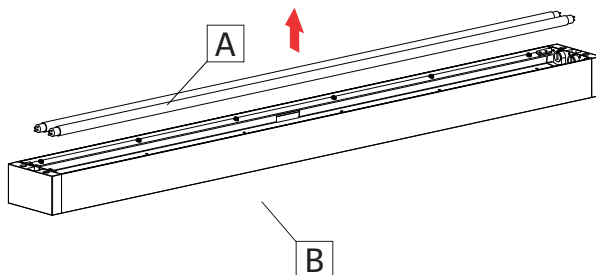


Remove lamps (A) from the fixture (B).

2

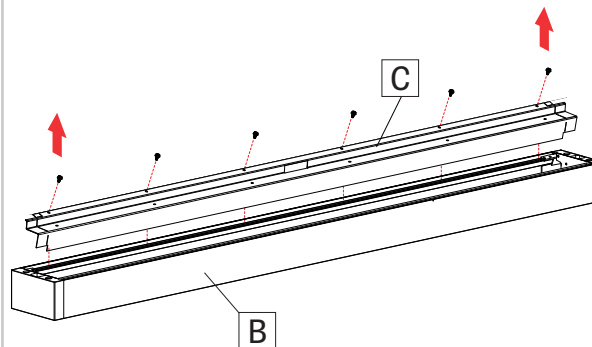


Unscrew the side reflector (C) and remove it from the fixture (B). Place the side reflector (C) in a safe place.

3

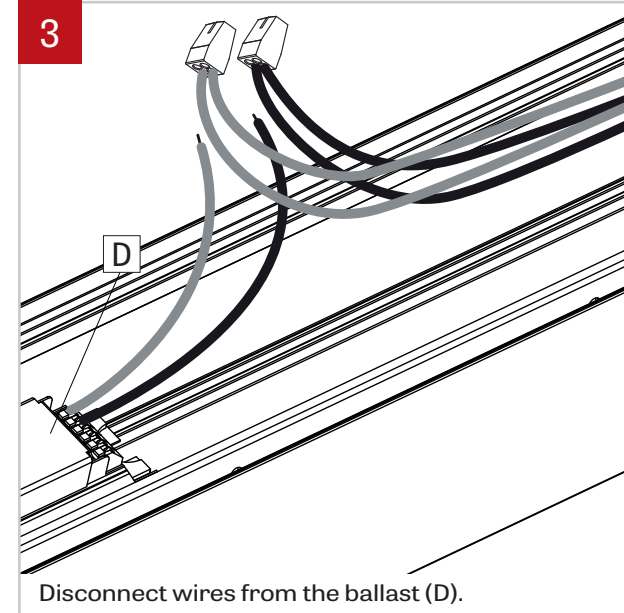


Disconnect wires from the ballast (D).

4

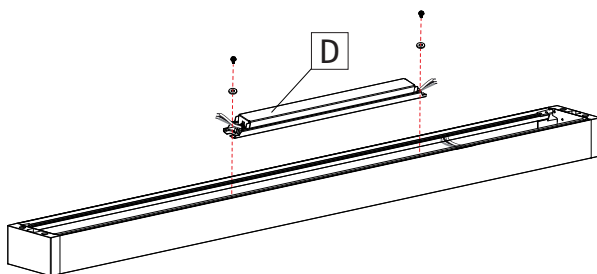


Unscrew the ballast (D) from the fixture. Replace the ballast and make electrical connection.

5

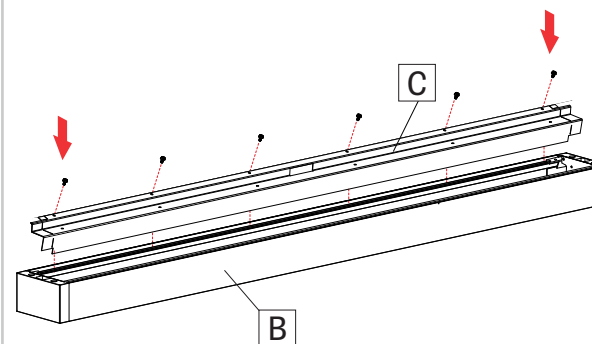

Unscrew the side reflector (C) and remove it from the fixture (B). Place the side reflector (C) in a safe place.

6

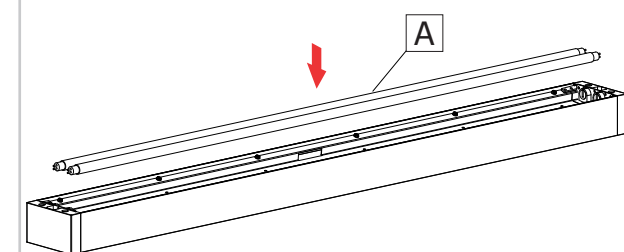

Reinstall the lamps (A) back in place.