

CANYON FLUORESCENT

PENDANT STEM- INSTALLATION INSTRUCTIONS




NOTE: Wire dimming conductors as Class 1



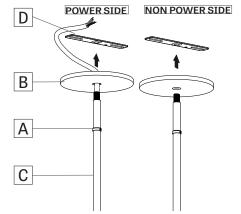


Make sure that the power to the fixture is turned off. Slide the slip ring (A) and the canopy (B) onto the stem (C) and leave some space. Screw the junction box crossbar (D) onto the stem (C).

2 FOR EMERGENCY CIRCUIT

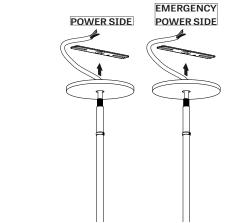



In the case where an <u>emergency circuit</u> is required, the wires to the emergency circuit will be passed through a second stem.

FOR FIXTURE IN GRID CEILING

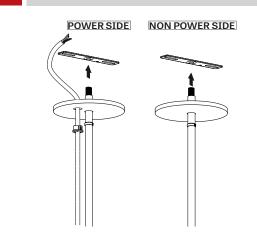


In the case where the luminaire is installed on a **grid ceiling**, the power cable will pass outside of the stem.

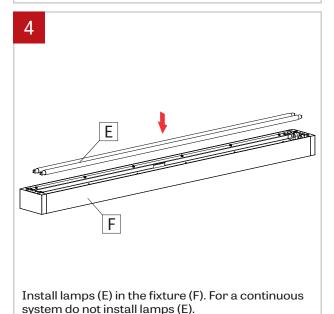

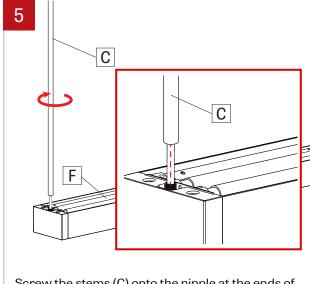

Screw the stems (C) onto the nipple at the ends of the fixture (F).

6 POWER SIDE

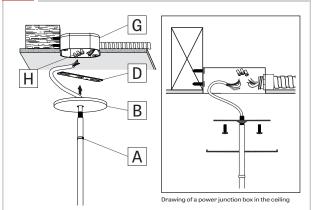

Raise the fixture and tighten the junction box crossbar (D) with screws (by others) to the junction box (G). Make wire connection with wire connectors (H). Then slide the canopy (B) and thighten the set up with the slip ring (A).

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILE NAME:CANYON-FLU-PENDANT-STEM-INST


November 10, 2019

Page: 1/3


CANYON FLUORESCENT


PENDANT STEM- INSTALLATION INSTRUCTIONS




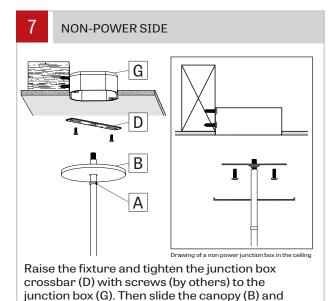


thighten the set up with the slip ring (A).

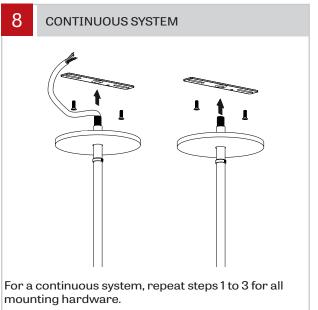


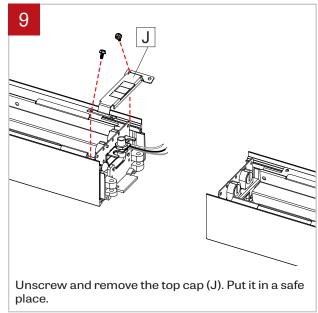

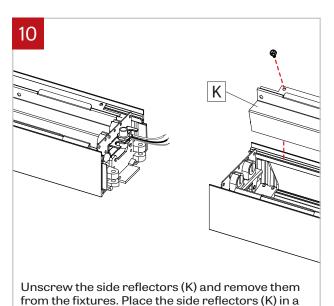

safe place. Repeat for all fixtures in the run.

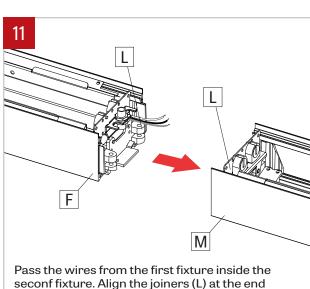

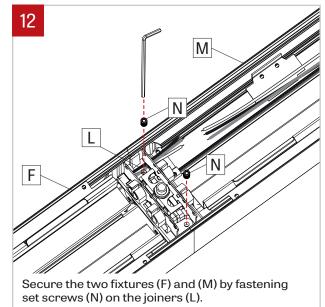


of the first two fixtures (F) and (M) and connect


them.


CANYON FLUORESCENT


PENDANT STEM- INSTALLATION INSTRUCTIONS



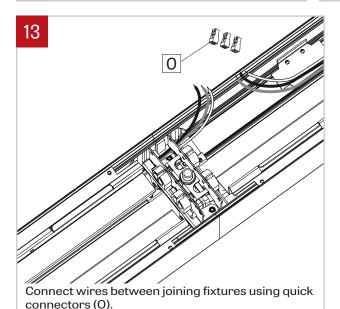

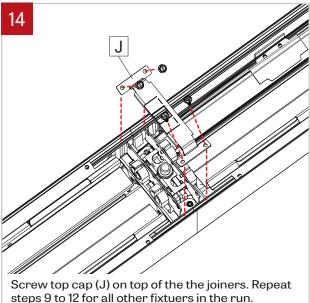

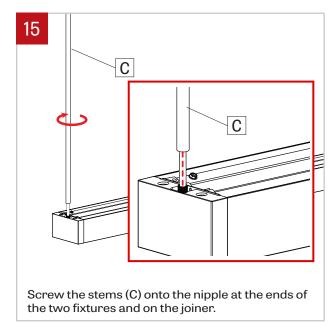

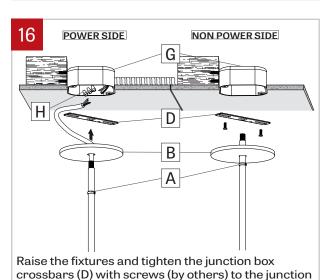

boxes (G). Make wire connection on the power side with wire connectors (H). Then slide the canopies (B) and thighten the sets up with the slip rings (A).

