
### **CANYON FLUORESCENT**

### WALL MOUNT - INSTALLATION INSTRUCTIONS





# NOTE: Wire dimming conductors as Class 1




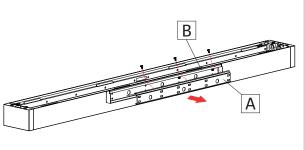


Unscrew and remove wall bracket (A) from fixture bracket (B). Put it in a safe place.

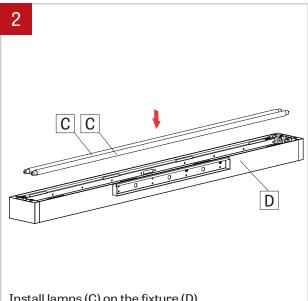




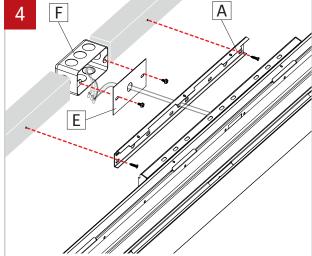


Screw back the junction cover (E) on the junction box (F) and then screw the wall bracket (A) to the wall using anchors.

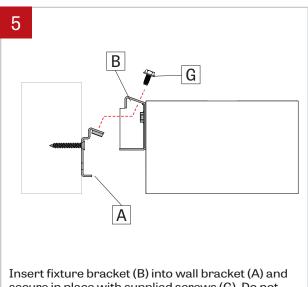

secure in place with supplied screws (G). Do not overtighten.

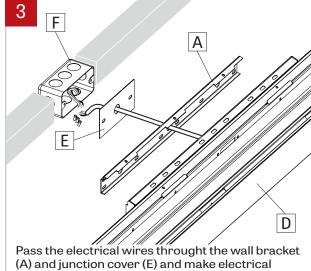

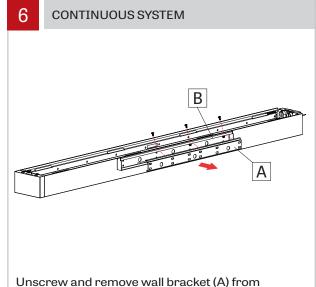



fixture bracket (B). Put it in a safe place.

# **CANYON FLUORESCENT**

### WALL MOUNT - INSTALLATION INSTRUCTIONS




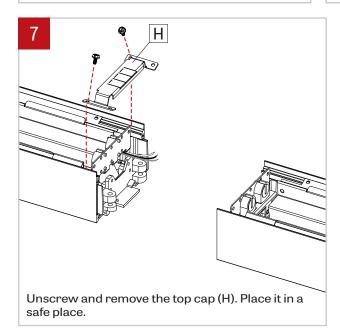


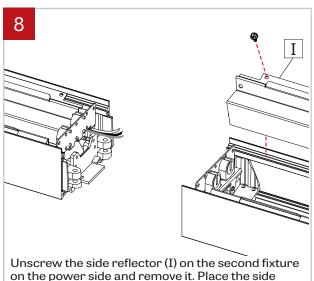



reflector (I) in a safe place. Repeat for all fixtures in

the run.

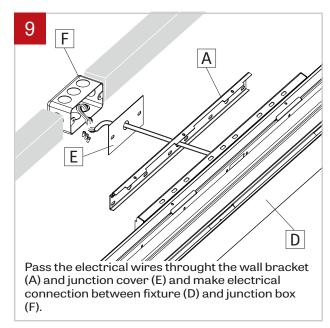

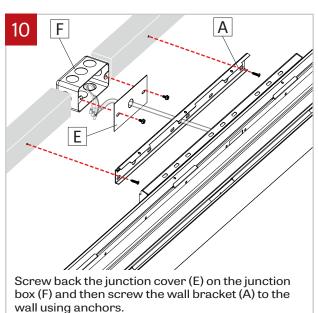

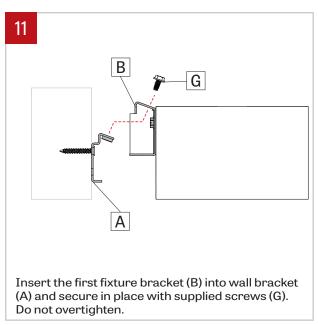


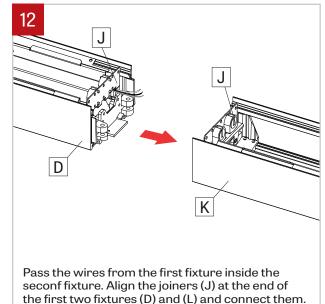


# **CANYON FLUORESCENT**

### WALL MOUNT - INSTALLATION INSTRUCTIONS




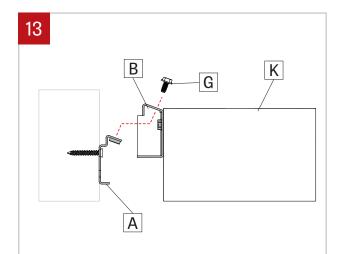


Insert the second fixture (K) bracket (B) into wall bracket (A), and secure in place with supplied screws (G). Do not overtighten.

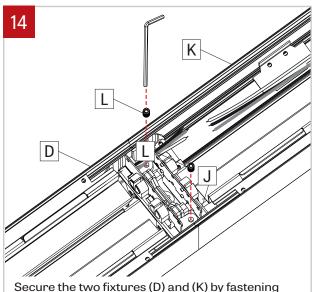

Secure the two fixtures (D) and (K) by fastening set screws (L) on the joiners (J).

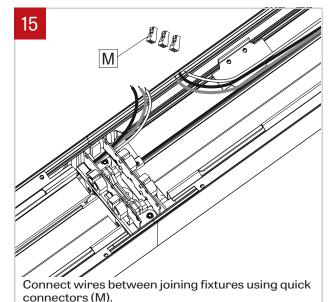

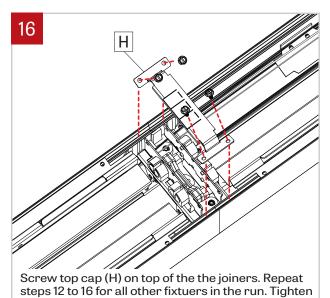

all screws on mounting brackets.

