
CAVA


DIRECT LED BOARD REPLACEMENT INSTRUCTION




NOTE: Wire dimming conductors as Class 1

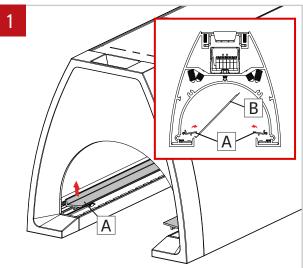

Make sure the power to the fixure is turned off. Remove the lens (A) on both sides using the provided lens tool (B).

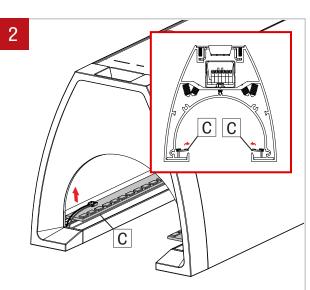


Remove delicately LED Boards (C) from the extrusion.

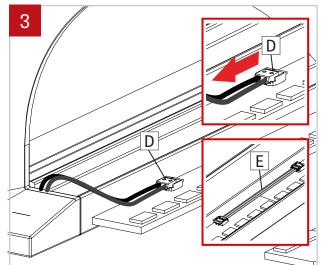


Disconnect LED molex connector (D) by pulling it. If need to remove just one board, disconnect coupler wire (E) between the two board by pulling it.

November 11, 2019

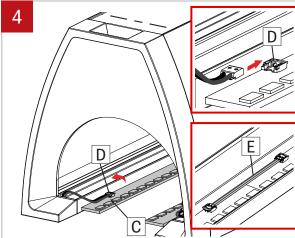

Replace the LED Boards (C) and reconnect the LED molex connector (D). Reconnect coupler wire (E) between the two boards (C). Put the LED boards (C) back in place (LED diodes inwards). Make sure the wires are not hiding any LED diodes.

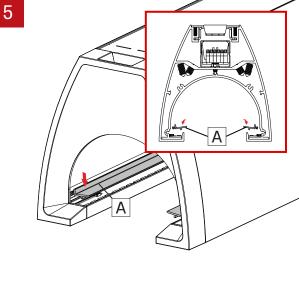

Reinstall the lens (A) back in place by pushing it.



Page: 1/1

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.