



NOTE: Wire dimming conductors as Class 1

1 SINGLE FIXTURE

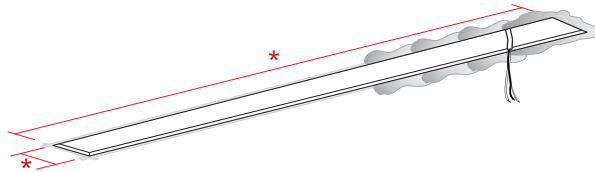


Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [*] in the client drawings. Tape and finish the edges of the drywall.

2

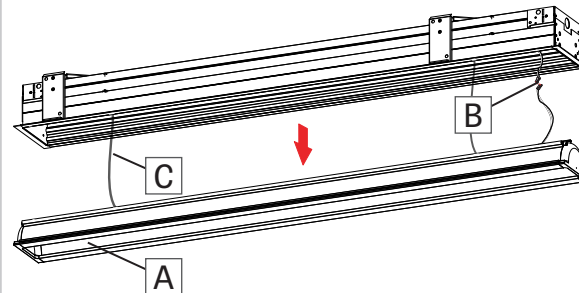


Remove reflector [A] from the extrusion. Disconnect quick connectors [B] and remove security cables [C] in order to remove the reflector [A]. Place it in a safe place.

3

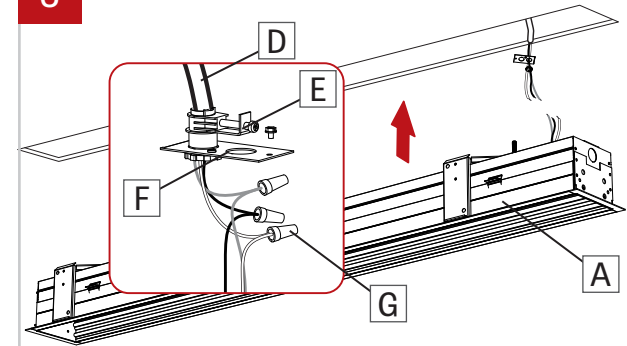


Install power cable [D] (by other) through the BX connector [E] (by other) and install onto the power plate [F] provided. Make electrical connections between power cable [D] and fixture cables using electrical marettes [G]. Reinstall the power plate [F] to the fixture [A]. Insert fixture into pre-cut hole in drywall.

4

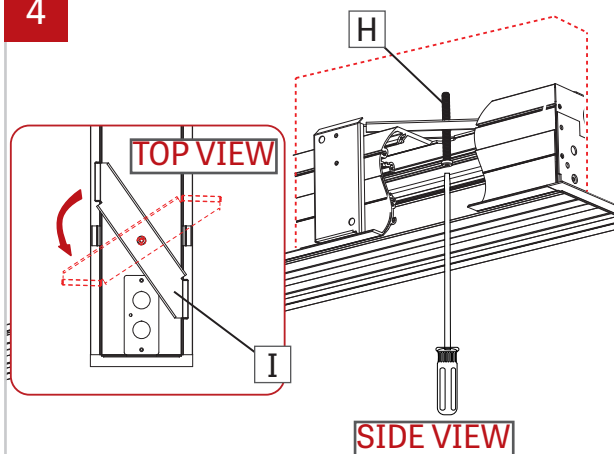

Tighten the drywall bracket screws [H] to rotate the drywall brackets [I] in place. Tighten the drywall bracket screws [H] to lock into place.


5

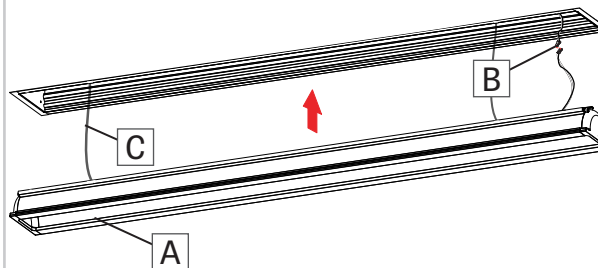

Reinstall security cables [C] and reconnect quick connectors [B]. Reinstall reflector [A] inside the fixture.


6

CONTINUOUS SYSTEM

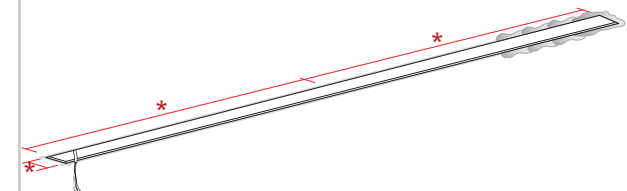


Prepare the area where all the sections are going to be installed. Cut hole in the drywall according to the dimensions [*] in the client drawings. Tape and finish the edges of the drywall.

7

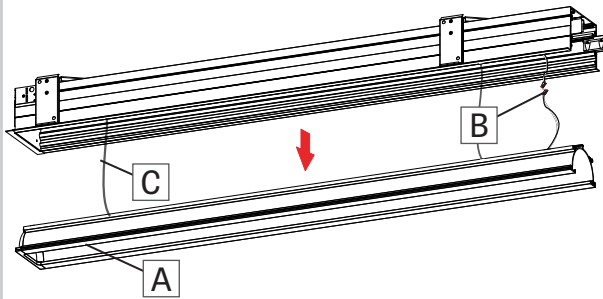


Remove reflectors [A] from the extrusions. Disconnect quick connectors [B] and remove security cables [C] in order to remove the reflector [A]. Place it in a safe place.

8

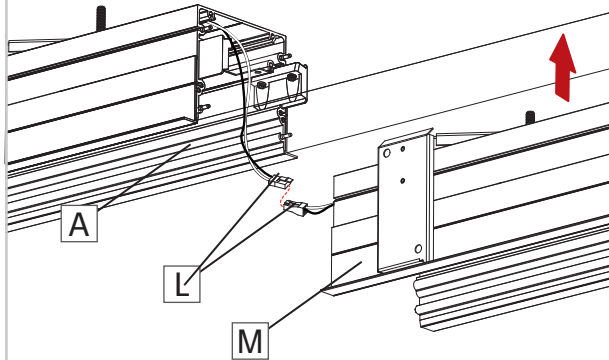


Apply steps 3 and 4 to the first fixture in the run [A]. Make the wires connection between [A] and [M] using quick connector [L]. Insert the second section [M] into the drywall hole.

9

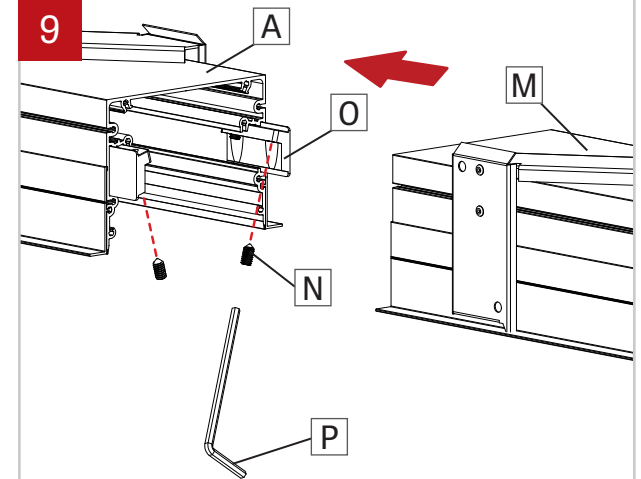


Slide the fixture [A] to the fixture [M] using alignment pins as guides. Tighten the set screws [N] on both joining brackets [O] using an Allen Key [P] to secure the fixtures together.

10

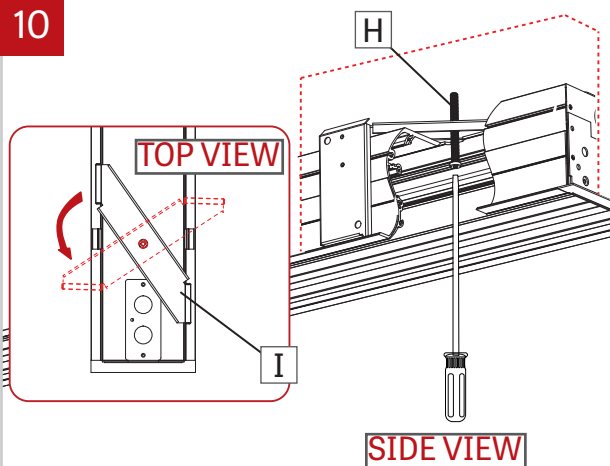

Tighten the drywall bracket screws [H] to rotate the drywall brackets [I] in place. Tighten the drywall bracket screws [H] to lock into place.

11

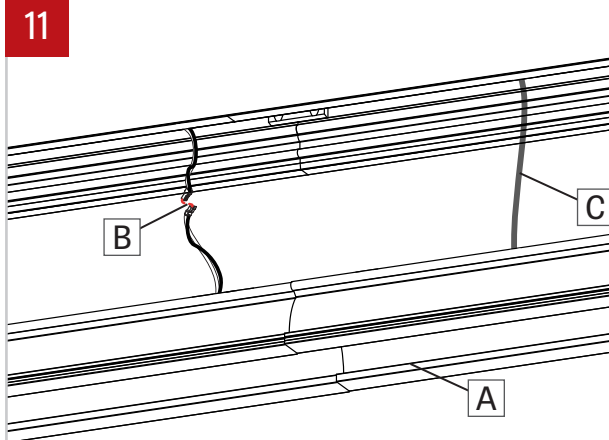

Reinstall security cables [C] and reconnect quick connectors [B]. Reinstall reflectors [A] inside the fixtures.