


IMPORTANT: Installation instructions are shown with Cava-T 2x2 and apply to Cava-T 2x2 and Cava-T 1x4


NOTE: Wire dimming conductors as Class 1

1

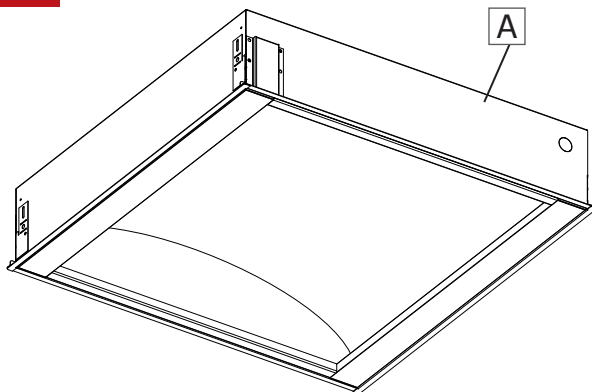


Make sure the power to the fixture (A) is turned off.

2

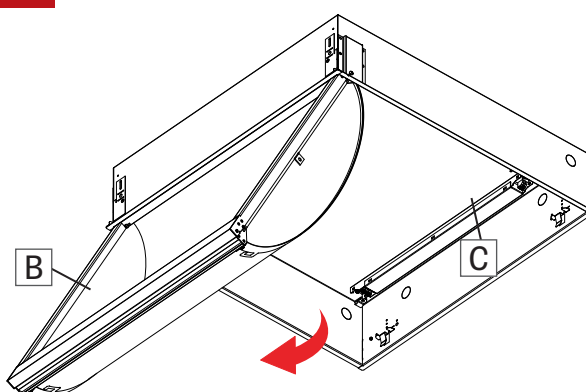


Pull the reflector (B) down to get access to the driver (C).

3

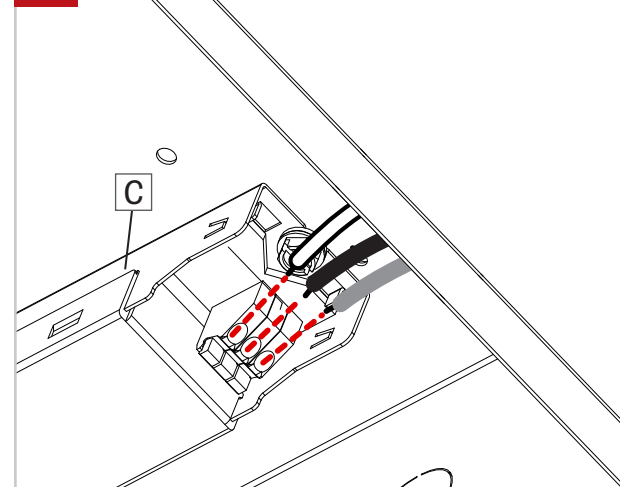

Disconnect wires from the driver (C), on both side of the driver (C).


4

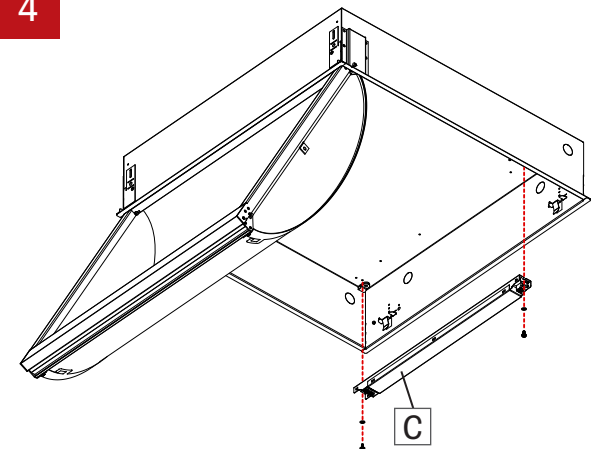

Unscrew the driver (C) from the fixture. Replace it and screw it back to place

5


DMX - Quadro & Duo

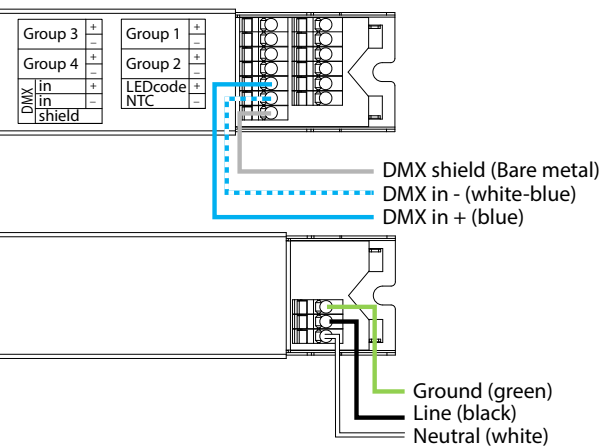

Connect the new (DMX) driver, according to the wiring diagram on the driver.


6

DALI - Duo only

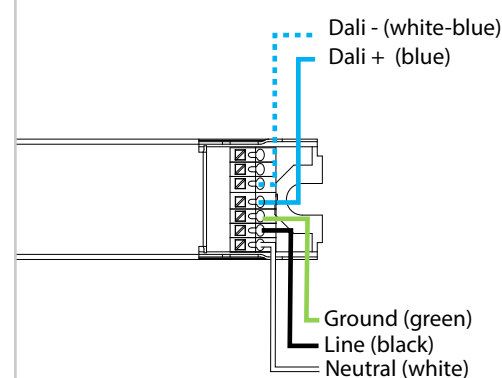


Connect the new (DALI) driver, according to the wiring diagram on the driver.

7 0-10V - Sola only

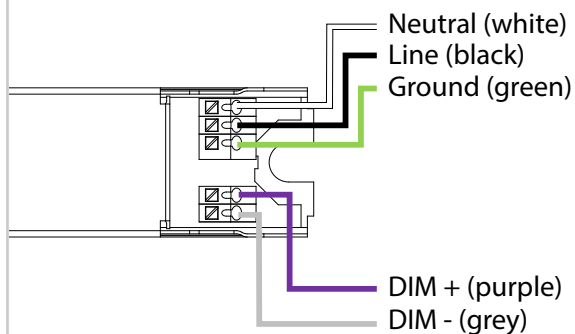

Connect the new (0-10V) driver, according to the wiring diagram on the driver.

8

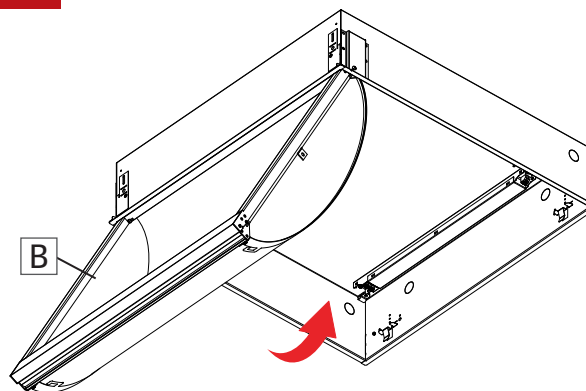

Close the reflector (B) by snapping it back into place.