


IMPORTANT: Installation instructions are shown with Cava-T 2x2 and apply to Cava-T 2x2 and Cava-T 1x4


NOTE: Wire dimming conductors as Class 1

1

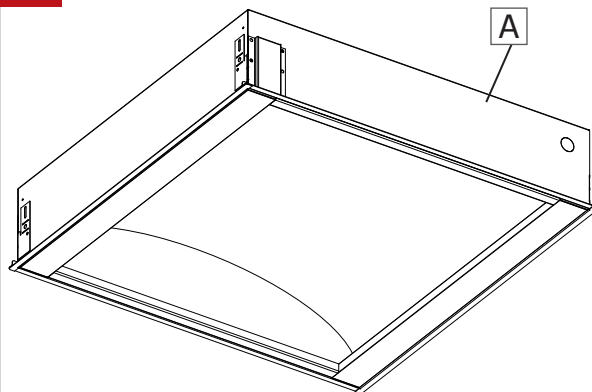


Make sure the power to the fixture (A) is turned off.

2

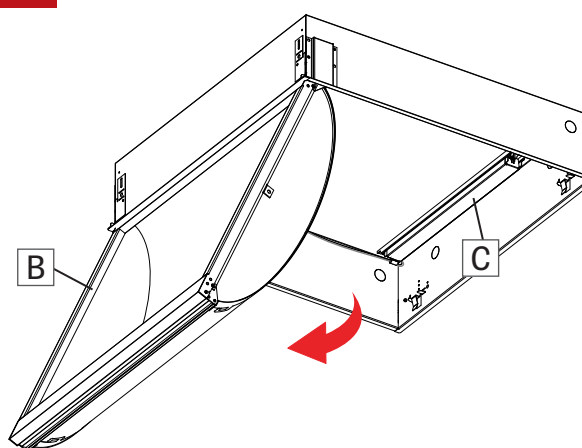


Pull the reflector (B) down to get access to the driver (C).

3

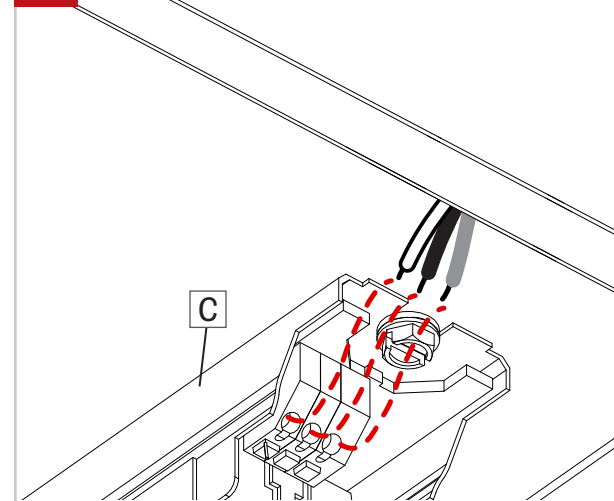


Disconnect wires from the driver (C).

4

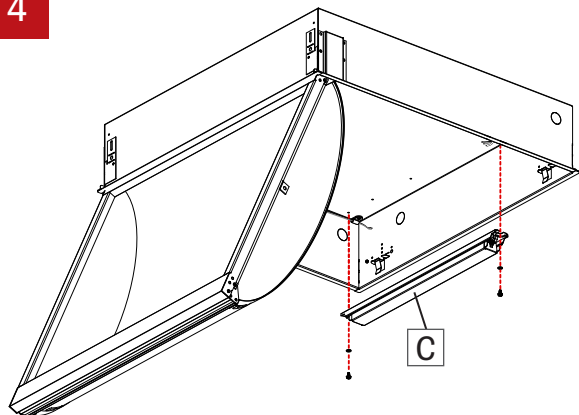

Unscrew the driver (C) from the fixture. Replace the driver and make electrical connection.

5

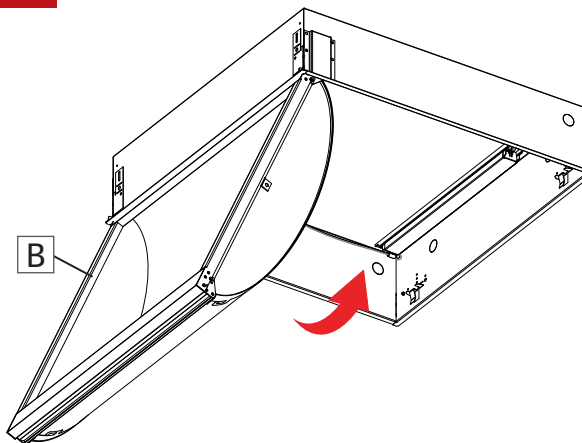

Close the reflector (B) by snapping it back into place.