



**IMPORTANT:** Installation instructions are shown with Cava-T 2x2 and apply to Cava-T 2x2 and Cava-T 1x4

**NOTE:** Wire dimming conductors as Class 1


### 1 SINGLE FIXTURE

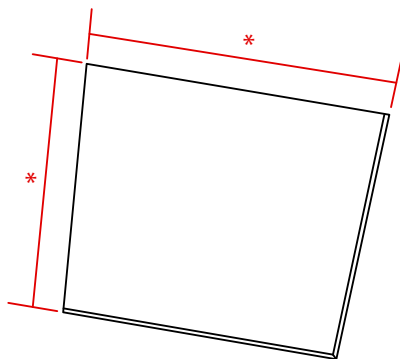

Make sure the power to the fixture is turned off. Cut hole in the drywall according to the dimension [\*] given in the client drawings.

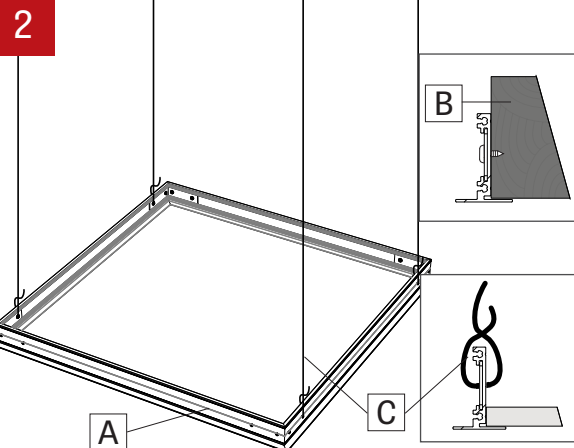


Insert the drywall kit (A) into the hole and attach it to a wooden frame (B) or hang it using hanger wires (C).

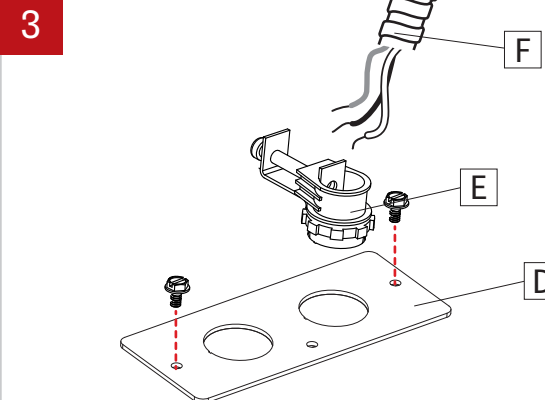


Remove power plate (D) from fixture and install BX connector (E) (by other) and BX cable (F) (by other) through the power plate. Tightened BX connector (E) screw.


**For chromawerx wiring, the number of wires may vary.**

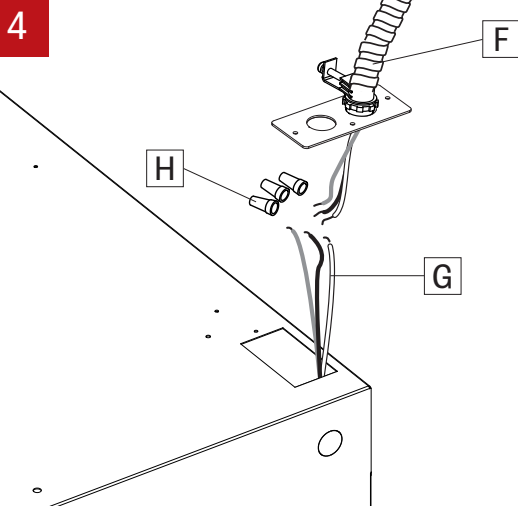

Connect cables from the BX cable (F) to the driver cables (G) using wire nuts (H) (connect the same color wires together).

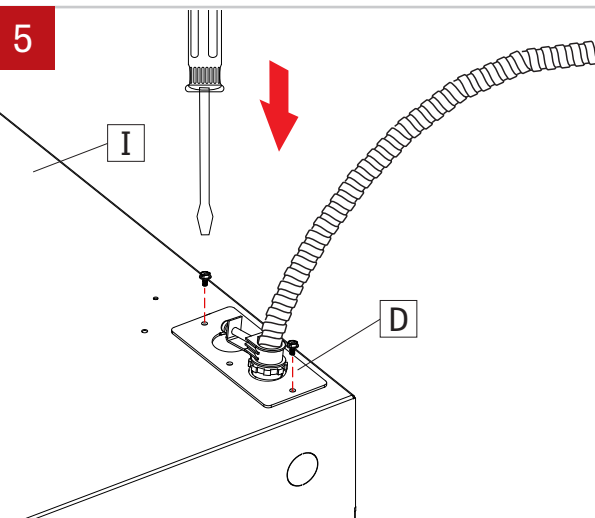


Push connected wires inside the fixture. Reinstall power plate (D) onto fixture (I) by refastening screws to power plate (D) and fixture (I).

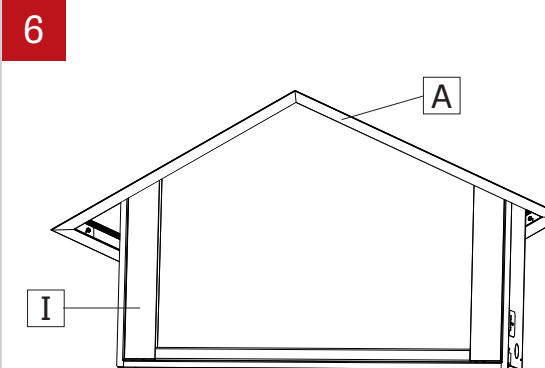


Insert the fixture (I) through the drywall kit (A) as shown.

7

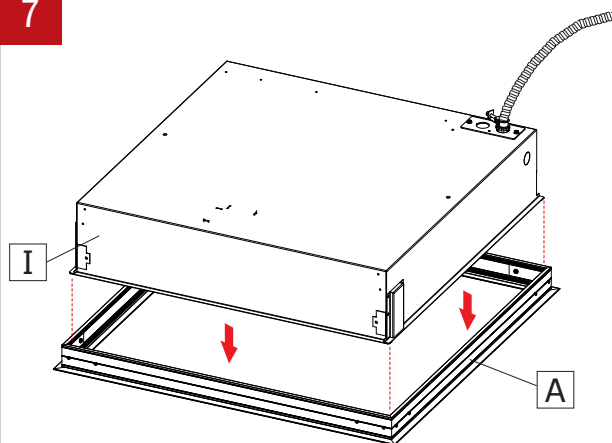



Lower the fixture (I) onto the drywall kit (A).

8

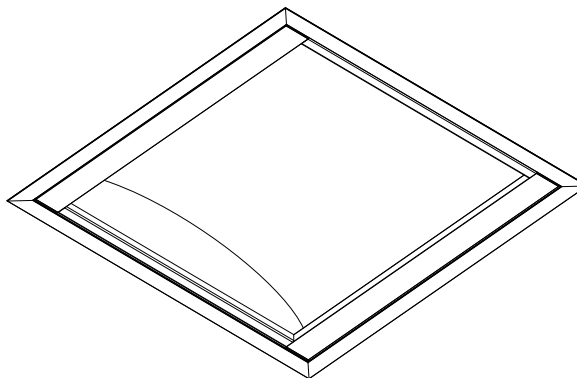

Power can be safely turned on.

### TOP VIEW

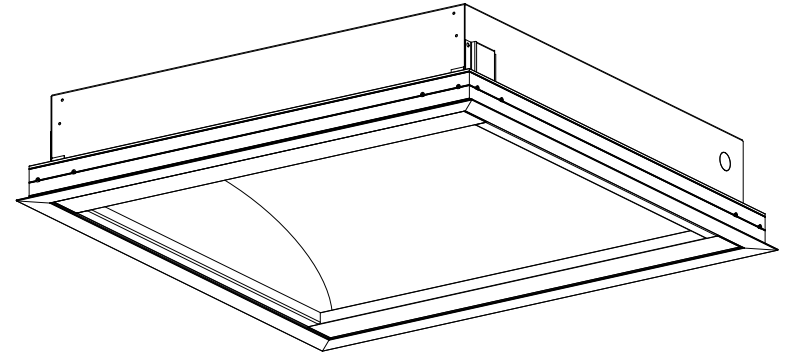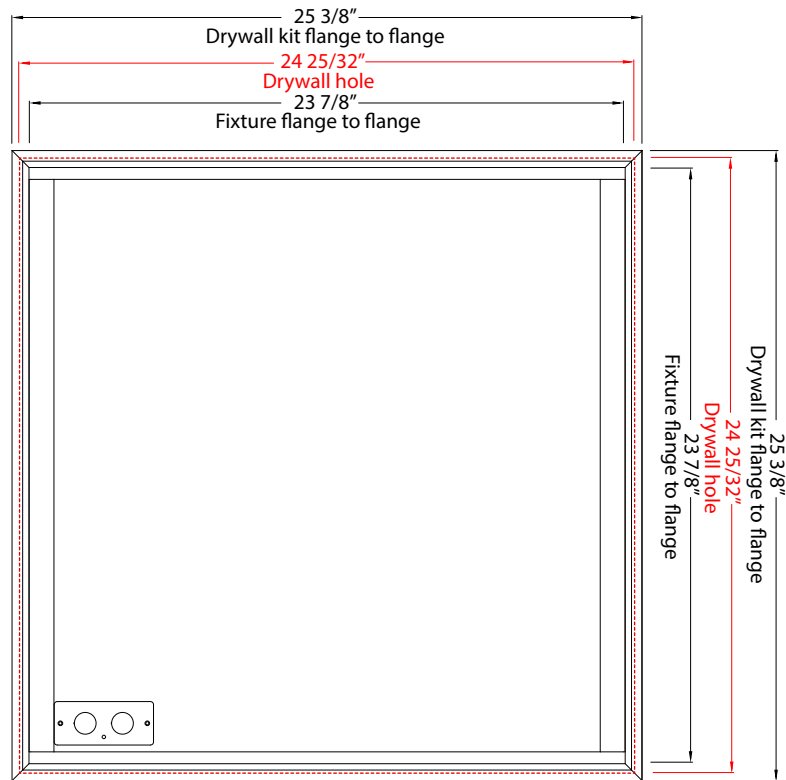

## TOP VIEW

