

# CLUSTER COMBO


## RECESSED DRYWALL MUDFLANGE - INSTALL. INSTRUCTIONS

**NOTE:** Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure.

Make sure to reconnect the wires to the LED boards correctly.

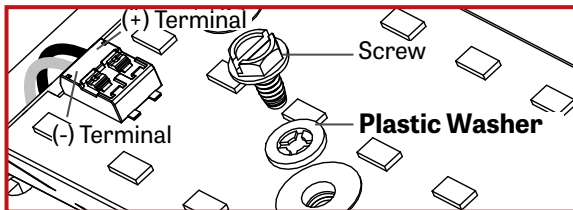


### 1 SINGLE FIXTURE

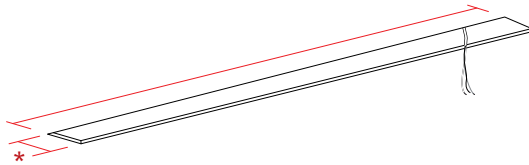


Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [\*] given in the client drawings.

### 2

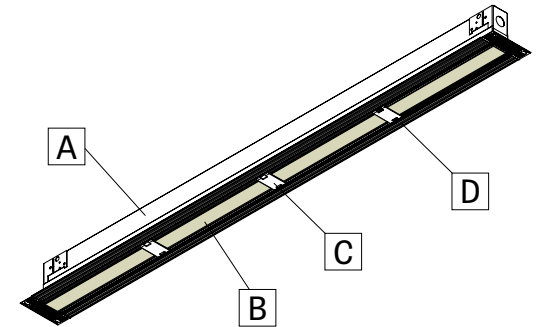


Make sure the power to the fixture (A) is turned off, and the optics of the fixture are protected by a cover (B). The spacer brackets (C) are in place, aligned with the holes of the mudflange (D).

### 3

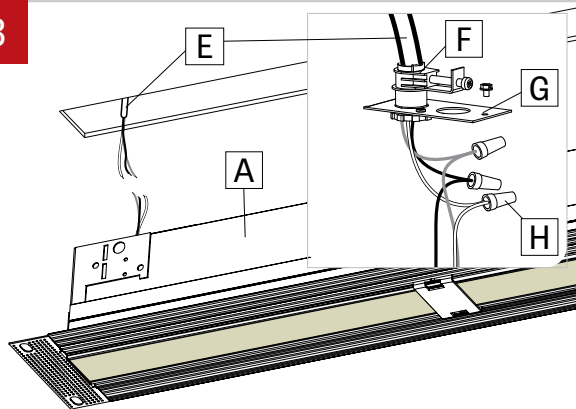


Install power cable (E) (by other) through the BX connector (F) (by other) and install onto the power plate (G) provided. Make electrical connections between power cable (E) and fixture cables using electrical marettes (H). Reinstall the power plate (G) to the fixture (A). Number of wires may vary.

### 4

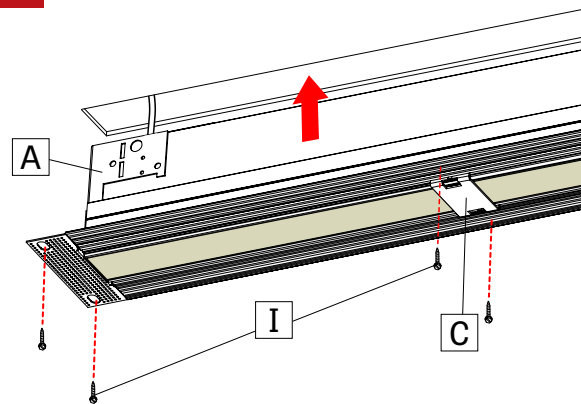

Insert fixture (A) into hole. Fasten drywall screws (I) through the holes (some aligned with the spacer brackets (C)) of the mudflange.

### 5

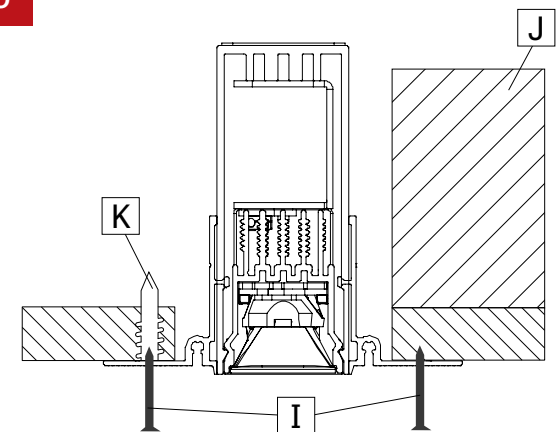


To reinforce the screws (I) that maintain the fixture in the drywall, wood blocking (J) or drywall anchors (K) must be used.

# CLUSTER COMBO


## RECESSED DRYWALL MUDFLANGE - INSTALL. INSTRUCTIONS

6

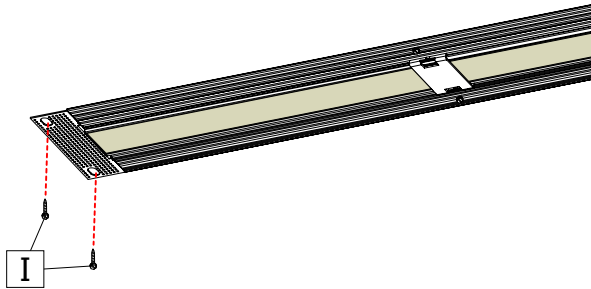


If the fixture position needs adjustments, remove screws (I) on one side of the fixture and adjust it. Reinstall the screws (I) once the position is settled.

7

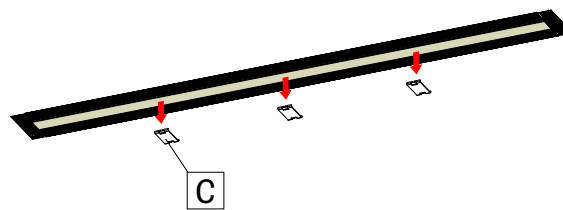


Once fixture is attached to the ceiling, remove the spacer brackets (C) along the fixture.

8

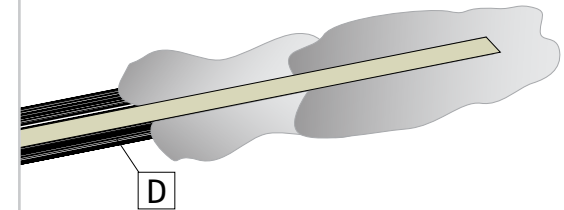

Plaster and sand over mudflange (D) to create a smooth finish.


9

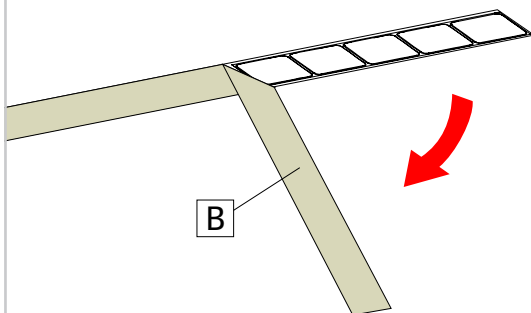

Once the mud is totally dry and painted, remove gently the cover (B).


10

### CONTINUOUS SYSTEM

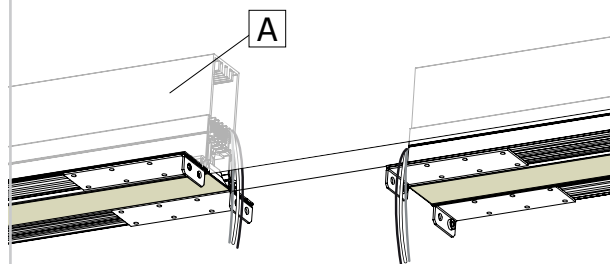

For a continuous system, follow steps 1 to 7 for the first fixture (A) in the run.


11

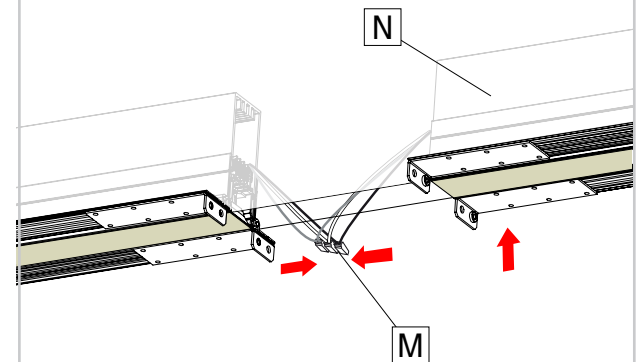


Make the wire connection between the first two sections using wire connectors (M). Insert the second section (N) into the hole. Number of wires may vary.

# CLUSTER COMBO


## RECESSED DRYWALL MUDFLANGE - INSTALL. INSTRUCTIONS

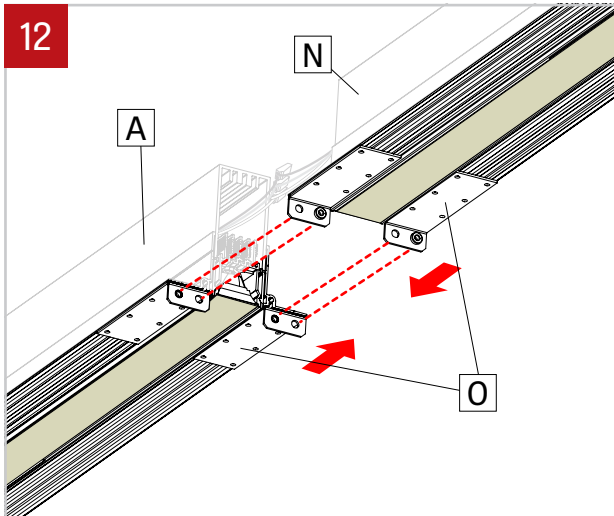


Slide the second section (N) to the first section (A), repeat for all sections in the run. Attach the two fixtures by fastening screws on the joiners (O).

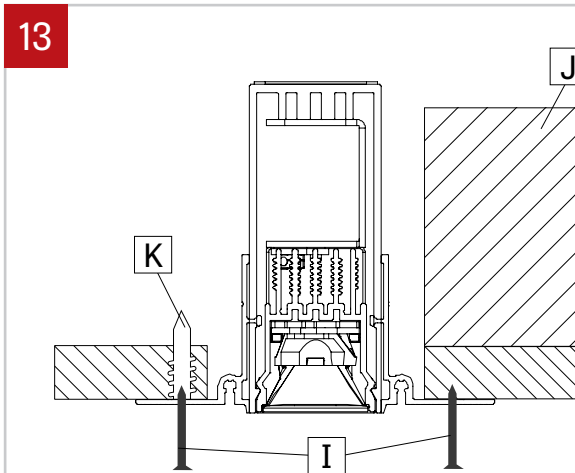


Fasten fixture into drywall with screws (I). To reinforce the screws (I) that maintain the fixture in the drywall, wood blocking (J) or drywall anchors (K) must be used.

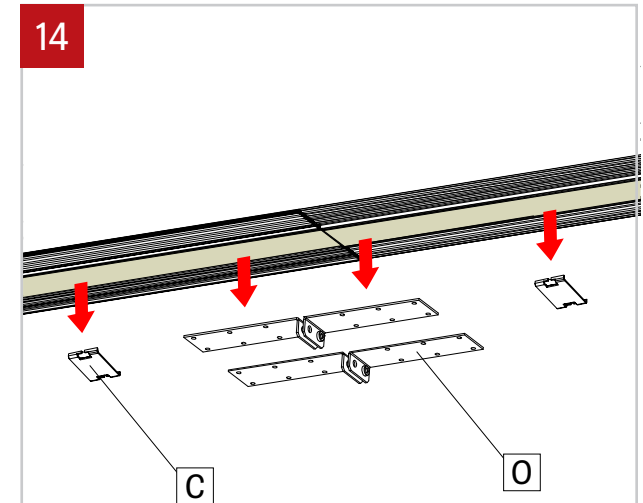

Once the second section is attached to the ceiling, remove the spacer brackets (C) and the joiners (O).

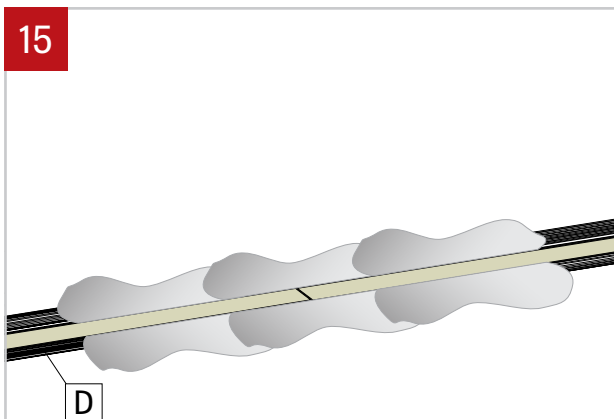

Plaster and sand over mudflange (D) to create a smooth finish.

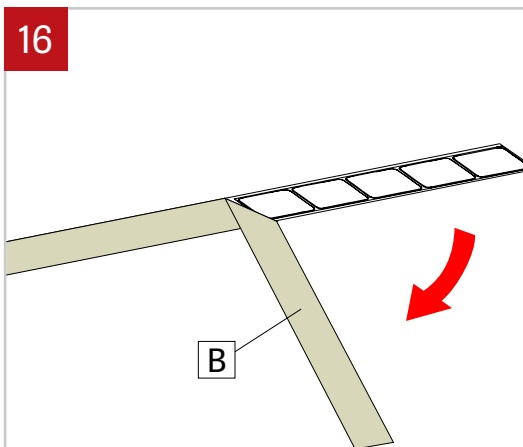

Once the mud is totally dry and painted, remove gently the cover (B).