

# CLUSTER PI

## Recessed Remodel (RM)



**!** This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

**!** Wire dimming conductors as Class 1.

**💡** For electrical connections, please refer to the [wiring diagram guide](#).




**💡** Shown with CLUSTER PI S, applicable to CLUSTER M and L too.

### 1 PREPARE CEILING.


Cut hole opening **[A]** in ceiling, according to shape and dimensions shown in table below.

	Flanged trim Trimless drywall mudplate	Trimless millwork
CLUSTER PI S	Ø 3 13/16"	Ø 3 3/4"
CLUSTER PI M	Ø 6 13/16"	Ø 6 3/4"
CLUSTER PI L	Ø 9 1/16"	Ø 9"

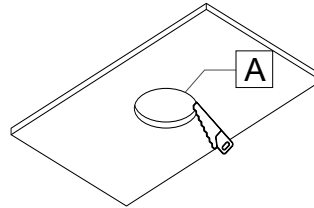


#### TRIMLESS MUDPLATE

Attach mudplate **[B]** to ceiling with the double side tape.

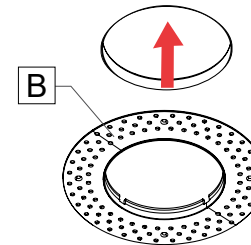


Plaster and sand over mudplate **[B]**.

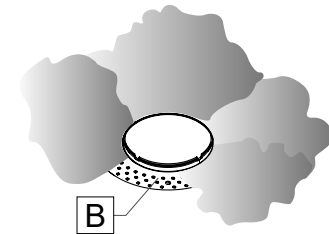

### 2 LOWER BX CABLE.

Bring BX cable **[C]** from the ceiling opening.

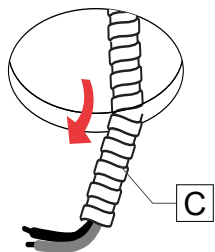




### 3 MAKE ELECTRICAL CONNECTIONS.

Unfasten screw **[D]** and pivot the cover **[E]**. Make electrical connections between BX cable **[C]** and driver cables **[F]** with electrical marrettes **[G]**.

Reinstall the cover **[E]** by pivoting it back into place, and tighten the screw **[D]** to secure the cover **[E]**.


**Notes:**

Number of wires may vary.  
Driver enclosure may vary

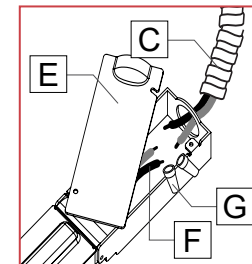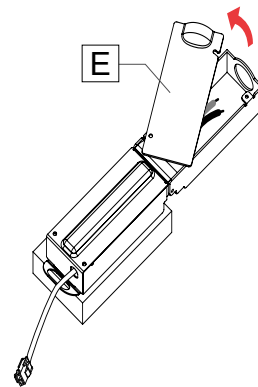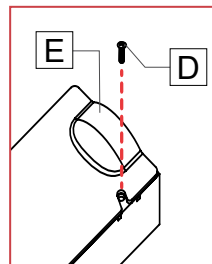

### 4 INSERT DRIVER.

Place the driver **[H]** into the ceiling.

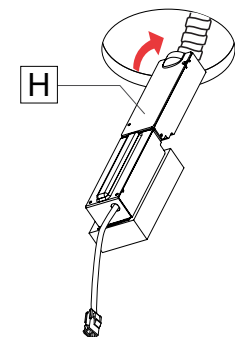

# CLUSTER PI


## Recessed Remodel (RM)



### 5 CONNECT LIGHT ELEMENT.

Connect the light element [i] to driver in ceiling [j] with quick connectors [k].

**Note:** Make sure to attach safety cable [l] to light element [i].

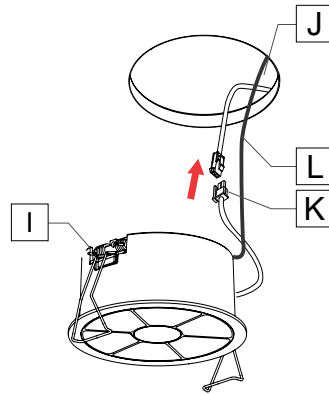

### 6 INSTALL LIGHT ELEMENT.

Squeeze mounting springs [m] upwards onto light element [i].

Insert light element [i] into ceiling [n] until mounting springs [m] snap back above the ceiling.

