


IMPORTANT : Installation instruction applies to all direct feed surface mountings


NOTE: Wire dimming conductors as Class 1

1 REMOTE DRIVER BOX

Please refer to the remote driver installation sheet for more informations.

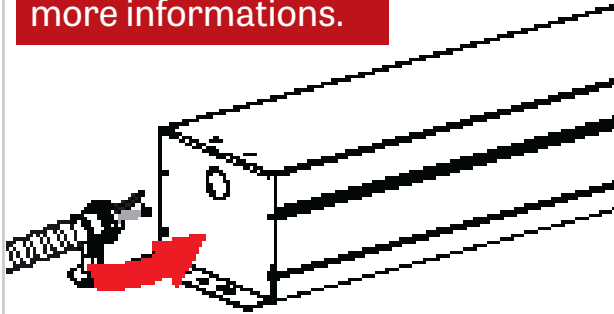


2 INTEGRAL DRIVER

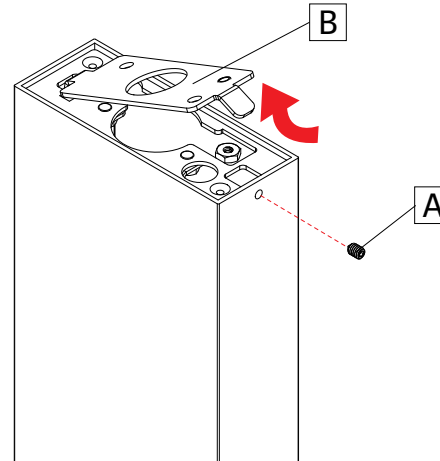


Loosen the screw(A) and lift the canopy plate(B).

3

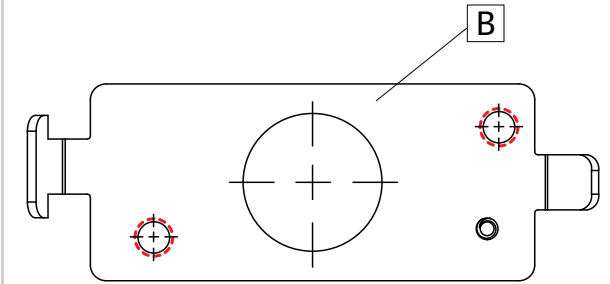


Use the canopy plate(B) as a model to mark 2 mounting points.

4

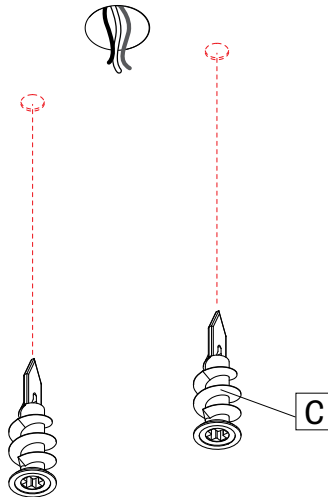


Remove the canopy plate. Drill the mounting point following the marks. Install screw anchors(C).

5

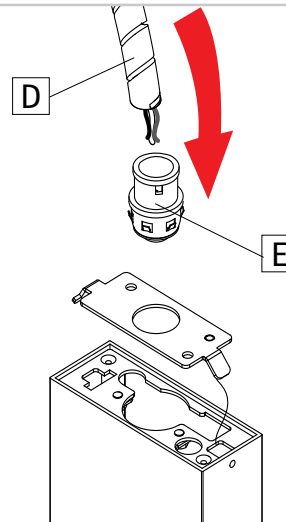

Bring the power(D) through the drywall opening. Connect to provided adapter(E). (No adapter for remote driver)

6

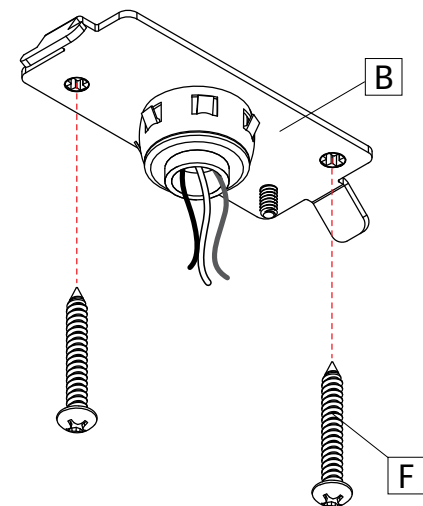

Secure the canopy plate(B) with the screws(F) onto the ceiling.

