



**NOTE:** Wire dimming conductors as Class 1

1

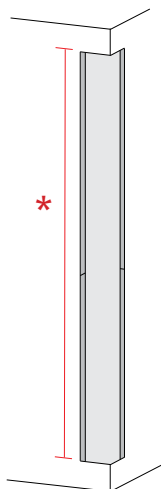


Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [\*] given in the client drawings.

2

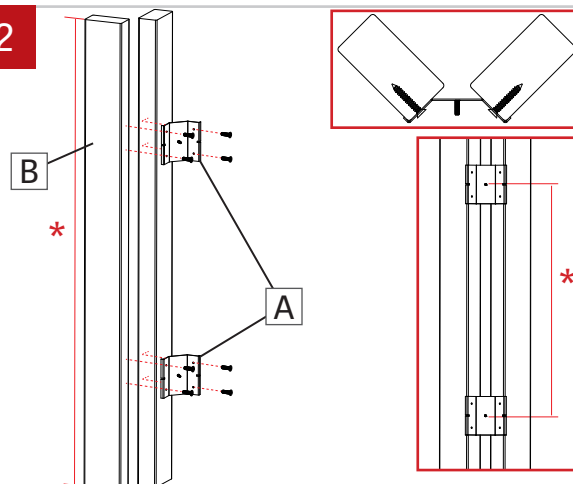

Fix the wall mount bracket (A) to two studs (B) the same size of the fixtures (continuous system as well). Be sure to install them according to the dimensions [\*] given in the client drawings.


3

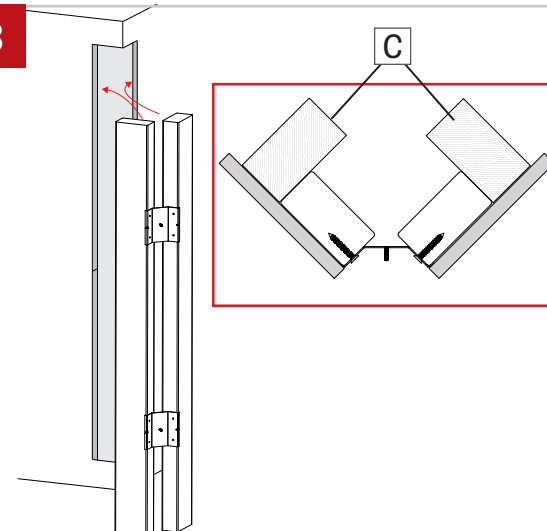

Install the mounting kit inside the wall and fix it to the existing studs (C) on the wall.


4

SINGLE FIXTURE

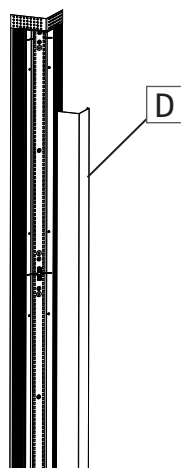


Remove the top lens (D) using the included lens tool.

5

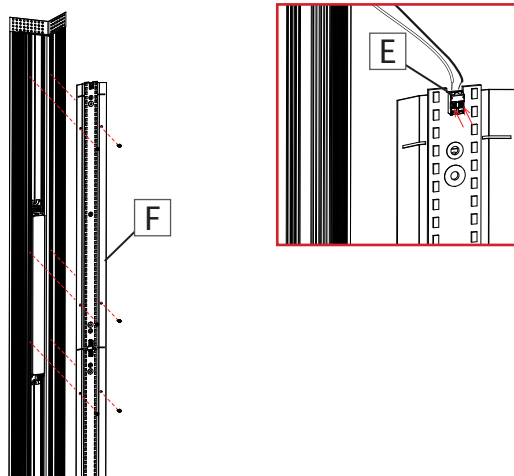


Disconnect LED mox connector (E) by taking a pointed object and pressing on the two tabs on the top. Unscrew the cartridge (F) and remove it from the fixture.

6

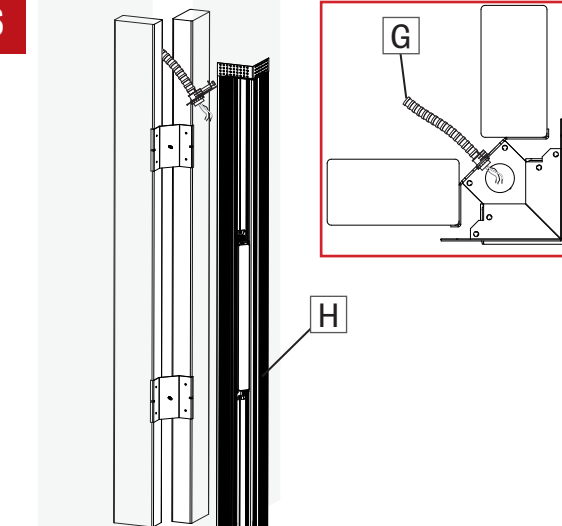


Connect the BX cable (G) to the fixture (H) without doing the electrical connections.

7

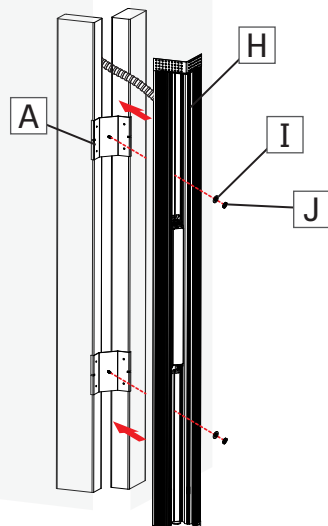


Install the fixture (H) on the wall mount bracket (A) and secure it with washer (I) and nut (J).

8

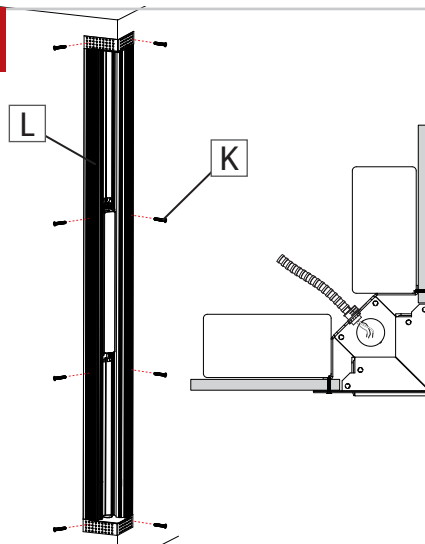


Fasten drywall screws (K) through the mud flanges (L).

9

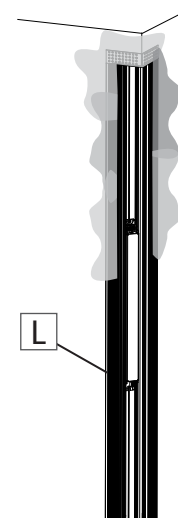


Plaster and sand over mud flange (L) to create a smooth finish.

10

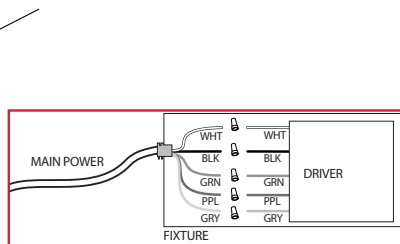


Make the electrical connections between the driver and the main power (connect the wires with the same colors together). **Number of wires may vary.**

11

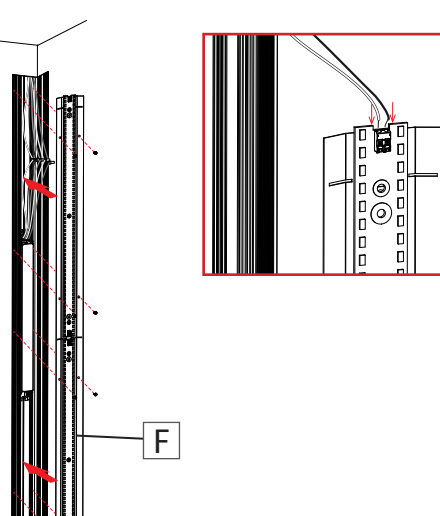


Reinstall the cartridges (F) by using a **screw with plastic washer. Do not apply too much pressure.** Reconnect the wires to the LED boards correctly.

12

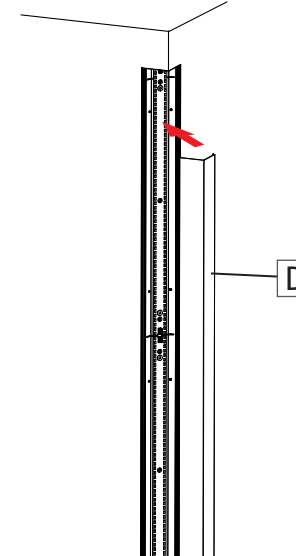


Put the lens (D) back in place.

### 13 CONTINUOUS SYSTEM

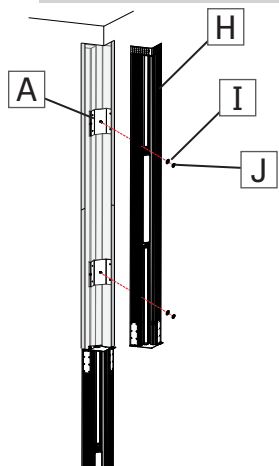


Follow steps 4 to 8 for the first fixture on the run and steps 4 to 7 for second fixture in the run.

### 14

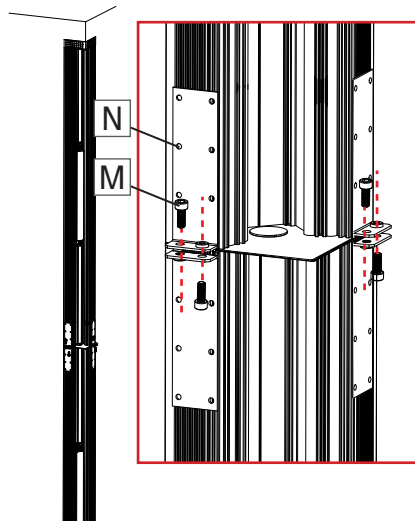


Tight the two fixtures together by tightening screws (M) on the joining brackets (N)

### 15

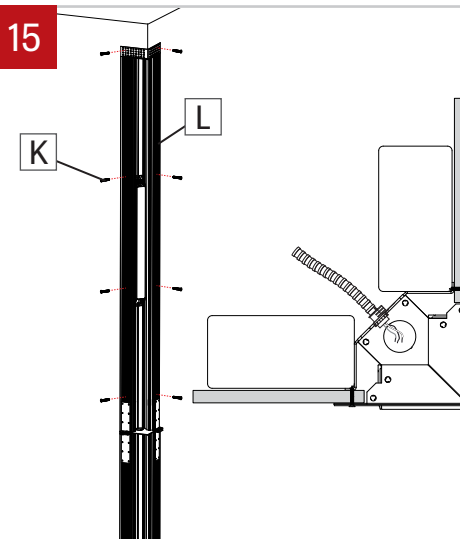


Fasten drywall screws (K) through the mud flanges (L).

### 16

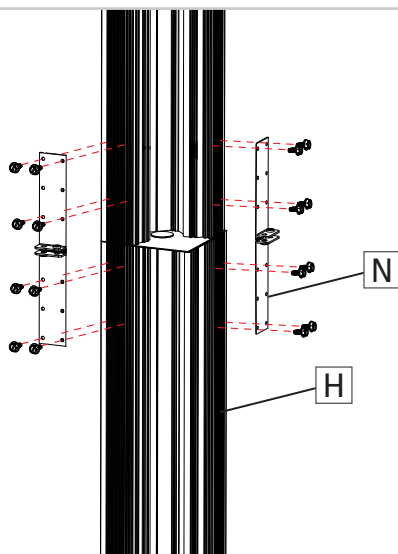


Remove the joining brackets (N) from the fixture (H).

### 17

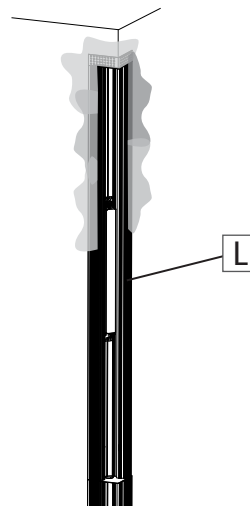


Plaster and sand over mud flange (L) on the whole continuous system to create a smooth finish.

### 18

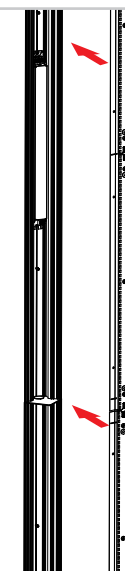

Apply steps 10 and 11 for all fixtures in the run.

19

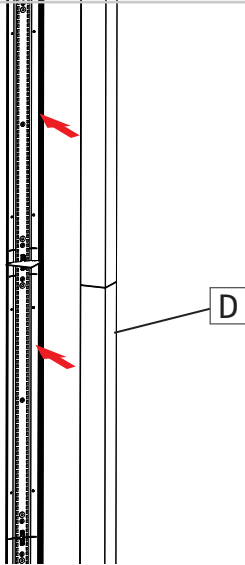

Put the lens (D) back in place.