# CURVIA ACOUSTIX BLANK
Pendant - Single Canopy

Lumenwerx

## INSTALLATION INSTRUCTIONS

⚠ This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

⚠ Disconnect power before installation or servicing.

⚠ Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.

⚠ Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.

⚠ Wire dimming conductors as Class 1.

⚠ A luminaire with more than one power supply connection means shall be connected to only one branch circuit.

⚠ For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.

⚠ For luminaires installed in wet locations, properly seal all mounting and electrical points.

⚠ Warranty claims will not be accepted if incorrect driver or light element is used.


www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC.
Lumenwerx ULC. reserves the right to change or modify product specifications without notification.


# CURVIA ACOUSTIX BLANK
Pendant - Single Canopy

Lumenwerx


## INSTALLATION INSTRUCTIONS

### 1 INSTALL AIRCRAFT CABLES.

Pass the aircraft cables **[A]** through the cable holder plate **[B]** and the canopy **[C]**.

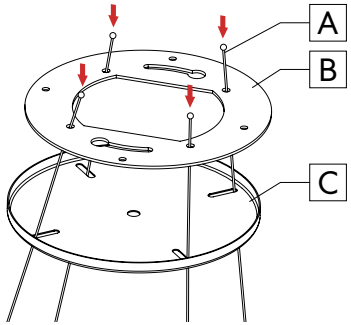



Insert all aircraft cables **[A]** into the griplocks **[D]** on the fixture. Adjust the aircraft cable **[A]** length by pushing the feeder tube **[D]**. Cut the excess cables with an aircraft cable cutter **[E]**.

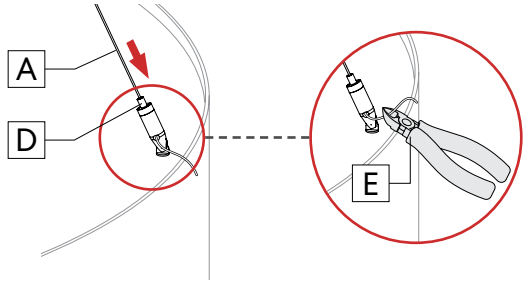



### 2 INSTALL CROSSBAR AND CABLE HOLDER PLATE.

Install the crossbar **[F]** and the cable holder plate **[B]** to the J-box **[G]**.

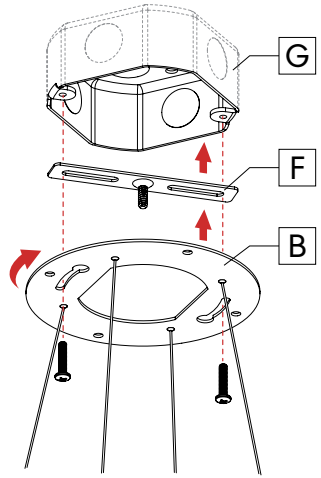


### 3 INSTALL CANOPY.

Secure the canopy **[C]** to the crossbar using the decorative nut **[H]**.

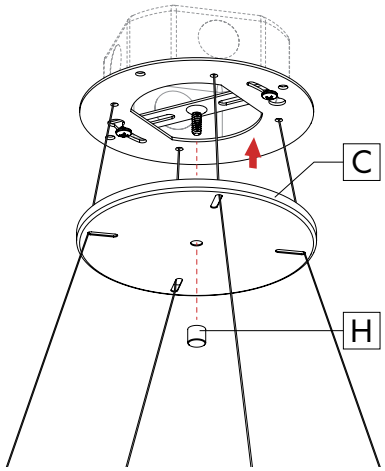


Intertek

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC.
Lumenwerx ULC. reserves the right to change or modify product specifications without notification.