

INSTALLATION INSTRUCTIONS



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Disconnect power before installation or servicing.



Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.



Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.



Wire dimming conductors as Class 1.



A luminaire with more than one power supply connection means shall be connected to only one branch circuit.



For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.



For luminaires installed in wet locations, properly seal all mounting and electrical points.



Warranty claims will not be accepted if incorrect driver or light element is used.

CURVIA MINI

Recessed - Drywall mud flange



For electrical connections, please refer to the [wiring diagram guide](#).




For remote driver box installation instructions, please refer to the [remote driver installation sheet](#).




1 LOCATE MOUNTING POINTS.

Prepare the area where the fixture is going to be installed. Locate the threaded rods **[A]** according to the dimensions **[*]** given in the client drawings, and/or mounting brackets.

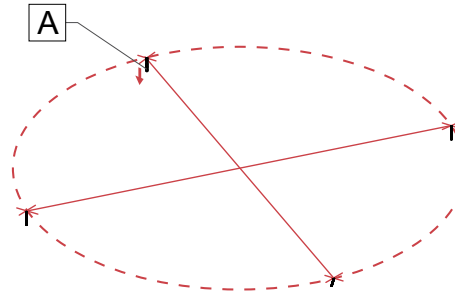

2 PREPARE CEILING.



Cut hole in the drywall according to the dimensions given in the client drawings.

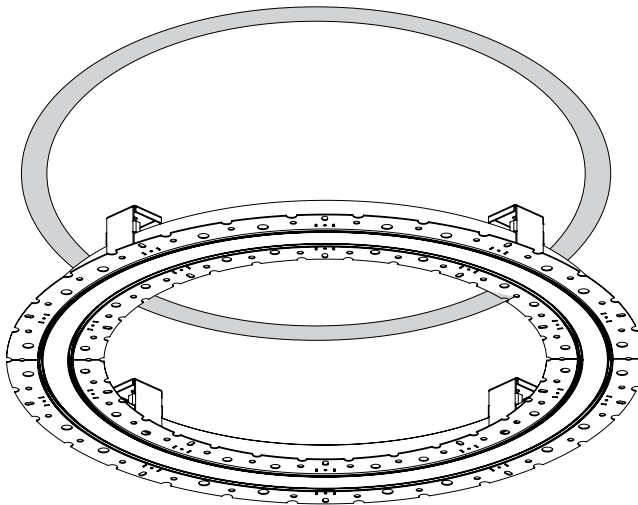

3 REMOVE LENS.

Remove the lens **[B]** from the fixture **[C]** using the provided lens tool and keep in a safe place.

Note: Manipulate carefully as to not scratch paint or damage lens.

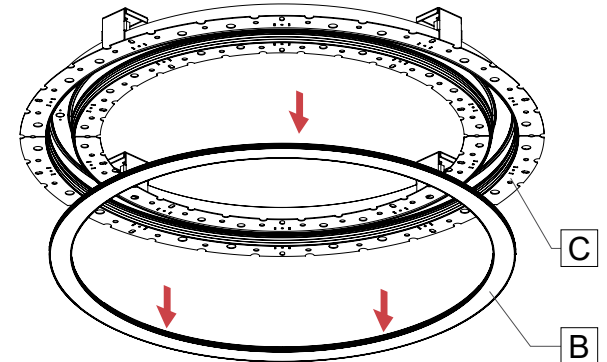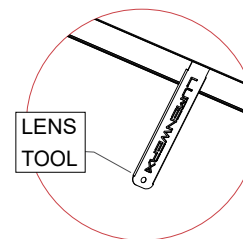

CURVIA MINI


Recessed - Drywall mud flange



4 MAKE ELECTRICAL CONNECTIONS.


Make electrical connections between remote driver [D] and fixture [C].

Note: Number of wires may vary.

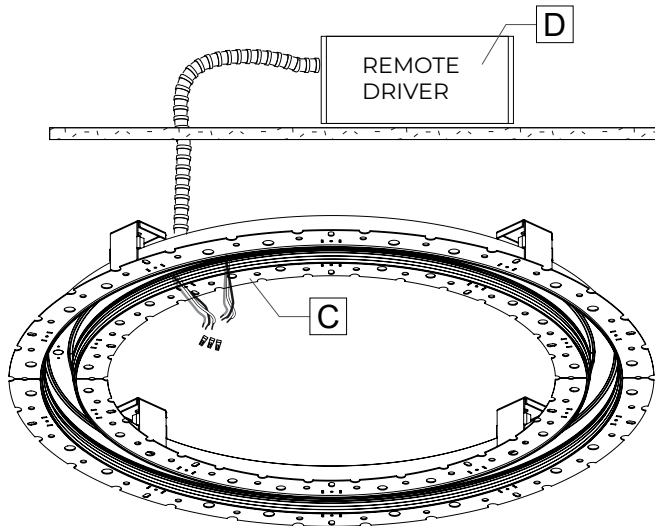


5 FASTEN FIXTURE.

Fasten fixture to 1/4" - 20 threaded rods [A] using washers [E] and nuts [F].

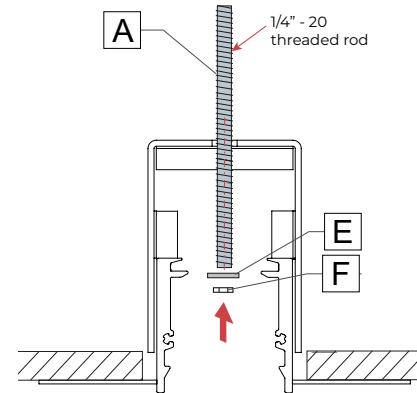


Option 2: BEFORE DRYWALL CEILING HAS BEEN INSTALLED

If you can access from the center cut-out, fasten threaded rod [A] on the U-plate [G] using washers [E] and nuts [F].

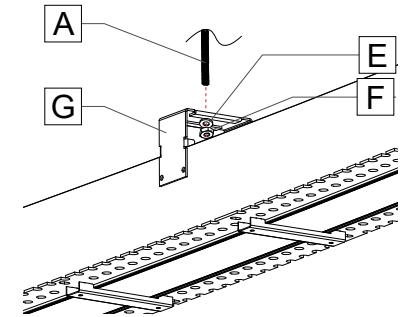

6 PLASTER THE MUD FLANGES.

Plaster and sand over mud flanges [H] to create a smooth finish.

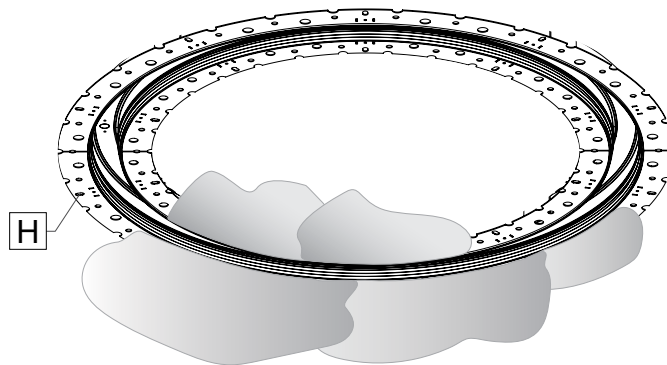

7 REINSTALL THE LENS.

Once the mud is totally dry, firmly snap lens [B] into place being careful not to push in too deep.

