

INSTALLATION INSTRUCTIONS



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Disconnect power before installation or servicing.



Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.



Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.



Wire dimming conductors as Class 1.



A luminaire with more than one power supply connection means shall be connected to only one branch circuit.



For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.



For luminaires installed in wet locations, properly seal all mounting and electrical points.




Warranty claims will not be accepted if incorrect driver or light element is used.

CURVIA SLIM

RECESSED - Drywall Mud Flange



INSTALLATION INSTRUCTIONS

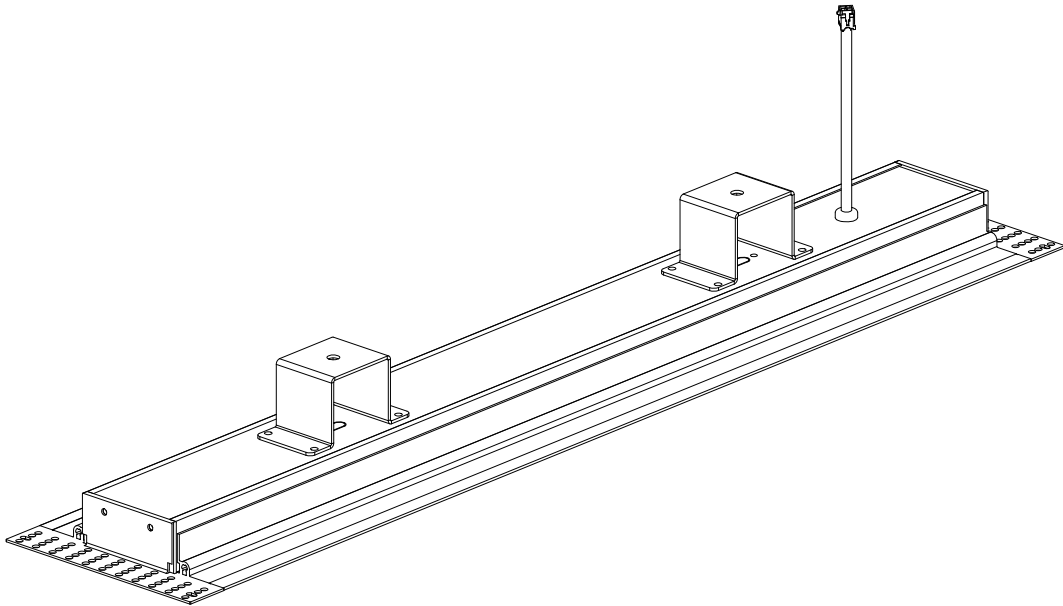

For electrical connections, please refer to the [wiring diagram guide](#).



For remote driver box installation instructions, please refer to the [remote driver installation sheet](#).



Shown with Curvia Slim 2. Applicable to Cruvia Slim 1.



Shown with pattern. Applicable to ring and shapes.

INDEX

<u>Remodel</u>	
Single fixture	P3
Continuous run	P5
<u>New construction</u>	
Single fixture	P7
Continuous run	P9

CURVIA SLIM


RECESSED - Drywall Mud Flange



SINGLE FIXTURE - REMODEL



1 PREPARE CEILING OPENING.

Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [*] given in the client drawings.

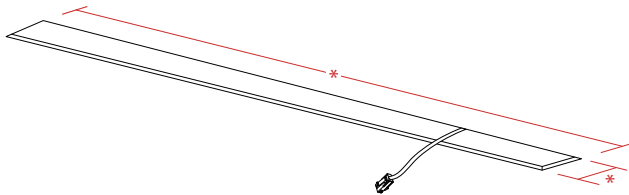


2 PREPARE FIXTURE.

Unscrew the brackets [A-1] from the fixture [A] if it's necessary. Make sure the lens is installed on the fixture [A] and protected by a cover. The temporary brackets [B] should be aligned with the obround holes of the flanges.

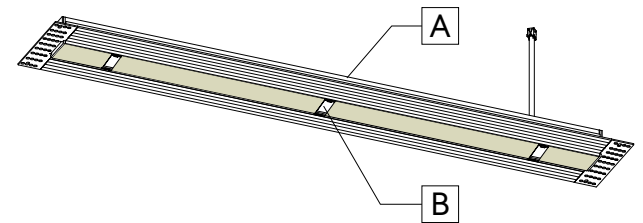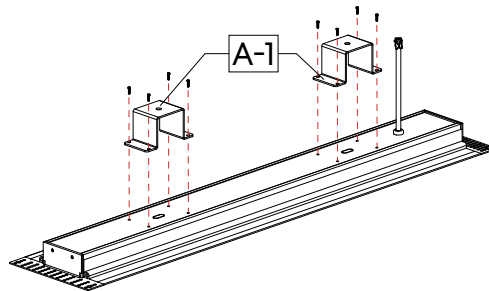


3 MAKE ELECTRICAL CONNECTIONS.

Connect the main AC power cable to the remote driver box. Then, connect the remote driver box DC cable to the fixture using the provided wire harness [C].

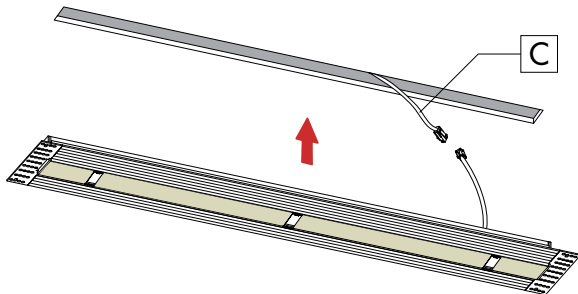

4 INSTALL FIXTURE.

Insert the fixture [A] into the pre-cut hole in the drywall and fasten drywall screws [D] through the obround holes of the flanges.

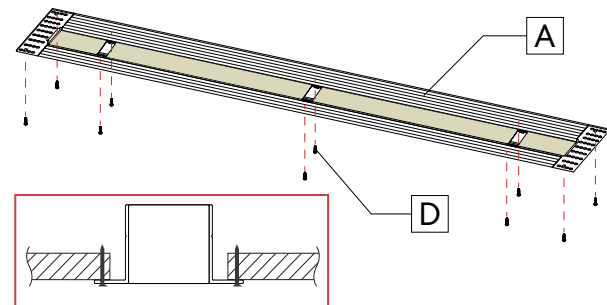

CURVIA SLIM


RECESSED - Drywall Mud Flange



SINGLE FIXTURE - REMODEL

5 REMOVE TEMPORARY BRACKETS.



Once the fixture is attached to the ceiling, remove the temporary brackets [B].

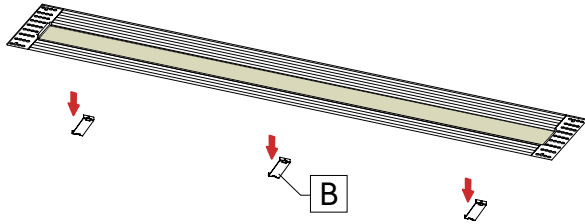

6 FINISH INSTALLATION.

Plaster and sand over mud flange [E] to create a smooth finish.

Once the mud is totally dry and painted, gently remove the cover [F].

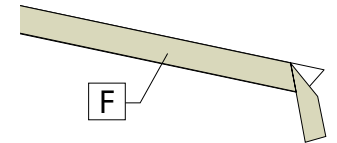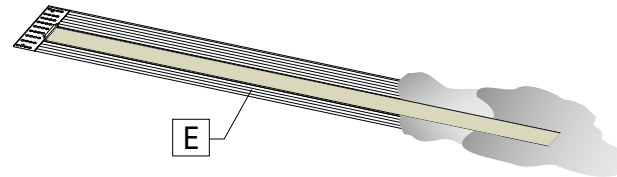

CURVIA SLIM

RECESSED - Drywall Mud Flange




CONTINUOUS RUN - REMODEL

1 FOR A CONTINUOUS RUN, FOLLOW STEPS **1-3** AND **5** FROM THE SINGLE FIXTURE INSTRUCTIONS FOR ALL FIXTURES IN THE RUN.


2 REMOVE LENSES.

Remove lenses **[G]** from the fixtures and keep them in a safe place.

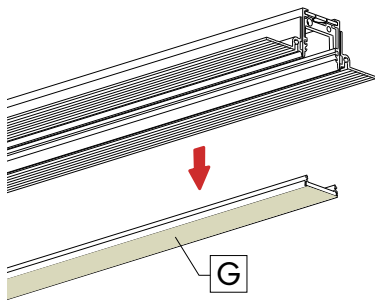

3 REMOVE CARTRIDGES.


Unscrew and remove cartridges **[H]** from the fixtures. Disconnect the electrical connectors.

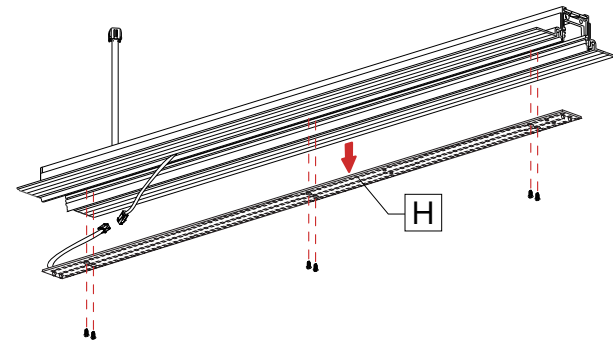

4 JOIN FIXTURES.


Unscrew the screws **[I]** from the fixtures.

Align the second fixture **[J]** to the first fixture **[A]**. Attach the two fixtures by fastening screws on the joiners.

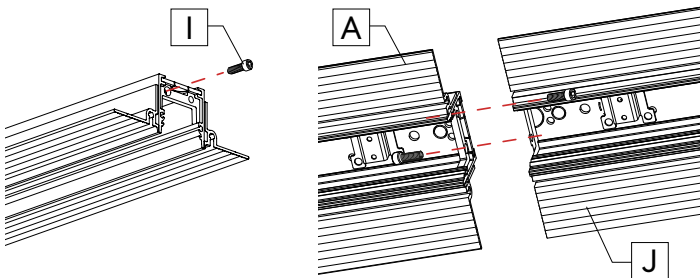

5 REINSTALL CARTRIDGES.

Reconnect the electrical connectors between the cartridges **[H]** and fixtures. Reinstall cartridges **[H]** with screws.

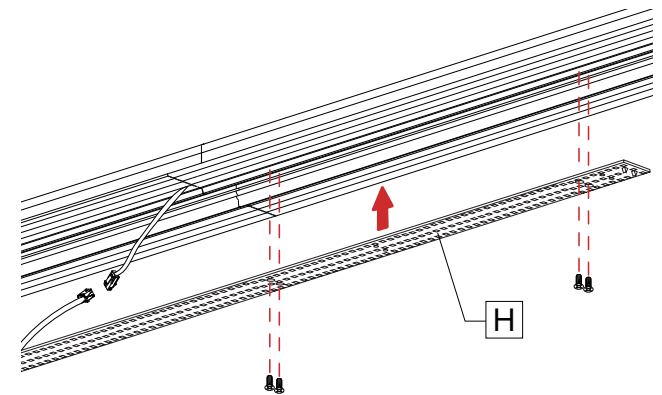

CURVIA SLIM


RECESSED - Drywall Mud Flange



CONTINUOUS RUN - REMODEL


6 REINSTALL LENSES AND TEMPORARY BRACKETS.

Reinstall lenses **[G]** and temporary brackets **[B]** to the fixtures.

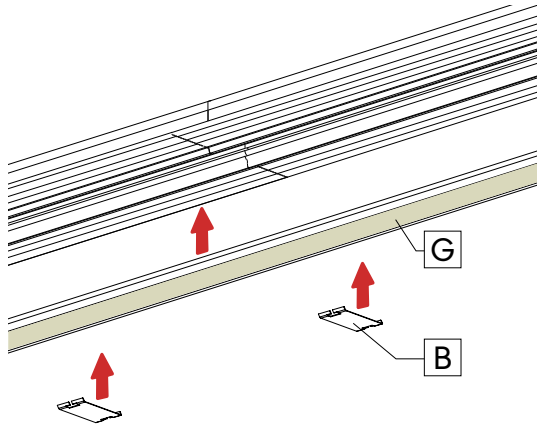


8 REMOVE TEMPORARY BRACKETS.

Once the fixtures are attached to the ceiling, remove the temporary brackets **[B]**.

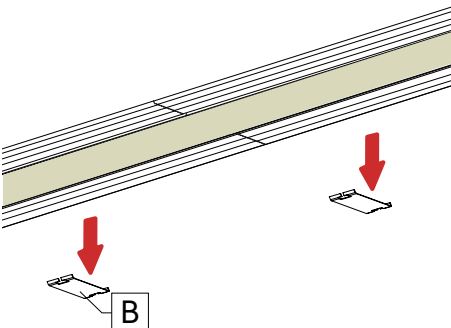

7 INSTALL FIXTURES.


Insert the fixtures **[A]** and **[J]** into the pre-cut hole in the drywall and fasten drywall screws **[D]** through the obround holes of the flanges. Follow steps 2 and 7 from the continuous run instructions for all other fixtures in the run.

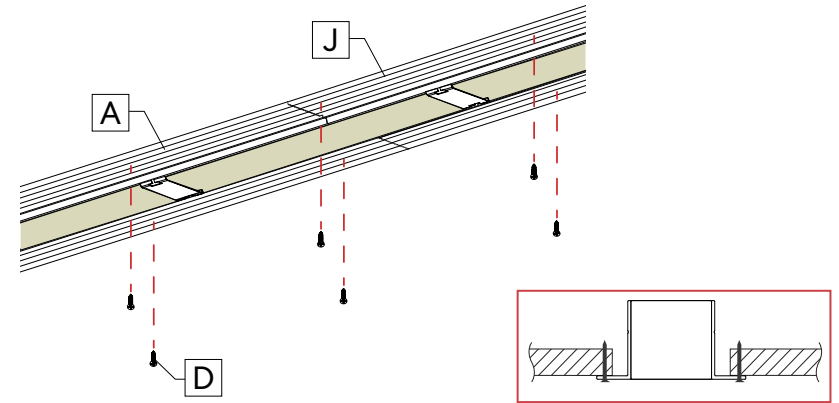

9 FINISH INSTALLATION.

Plaster and sand over mud flange **[E]** to create a smooth finish.

Once the mud is totally dry and painted, gently remove the cover **[F]**.

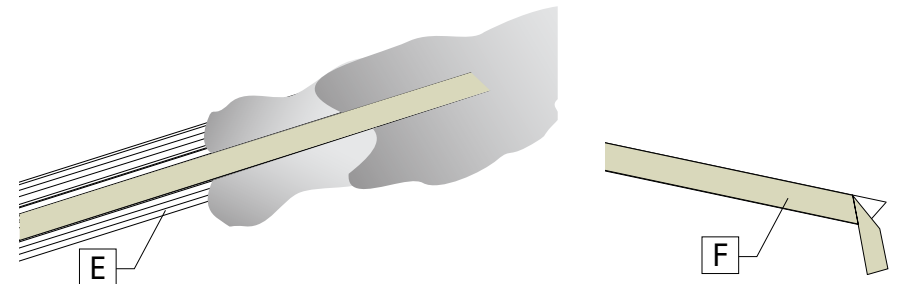

CURVIA SLIM

RECESSED - Drywall Mud Flange




SINGLE FIXTURE - NEW CONSTRUCTION

1 PREPARE CEILING.


Prepare the area where the fixture is going to be installed. Locate the threaded rods **[A]** according to the dimensions **[*]** given in the client drawings.

Note: Number of threaded rods may vary.

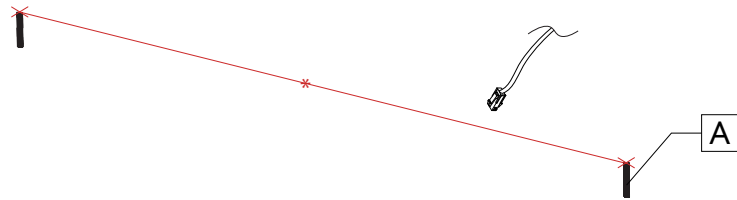


2 PREPARE FIXTURE.

Make sure the lens is installed on the fixture **[B]** and protected by a cover. The temporary brackets **[C]** should be aligned with the obround holes of the flanges.

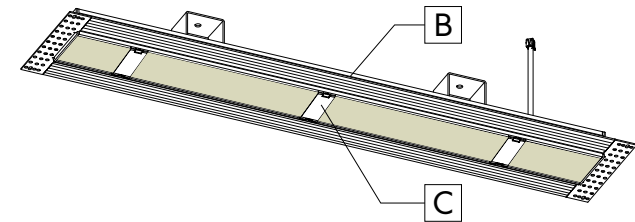


3 MAKE ELECTRICAL CONNECTIONS.

Connect the main AC power cable to the remote driver box. Then, connect the remote driver box DC cable to the fixture using the provided wire harness **[D]**.

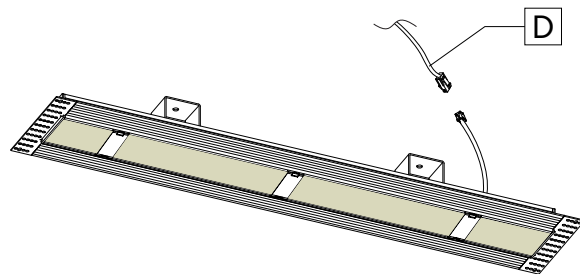

4 INSTALL FIXTURE TO THREADED RODS.

Align the threaded rods **[A]** with holes on top of fixture mounting bracket **[E]**. Use washers and tighten nuts to secure the fixture **[B]**.

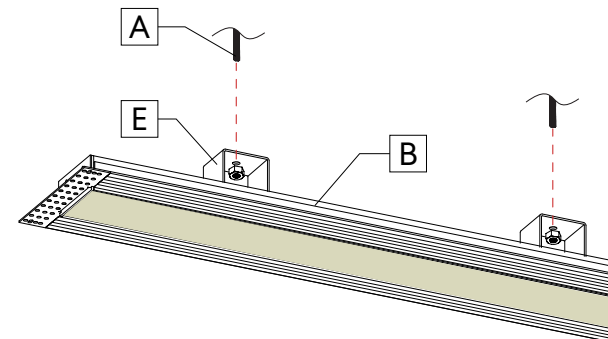

CURVIA SLIM

RECESSED - Drywall Mud Flange




SINGLE FIXTURE - NEW CONSTRUCTION

5 INSTALL CEILING.


Mount the drywall ceiling [F].

Note: Provide framing behind the drywall ceiling [F] around the fixture opening for secure mounting.

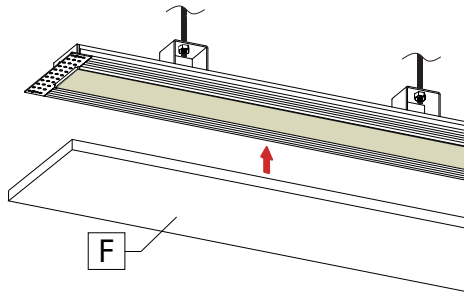



7 REMOVE TEMPORARY BRACKETS.

Once the fixture is attached to the drywall ceiling, remove the temporary brackets [C].

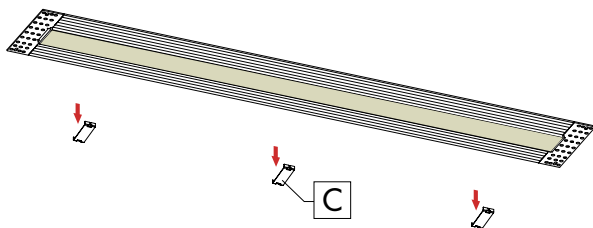

6 INSTALL FIXTURE ON CEILING.



Install the fixture [B] in the drywall ceiling and fasten drywall screws [G] through the obround holes of the flanges.

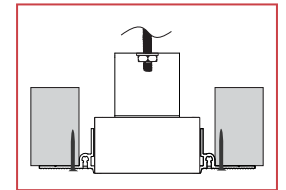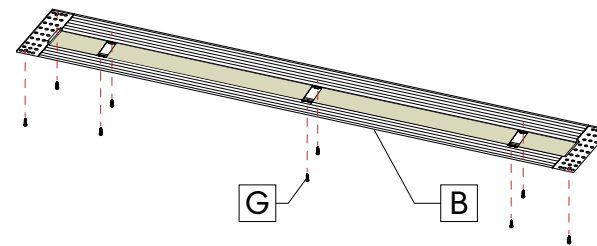

8 FINISH INSTALLATION.

Plaster and sand over mud flange [H] to create a smooth finish.

Once the mud is totally dry and painted, gently remove the cover [I].

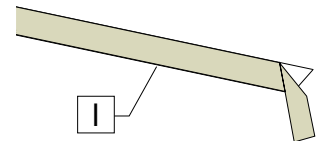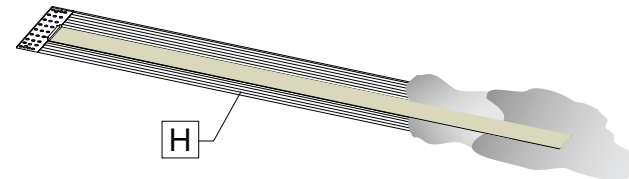

CURVIA SLIM

RECESSED - Drywall Mud Flange




CONTINUOUS RUN - NEW CONSTRUCTION

1 FOR A CONTINUOUS RUN, FOLLOW STEPS **1 - 3** AND **7** FROM THE SINGLE FIXTURE INSTRUCTIONS FOR ALL FIXTURES IN THE RUN.


2 REMOVE LENSES.

Remove lenses **[J]** from the fixtures and keep them in a safe place.

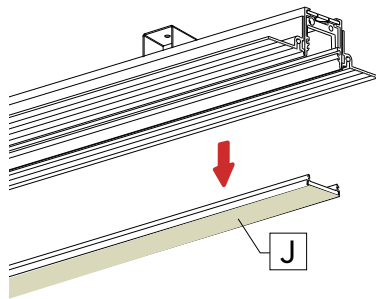


3 REMOVE CARTRIDGES.

Unscrew and remove cartridges **[K]** from fixtures. Disconnect the electrical connectors.

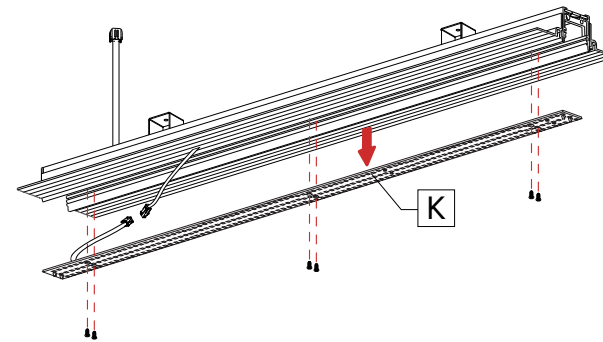

4 INSTALL FIXTURES TO THREADED RODS.


Align the threaded rods **[A]** with holes on top of fixture mounting brackets **[D]**.
Use washers and tighten nuts to secure the fixtures **[B]** and **[L]**.

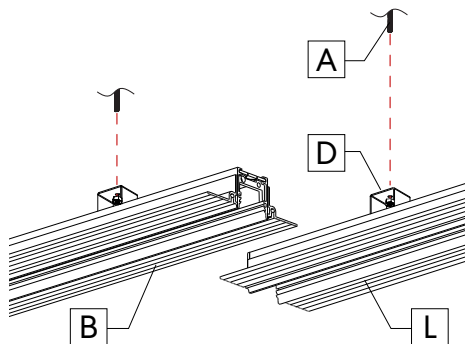

5 JOIN FIXTURES.

Unscrews the screws **[M]** from the fixtures.

Align the second fixture **[L]** to the first fixture **[B]**. Attach the two fixtures by fastening screws on the joiners.

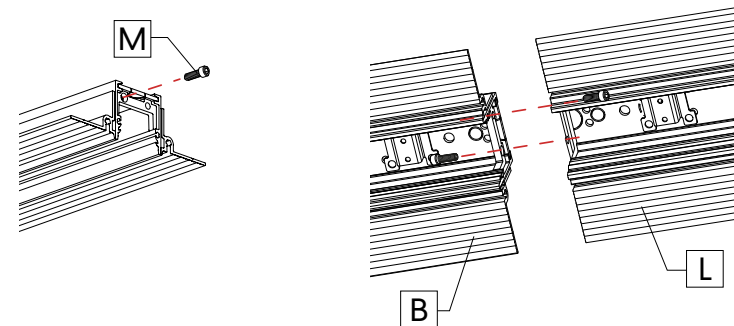

CURVIA SLIM

RECESSED - Drywall Mud Flange




CONTINUOUS RUN - NEW CONSTRUCTION

6 INSTALL CEILING.


Mount the drywall ceiling [F].

Note: Provide framing behind the drywall ceiling [F] around the fixture opening for secure mounting.

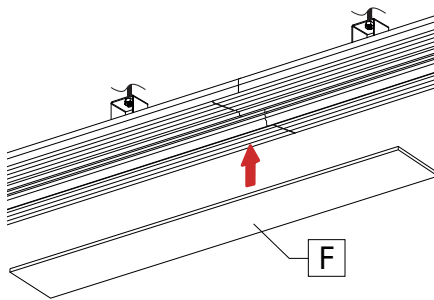


7 REINSTALL CARTRIDGES.

Reconnect the electrical connectors between the cartridges [K] and fixtures. Reinstall cartridges [K] with screws.

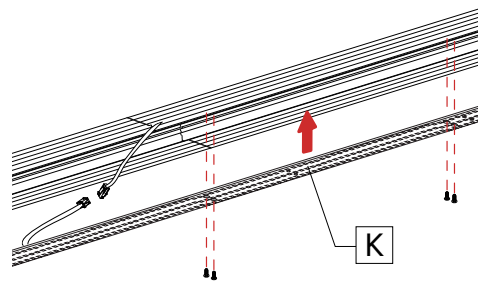


8 REINSTALL LENSES AND TEMPORARY BRACKETS.

Reinstall lenses [J] and temporary brackets [C] to the fixtures.

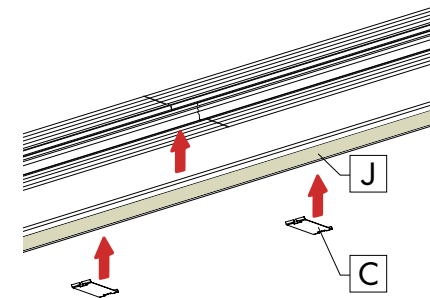


9 INSTALL FIXTURES ON CEILING.

Install the fixtures [B] and [L] in the drywall ceiling and fasten drywall screws [G] through the obround holes of the flanges. Follow steps 2 and 9 from the continuous run instructions for all other fixtures in the run.

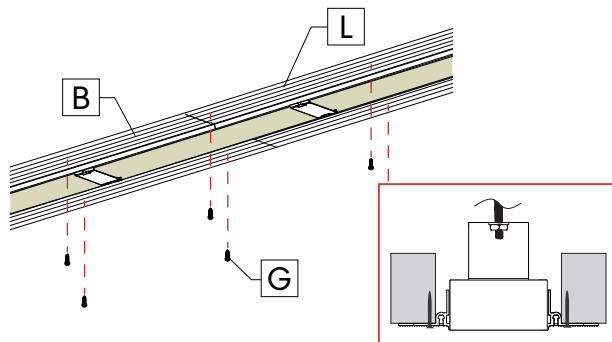

10 REMOVE TEMPORARY BRACKETS.

Once the fixtures are attached to the ceiling, remove the temporary brackets [C].

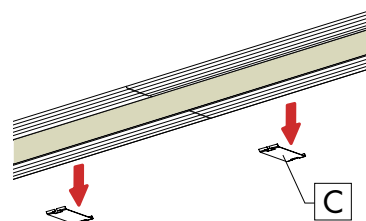

11 FINISH INSTALLATION.

Plaster and sand over mud flange [H] to create a smooth finish.

Once the mud is totally dry and painted, gently remove the cover [I].

