

INSTALLATION INSTRUCTIONS



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Disconnect power before installation or servicing.



Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.



Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.



Wire dimming conductors as Class 1.



A luminaire with more than one power supply connection means shall be connected to only one branch circuit.



For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.



For luminaires installed in wet locations, properly seal all mounting and electrical points.



Warranty claims will not be accepted if incorrect driver or light element is used.

CURVIA SLIM

RECESSED - Trim



SINGLE FIXTURE



For electrical connections, please refer to the [wiring diagram guide](#).



For remote driver box installation instructions, please refer to the [remote driver installation sheet](#).




Shown with Curvia Slim 1. Applicable to Curvia Slim 2.



Shown with pattern. Applicable to ring and shapes.


1 PREPARE CEILING OPENING.

Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [*] given in the client drawings.

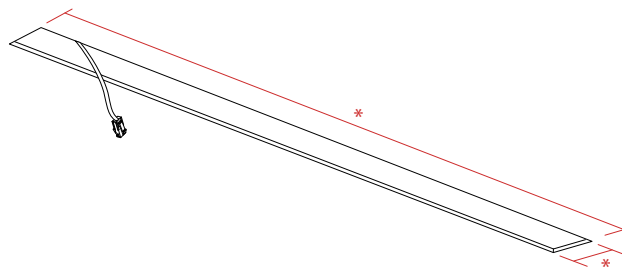


2 REMOVE LENS.

Remove the lens [A] from the fixture [B] using the provided lens tool and keep them in a safe place.

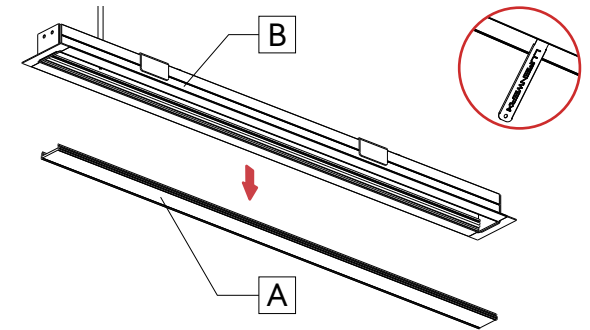

3 REMOVE CARTRIDGE.


Unscrew and remove cartridge [C] from the fixture [B]. Disconnect the electrical connectors.

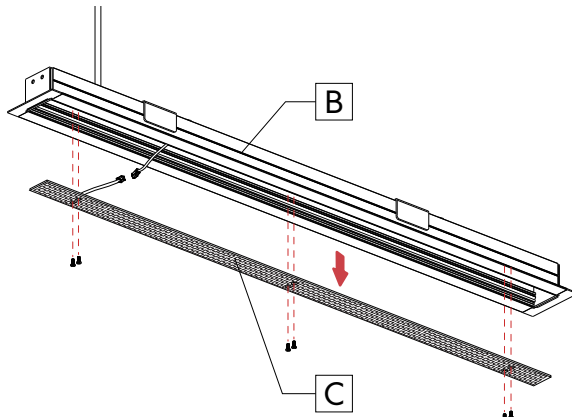

4 INSTALL BRACKETS TO FIXTURE.

Remove the screws [D] from the brackets [E]. Install the brackets [E] on the fixture and secure them by putting the screws [D] back in place.

Note: Make sure that the screws are not overtightened and the brackets [E] don't rotate in place.

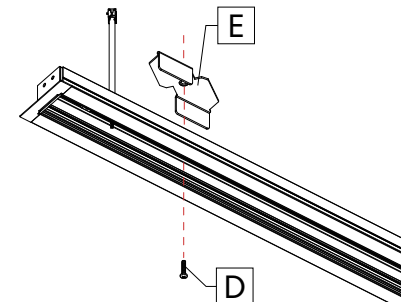

CURVIA SLIM


RECESSED - Trim



SINGLE FIXTURE


5 MAKE ELECTRICAL CONNECTIONS.

Connect the main AC power cable to the remote driver box. Then, connect the remote driver box DC cable to the fixture using the provided wire harness [F].

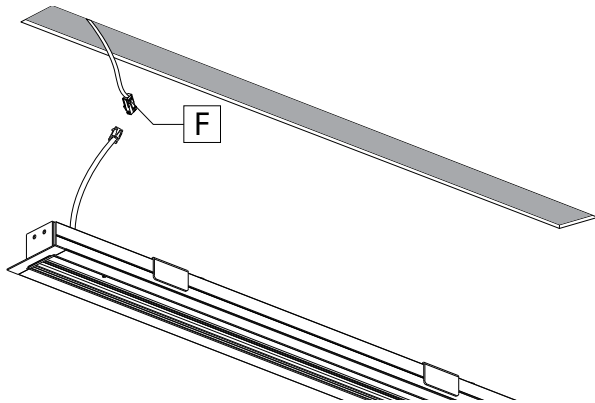


7 REINSTALL CARTRIDGE.

Reconnect the electrical connectors between the cartridge [C] and the fixture [B]. Reinstall the cartridges [C] with screws.

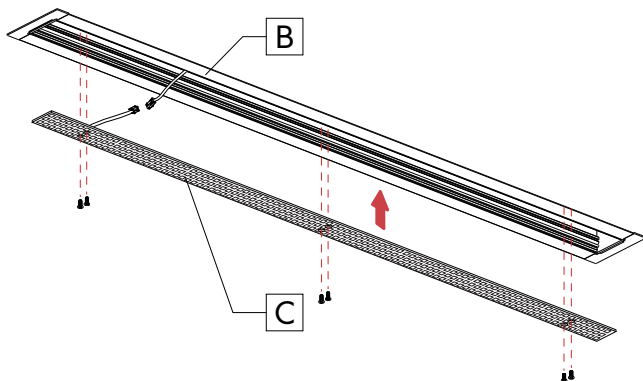


6 INSTALL FIXTURE TO CEILING.

Insert the fixture [B] into the pre-cut hole in the drywall. Tighten the screws [D] to rotate the brackets [E] in place. Tighten the screws [D] again to lock into place.

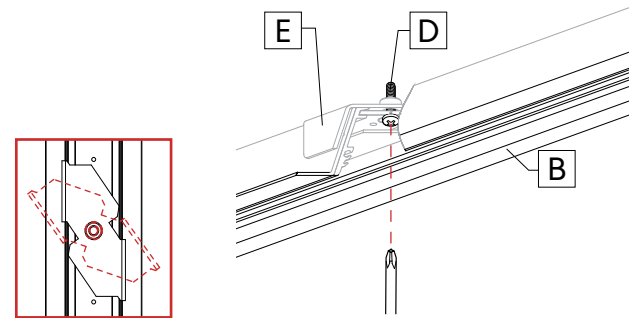

8 REINSTALL LENS.

Put the the lens [A] back in place.

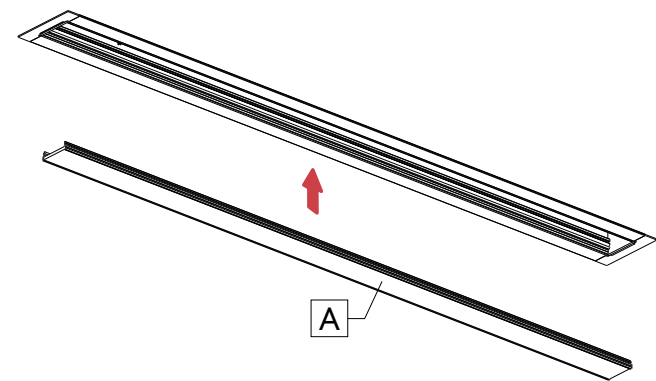

CURVIA SLIM

RECESSED - Trim




CONTINUOUS RUN

1 FOR A CONTINUOUS RUN, FOLLOW STEPS **1 - 4** FROM THE SINGLE FIXTURE INSTRUCTIONS FOR ALL FIXTURES IN THE RUN.

2 FOLLOW STEPS **5 - 6** FROM THE SINGLE FIXTURE INSTRUCTIONS FOR THE FIRST FIXTURE, THEN:

3 INSTALL SECOND FIXTURE TO CEILING.


Insert the second fixture **[G]** into the pre-cut hole in the drywall. Tighten the screws **[D]** to rotate the brackets **[E]** in place. Tighten the screws **[D]** again to lock into place.

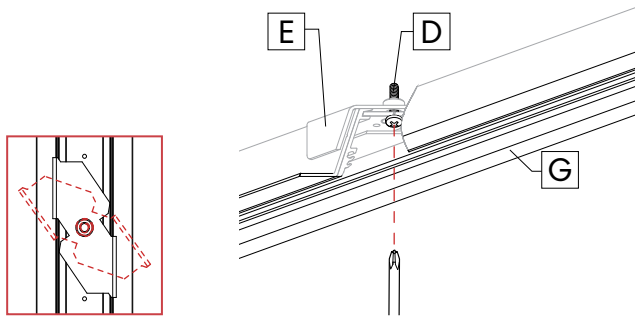

4 JOIN FIXTURES.


Unscrew the screws **[H]** from the fixtures.

Align the second fixture **[G]** to the first fixture **[B]**. Attach the two fixtures by fastening screws on the joiners.

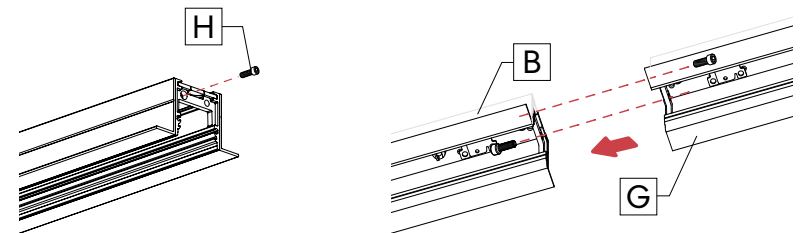


5 INSTALL FIXTURES.

Repeat steps 3 - 4 for all other fixtures in the run.

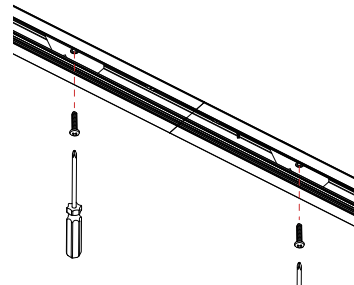

6 REINSTALL CARTRIDGES.

Reconnect the electrical connectors between the cartridges **[C]** and fixtures. Reinstall the cartridges **[C]** with screws.

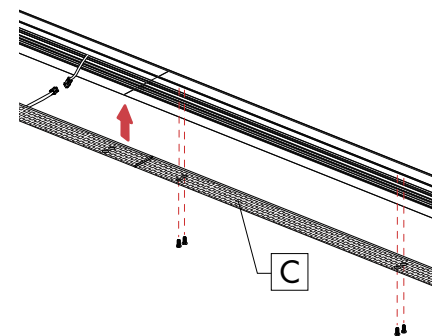

CURVIA SLIM

RECESSED - Trim



CONTINUOUS RUN

7 REINSTALL LENSES.

Put the lenses **[A]** back in place.

