Lumenwerx

INSTALLATION INSTRUCTIONS

⚠ This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

⚠ Disconnect power before installation or servicing.

⚠ Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.

⚠ Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.

⚠ Wire dimming conductors as Class 1.

⚠ A luminaire with more than one power supply connection means shall be connected to only one branch circuit.

⚠ For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.

⚠ For luminaires installed in wet locations, properly seal all mounting and electrical points.

⚠ Warranty claims will not be accepted if incorrect driver or light element is used.

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC.
Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

CURVIA SLIM SEAL
RECESSED - Drywall Mud Flange

Lumenwerx

SINGLE FIXTURE

For electrical connections, please refer to the wiring diagram guide.


For remote driver box installation instructions, please refer to the remote driver installation sheet.

Shown with Curvia Slim Seal 2. Applicable to Curvia Slim Seal 1.

Shown with pattern. Applicable to ring and shapes.


1 PREPARE CEILING OPENING.

Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions **[*]** given in the client drawings.

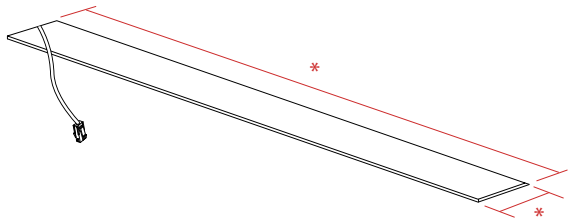


2 MAKE ELECTRICAL CONNECTIONS.

Connect the main AC power cable to the remote driver box. Then, connect the remote driver box DC cable to the fixture using the provided wire harness **[A]**.

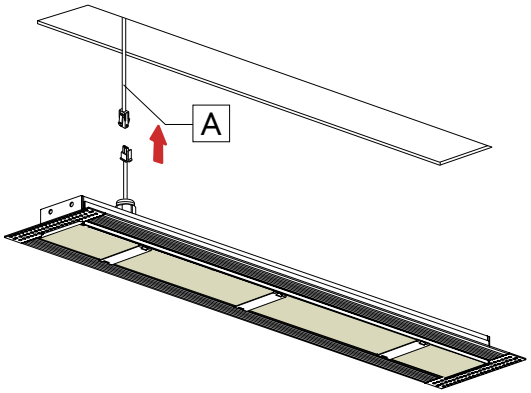


3 INSTALL FIXTURE.

Insert the fixture **[B]** into the pre-cut hole in the drywall and fasten drywall screws **[C]** through the obround holes of the flanges.

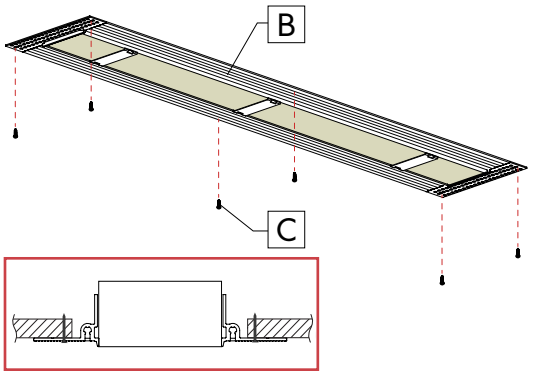


4 REMOVE TEMPORARY BRACKETS.

Once the fixture is attached to the ceiling, remove the temporary brackets **[D]**.

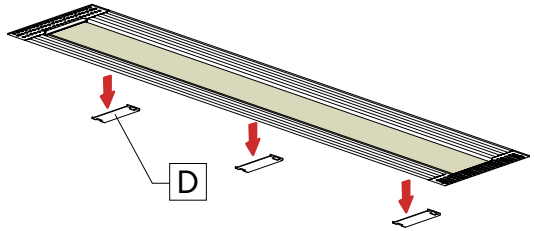

5 FINISH INSTALLATION.

Plaster and sand over mud flange **[E]** to create a smooth finish. Once the mud is totally dry and painted, gently remove the cover **[F]**.

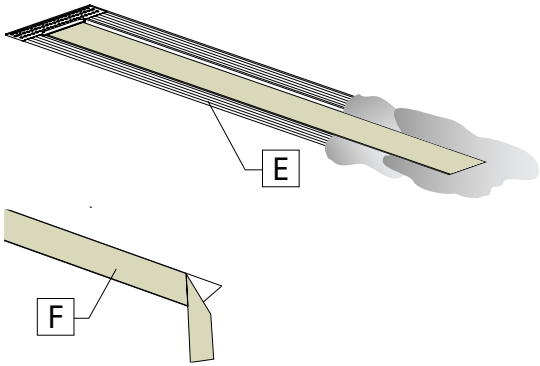

CURVIA SLIM SEAL
RECESSED - Drywall Mud Flange


Lumenwerx

CONTINUOUS RUN

1 FOR A CONTINUOUS RUN, FOLLOW STEPS **1 - 2** AND **4** FROM THE SINGLE FIXTURE INSTRUCTIONS FOR ALL IN THE RUN.

2 REMOVE LENSES.

Remove the lenses **[G]** from the fixtures and keep them in a safe place.

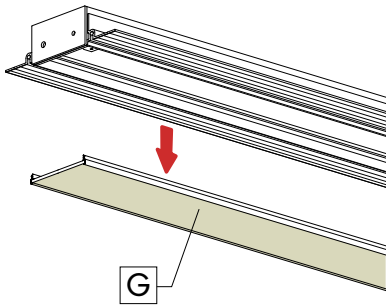


3 REMOVE CARTRIDGES.

Unscrew and remove cartridges **[H]** from the fixture. Disconnect the electrical connectors.

Note: For IP64, skip to step 4.

IP54 ONLY

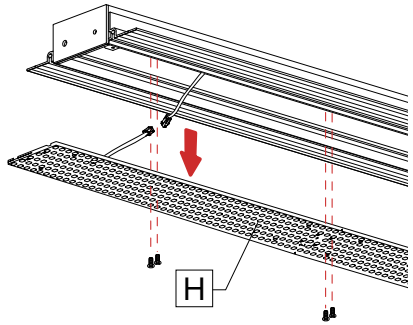


4 JOIN FIXTURES.


Unscrew the screws **[I]** from the fixtures.

Align the second fixture **[J]** to the first fixture **[B]**. Attach the two fixtures by fastening screws on the joiners.

IP64

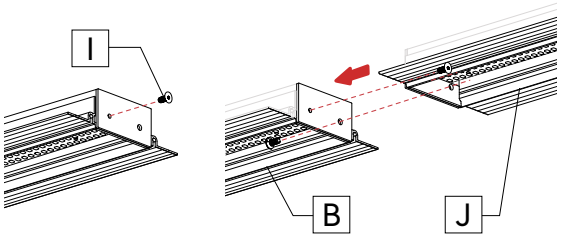

IP54

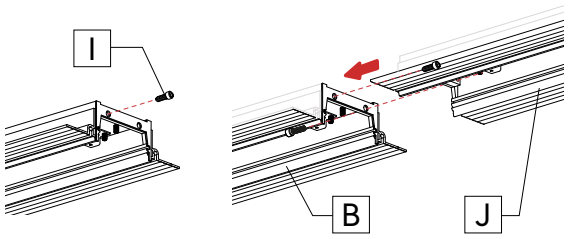


5 REINSTALL CARTRIDGES.

Reconnect the electrical connectors between the cartridges **[H]** and fixtures. Reinstall cartridges **[H]** with screws.

Note: For IP64, skip to step 6.

IP54 ONLY

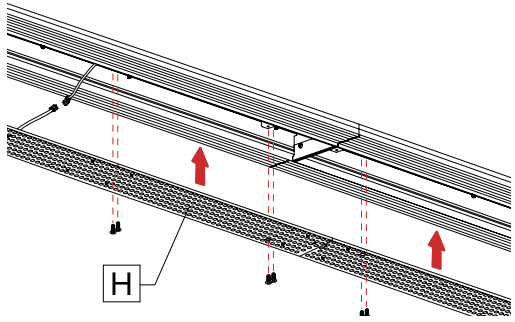

Intertek

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC.
Lumenwerx ULC. reserves the right to change or modify product specifications without notification.


CURVIA SLIM SEAL
RECESSED - Drywall Mud Flange


Lumenwerx

CONTINUOUS RUN

6 REINSTALL LENSES AND TEMPORARY BRACKETS.


Bend the lenses **[G]** slightly and insert one side at a time to compress the end cap gasket **[K]** to create a proper seal. Reinstall temporary brackets **[D]**.

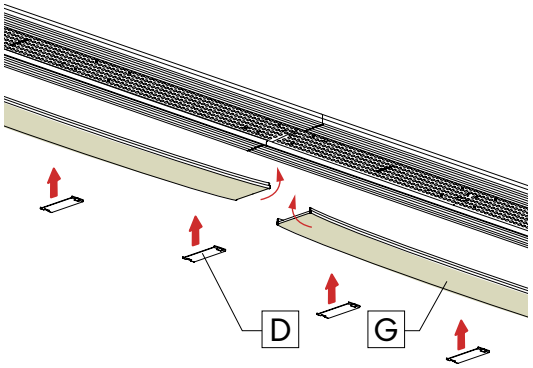


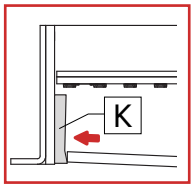

7 INSTALL FIXTURES.


Insert the fixtures into the pre-cut hole in the drywall and fasten drywall screws **[C]** through the obround holes of the flanges.

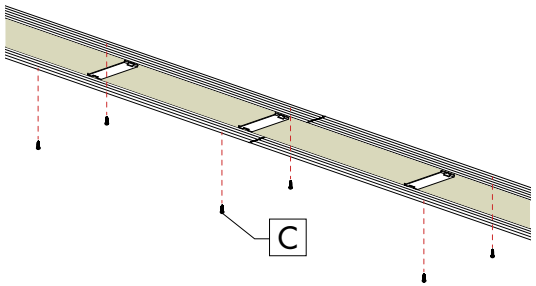

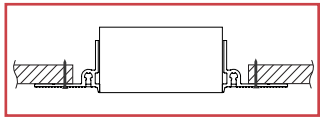


8 REMOVE TEMPORARY BRACKETS.


Once the fixtures are attached to the ceiling, remove the temporary brackets **[D]**.

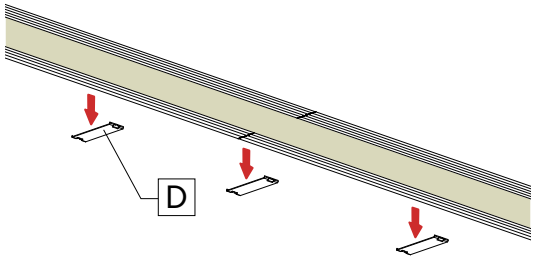

9 FINISH INSTALLATION.

Plaster and sand over mud flange **[E]** to create a smooth finish. Once the mud is totally dry and painted, gently remove the cover **[F]**.

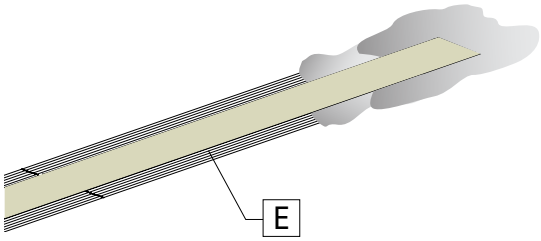

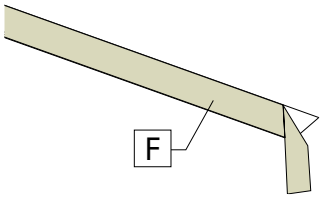

Intertek

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC.
Lumenwerx ULC. reserves the right to change or modify product specifications without notification.