

INSTALLATION INSTRUCTIONS

 This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

 Disconnect power before installation or servicing.

 Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.

 Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.

 Wire dimming conductors as Class 1.

 A luminaire with more than one power supply connection means shall be connected to only one branch circuit.

 For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.

 For luminaires installed in wet locations, properly seal all mounting and electrical points.

 Warranty claims will not be accepted if incorrect driver or light element is used.


CYLINDER / CUBOID

Surface




INSTALLATION INSTRUCTIONS


FLAT CANOPY

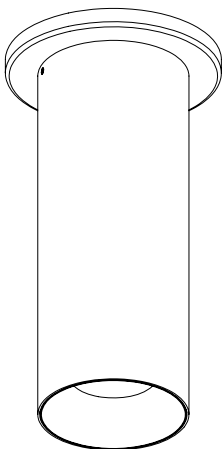

CONDUIT FEED CANOPY

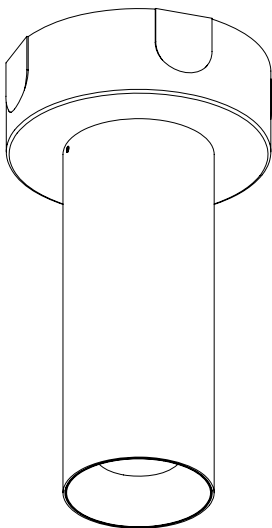

DIRECT MOUNT
NEW CONSTRUCTION

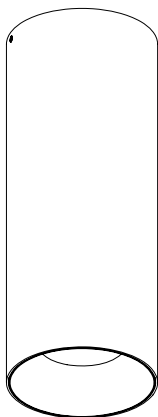

DIRECT MOUNT
REMODEL



Go to the section specific to your suspension option.



For electrical connections,
please refer to the [wiring
diagram guide](#).



For remote driver box
installation instructions,
please refer to the [remote
driver installation sheet](#).



Shown with round canopy.
Applicable to square canopy.

INDEX

Flat canopy	P.3
Conduit feed canopy	P.8
Direct mount - New construction.....	P.13
Direct mount - Remodel.....	P.18




CYLINDER / CUBOID

Surface



FLAT CANOPY

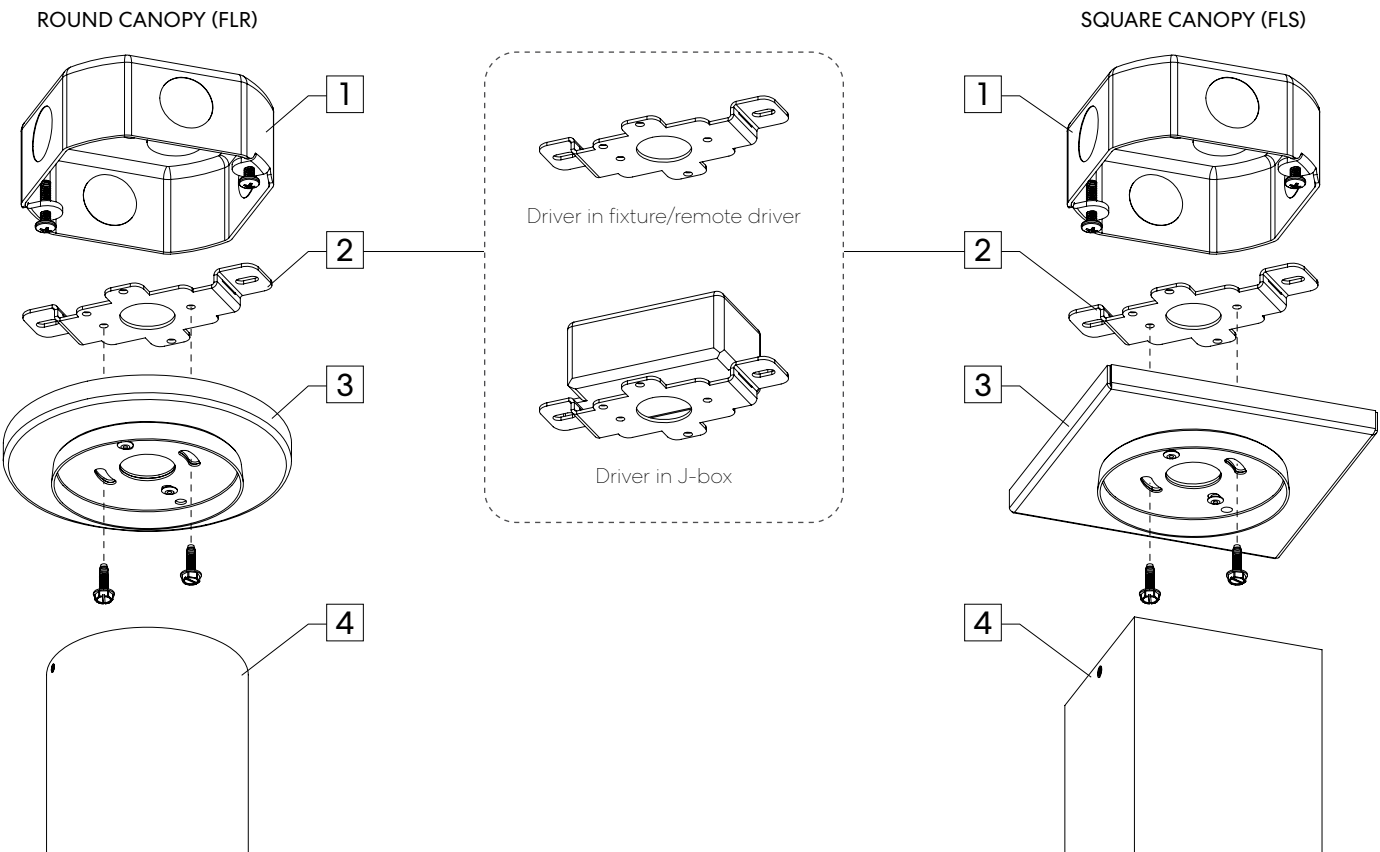

ITEMS LIST

1	Standard J-box (by others)
2	Crossbar
3	Flat canopy
4	Housing assembly

TOOLS REQUIRED

- Flat head screwdriver
- Phillips screwdriver
- Allen key 5/64"

CANOPY SIZE

ROUND	Ø 4 1/2"
	Height 3/8"
SQUARE	4 1/2" X 4 1/2"
	Height 3/8"



Instructions are shown with round canopy.
Applicable to square canopy.




CYLINDER / CUBOID

Surface




FLAT CANOPY

1 DETACH CANOPY ASSEMBLY.

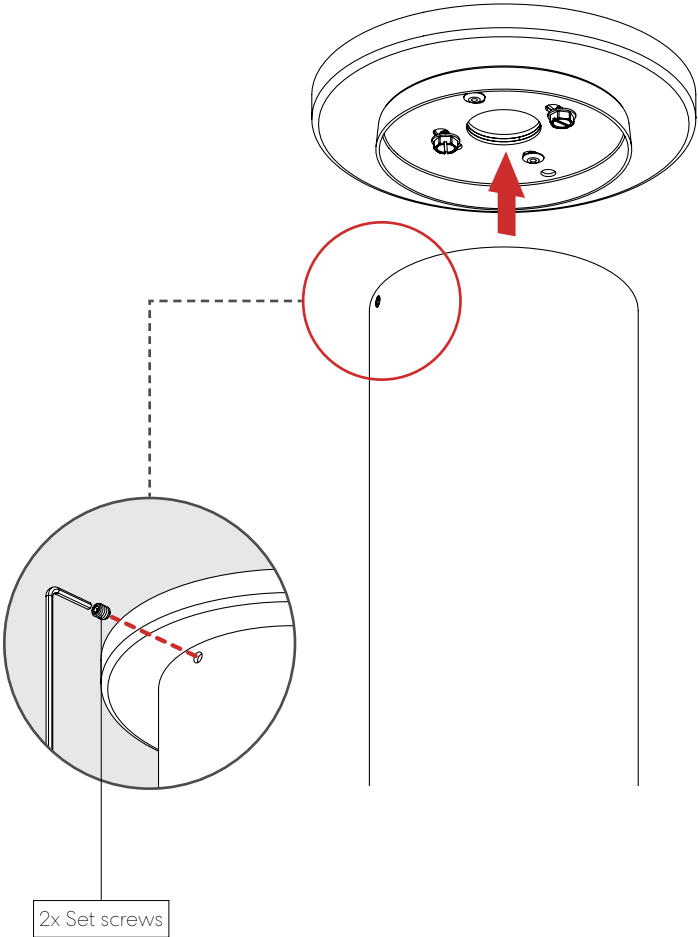

2 DETACH CROSSBAR.

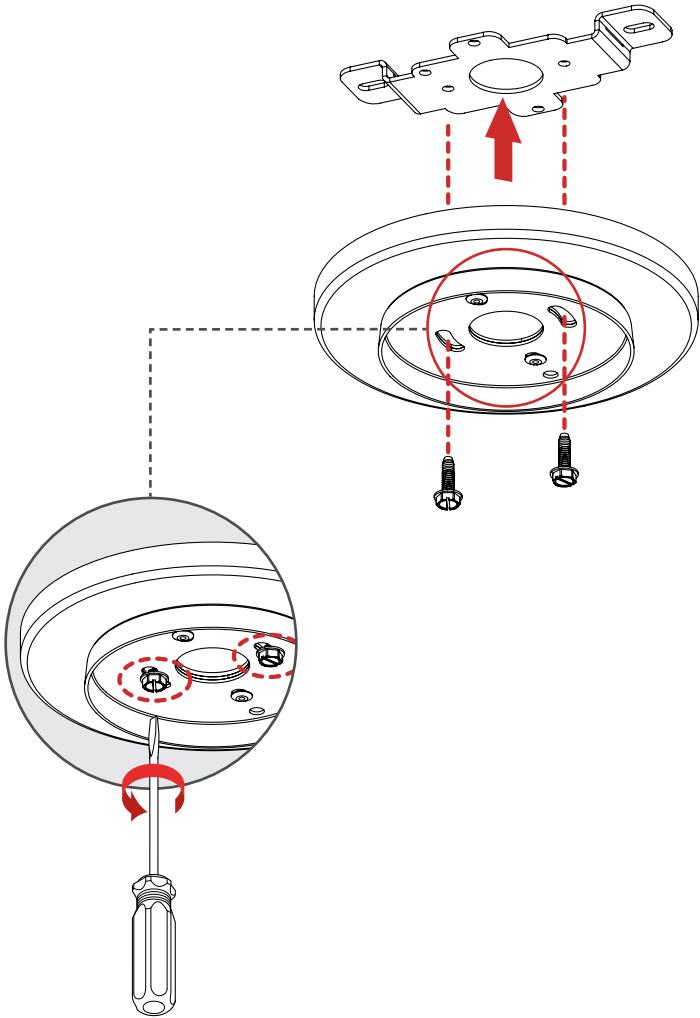

CYLINDER / CUBOID


Surface



FLAT CANOPY


3 MAKE ELECTRICAL CONNECTIONS. DRIVER IN J-BOX ONLY

Note: If the driver is in the fixture or remote, skip to step 4.

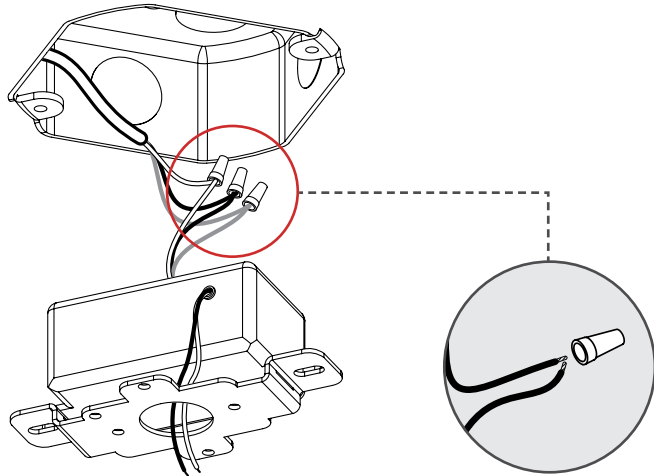

Note: Number of wires may vary.

4 INSTALL CROSSBAR.

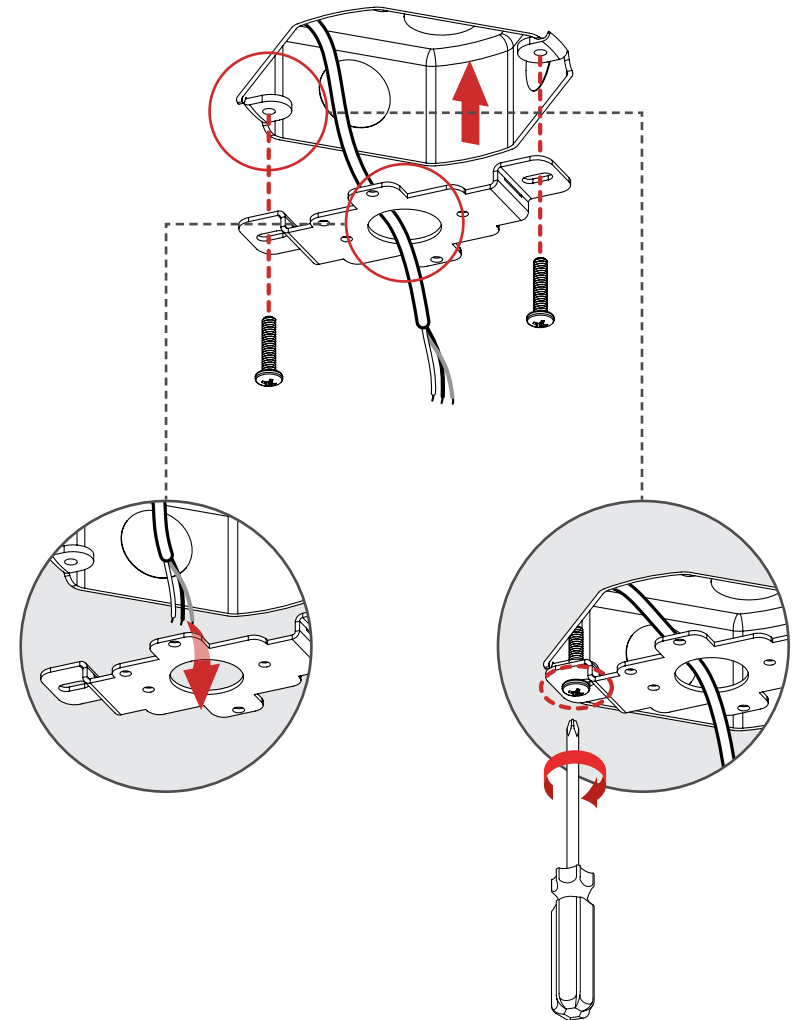


CYLINDER / CUBOID

Surface




FLAT CANOPY

5 INSTALL CANOPY ASSEMBLY.

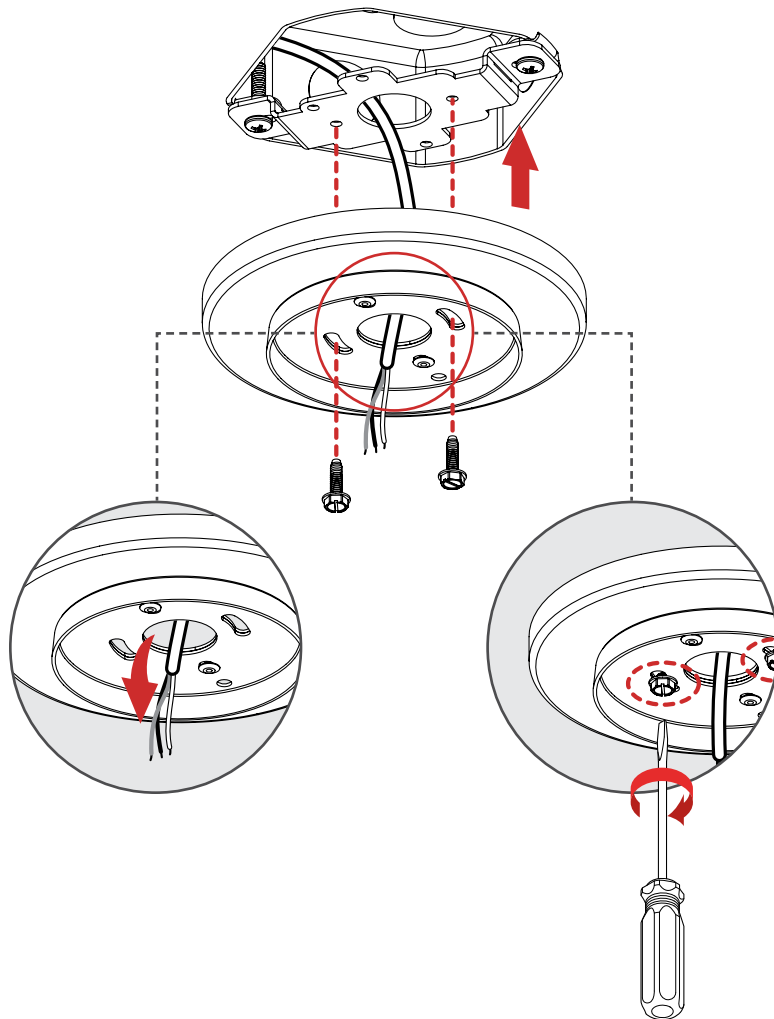

6 MAKE ELECTRICAL CONNECTIONS.

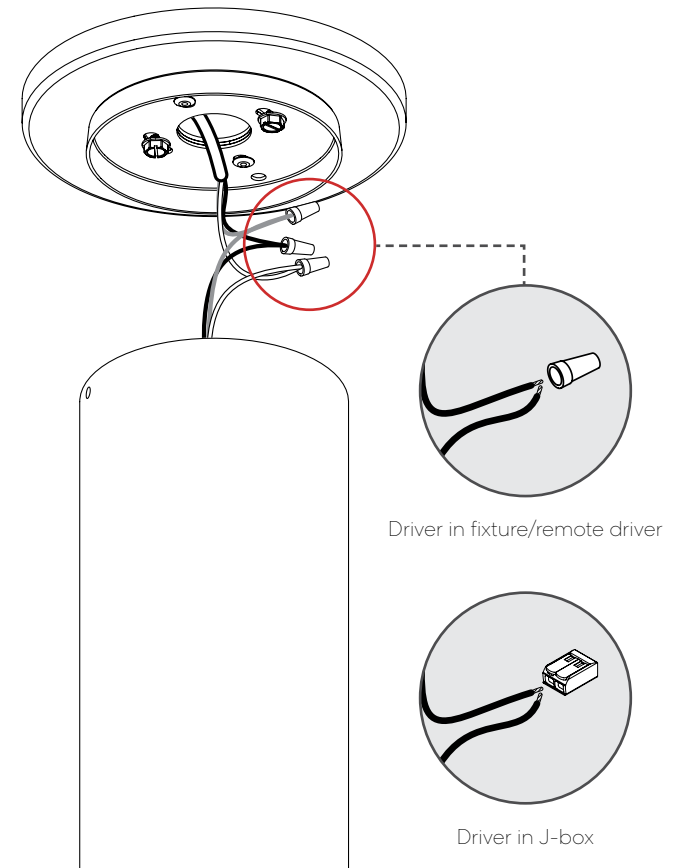

Note: Number of wires may vary.


CYLINDER / CUBOID

Surface



FLAT CANOPY

7 INSTALL HOUSING ASSEMBLY.

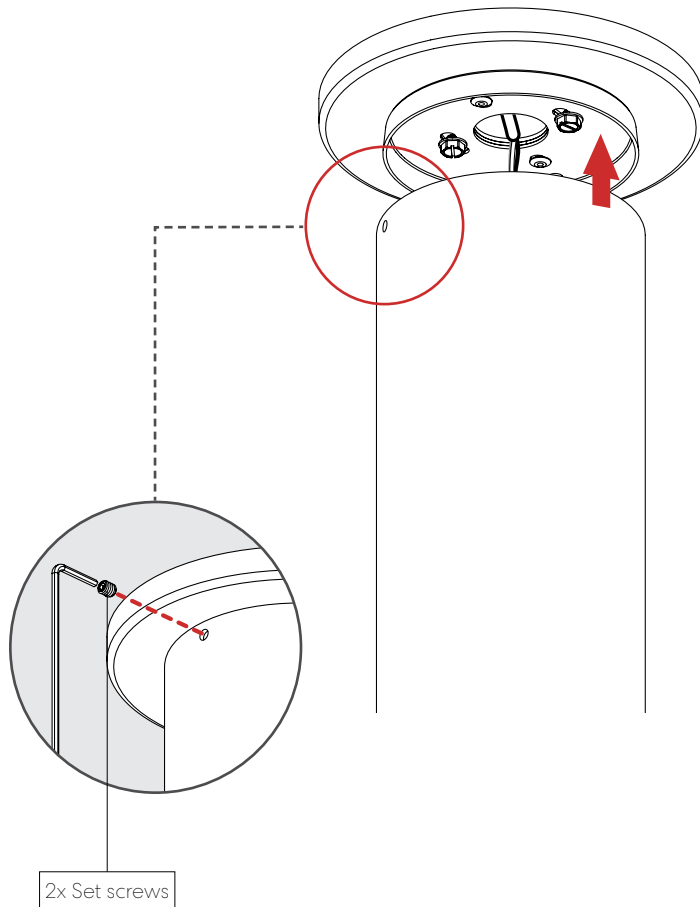


CYLINDER / CUBOID

Surface



CONDUIT FEED CANOPY

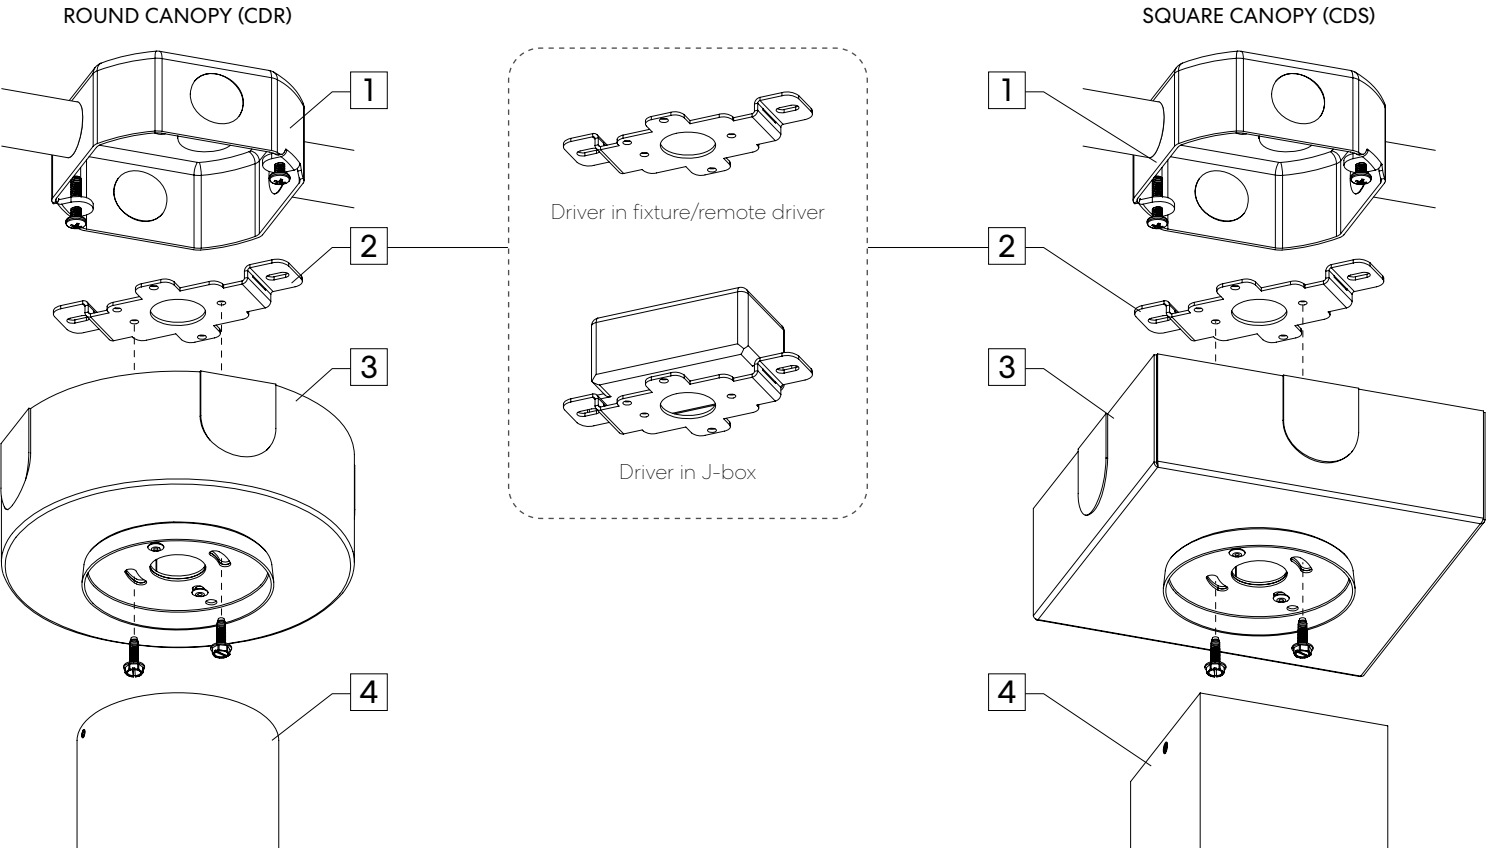

ITEMS LIST

1	Standard J-box (by others)
2	Crossbar
3	Conduit canopy
4	Housing assembly

TOOLS REQUIRED

- Flat head screwdriver
- Phillips screwdriver
- Allen key 5/64"

CANOPY SIZE

ROUND	Ø 5 1/2"
	Height 1 15/16"
SQUARE	5 1/2" X 5 1/2"
	Height 1 15/16"



Instructions are shown with round canopy.
Applicable to square canopy.




CYLINDER / CUBOID

Surface




CONDUIT FEED CANOPY

1 DETACH CANOPY ASSEMBLY.

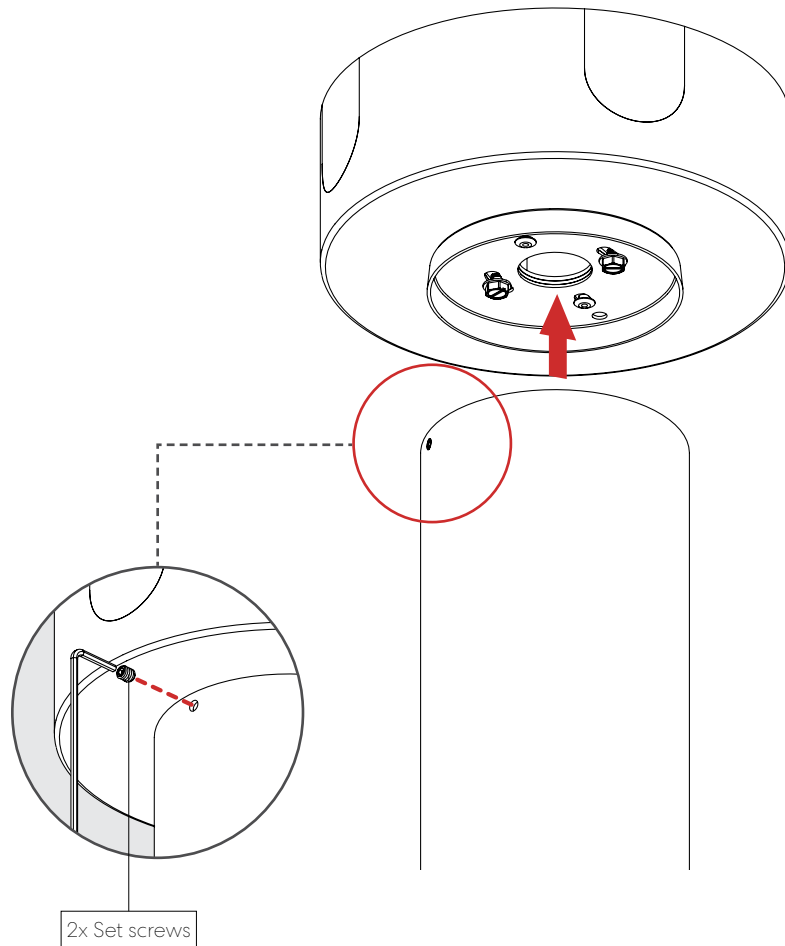

2 DETACH CROSSBAR.

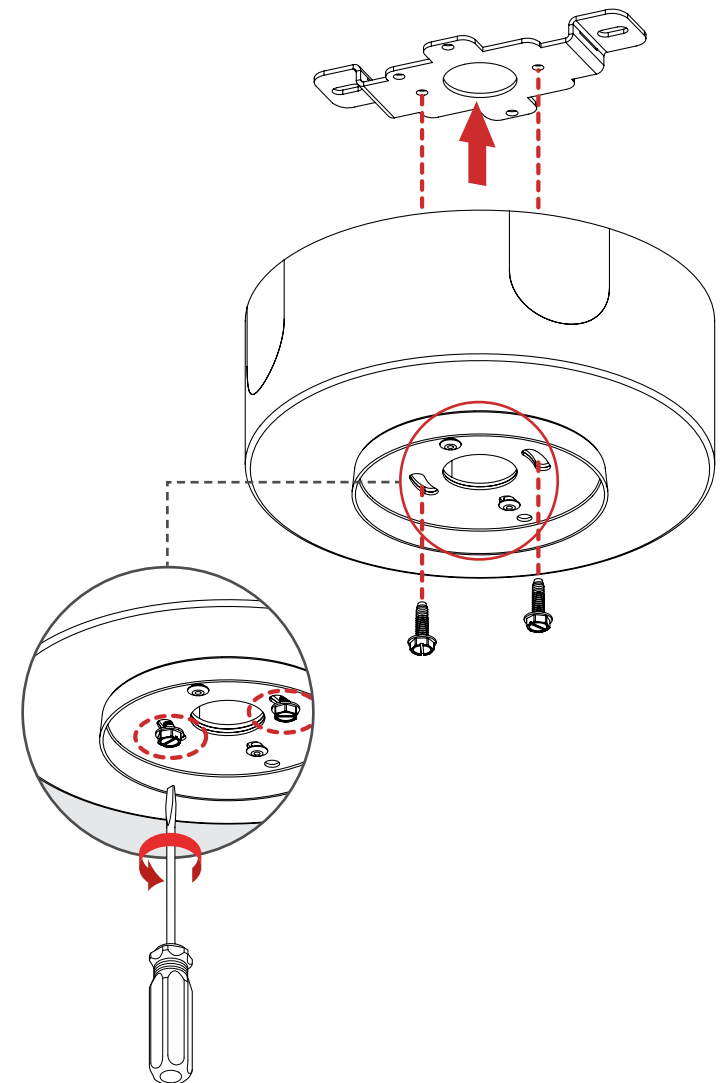

CYLINDER / CUBOID


Surface



CONDUIT FEED CANOPY


3 MAKE ELECTRICAL CONNECTIONS. DRIVER IN J-BOX ONLY

Note: If the driver is in the fixture or remote, skip to step 4.

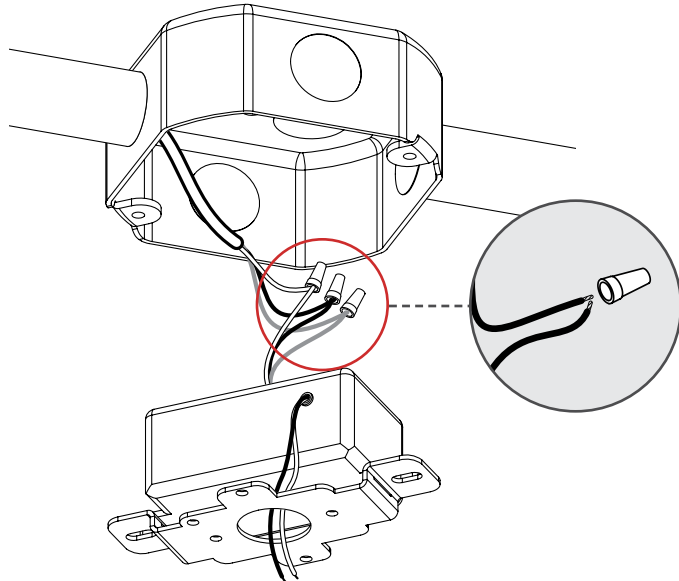

Note: Number of wires may vary.

4 INSTALL CROSSBAR.

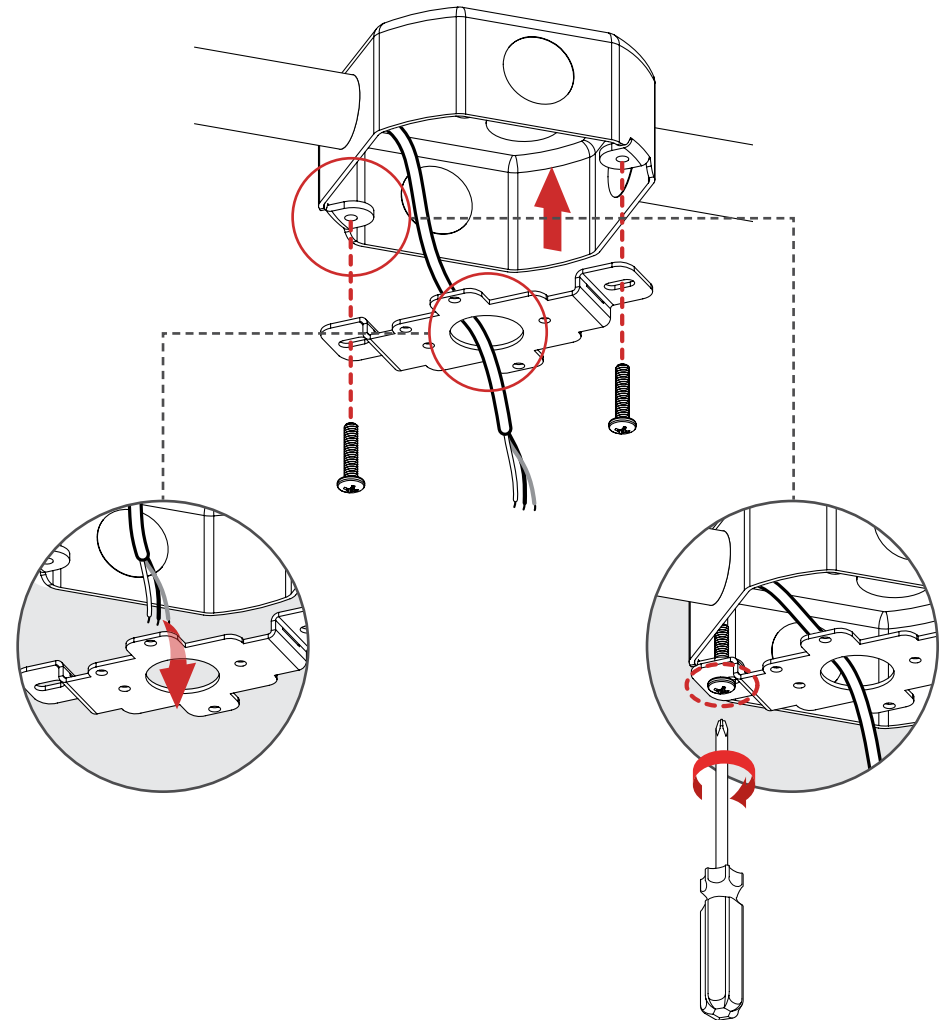


CYLINDER / CUBOID

Surface




CONDUIT FEED CANOPY

5 REMOVE KNOCKOUTS.

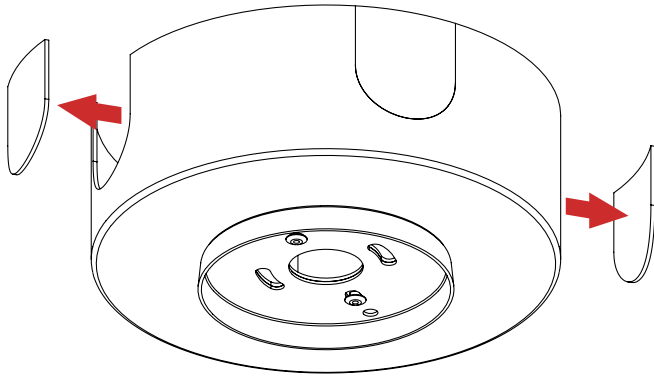

6 INSTALL CANOPY ASSEMBLY.

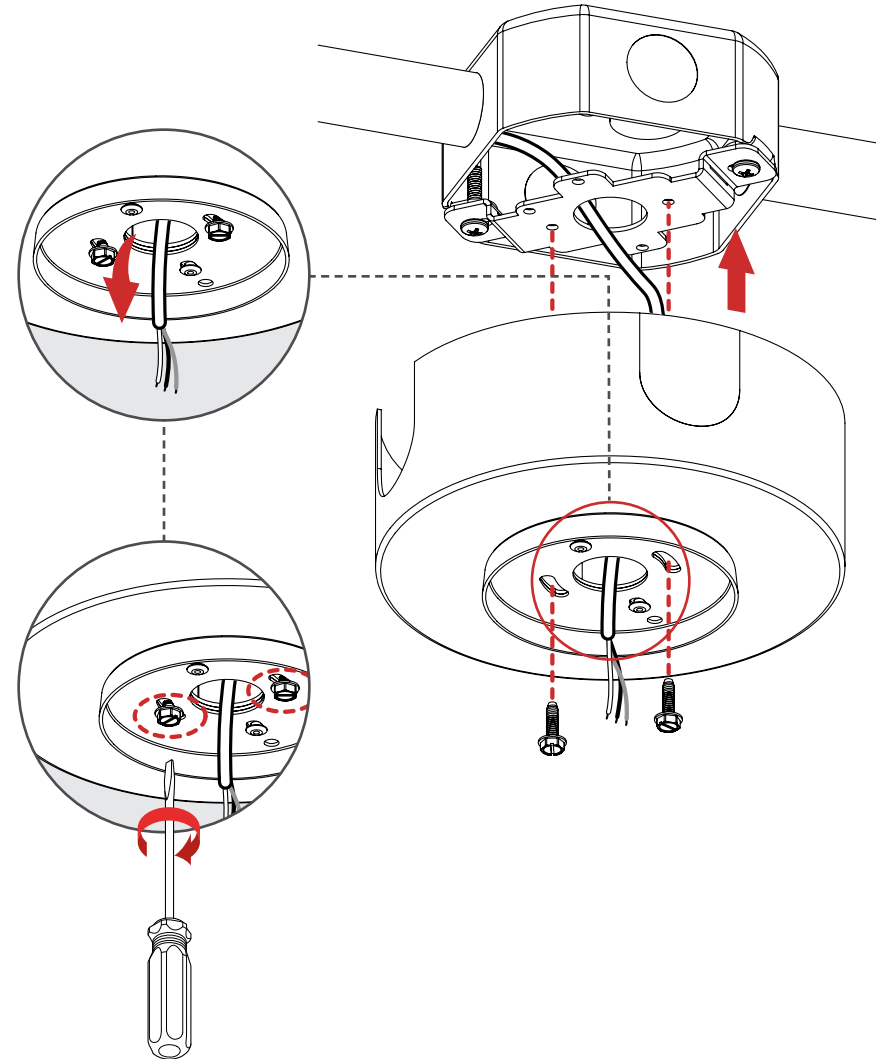


CYLINDER / CUBOID

Surface




CONDUIT FEED CANOPY

7 MAKE ELECTRICAL CONNECTIONS.

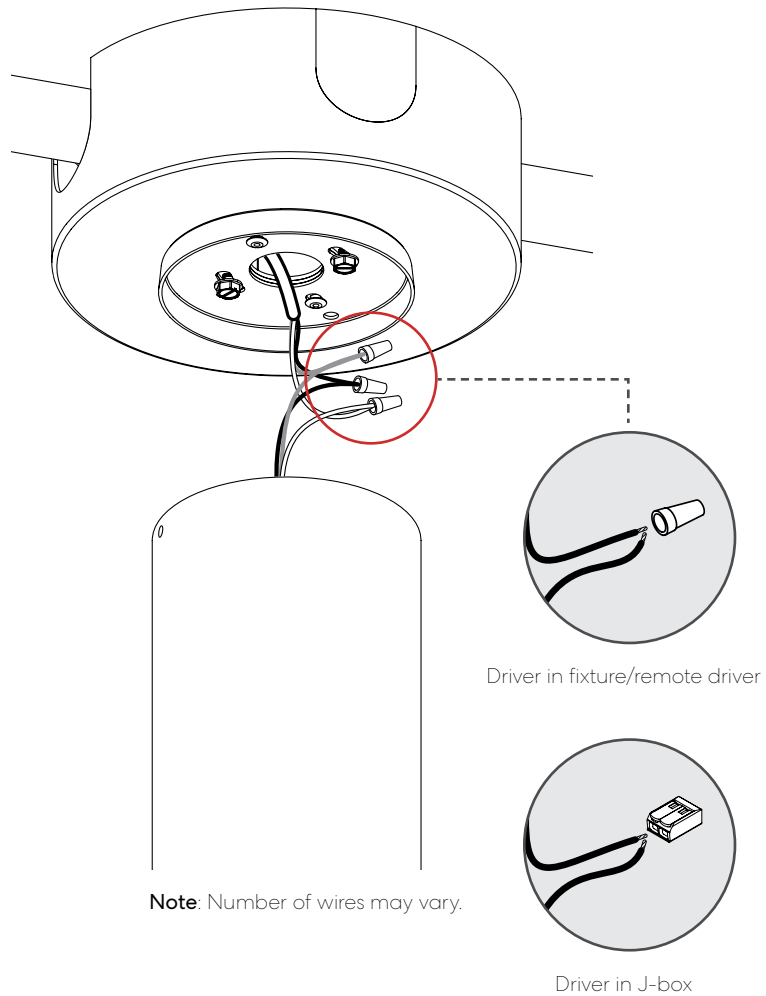

8 INSTALL HOUSING ASSEMBLY.

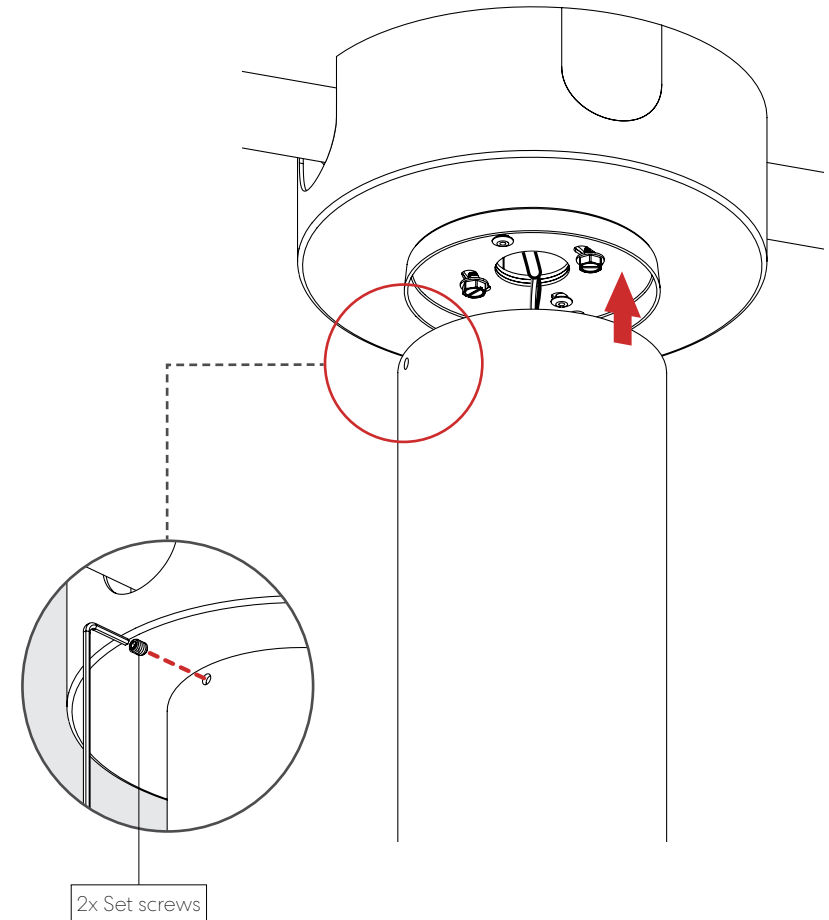


CYLINDER / CUBOID

Surface



DIRECT MOUNT - NEW CONSTRUCTION

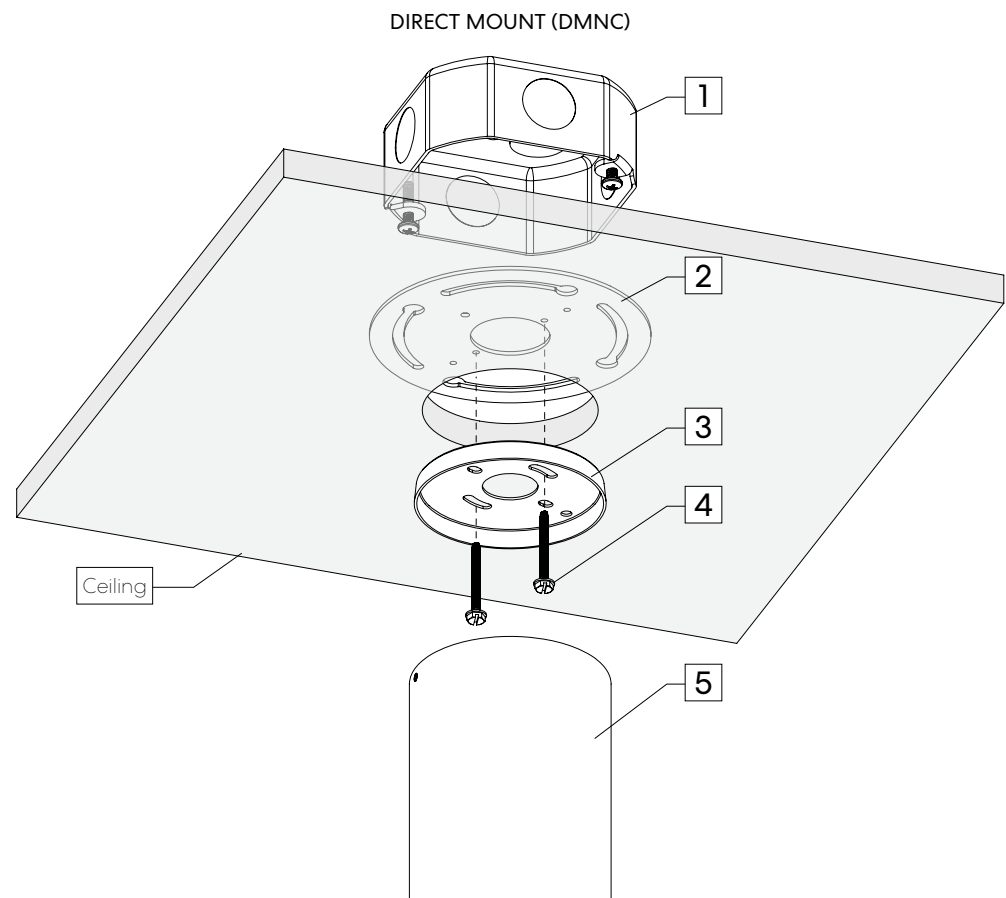

ITEMS LIST

1	Standard J-box (by others)
2	Mounting plate
3	Adapter piece
4	6-32 screw
5	Housing assembly

TOOLS REQUIRED

- Flat head screwdriver
- Phillips screwdriver
- Allen key 5/64"
- Adjustable hole cutter


CYLINDER / CUBOID

Surface




DIRECT MOUNT - NEW CONSTRUCTION

1 INSTALL JUNCTION BOX AND MOUNTING PLATE.

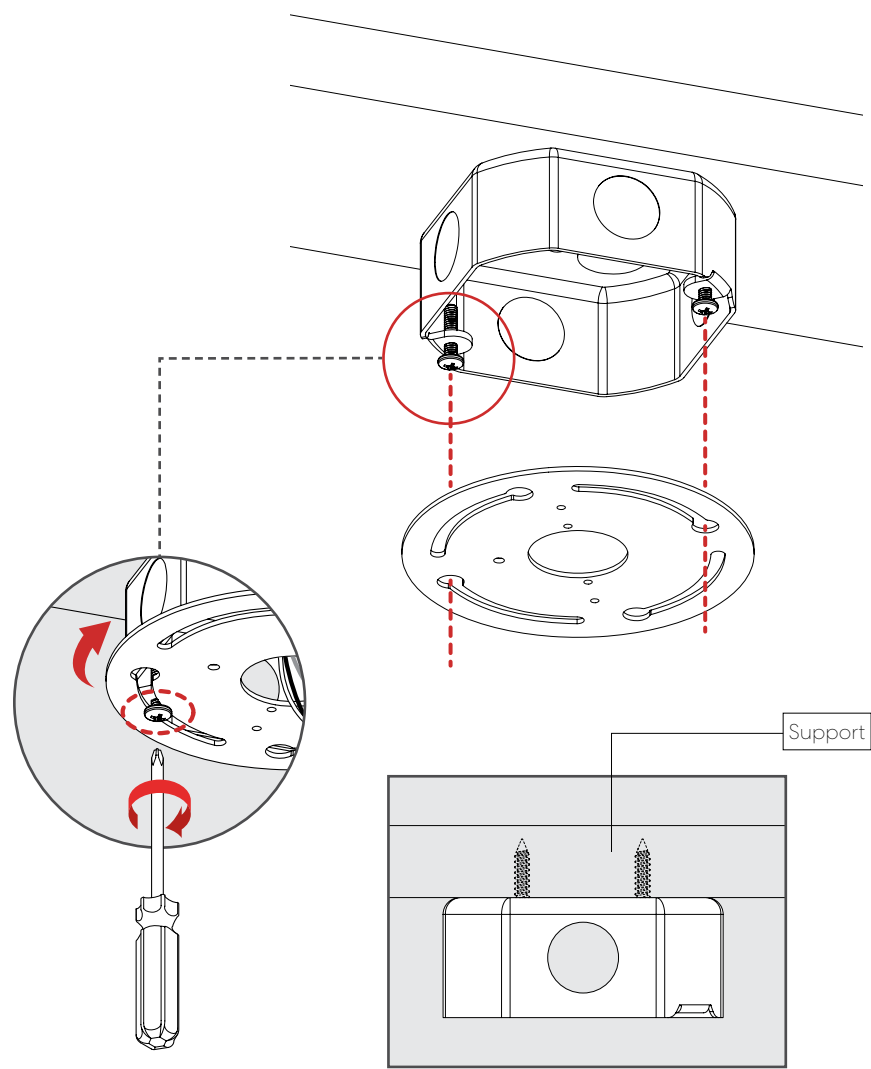

2 PREPARE CEILING OPENING.

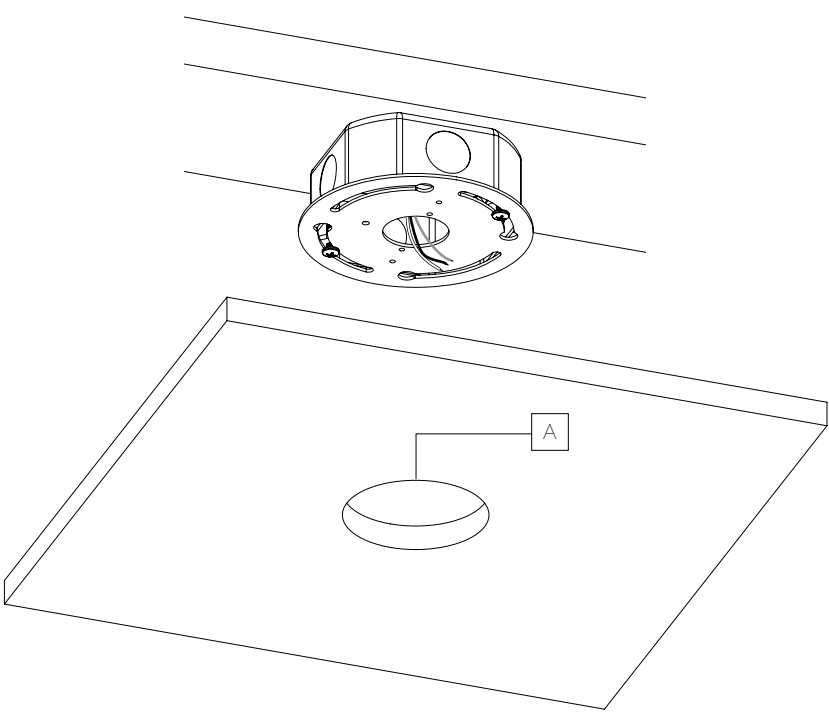

CUT-OUT DIMENSIONS

SIZE	A
Ø 2"	Ø 1 3/4"
Ø 3"	
Ø 4"	Ø 2 3/4"
Ø 5"	




CYLINDER / CUBOID

Surface




DIRECT MOUNT - NEW CONSTRUCTION

3 INSTALL CEILING.

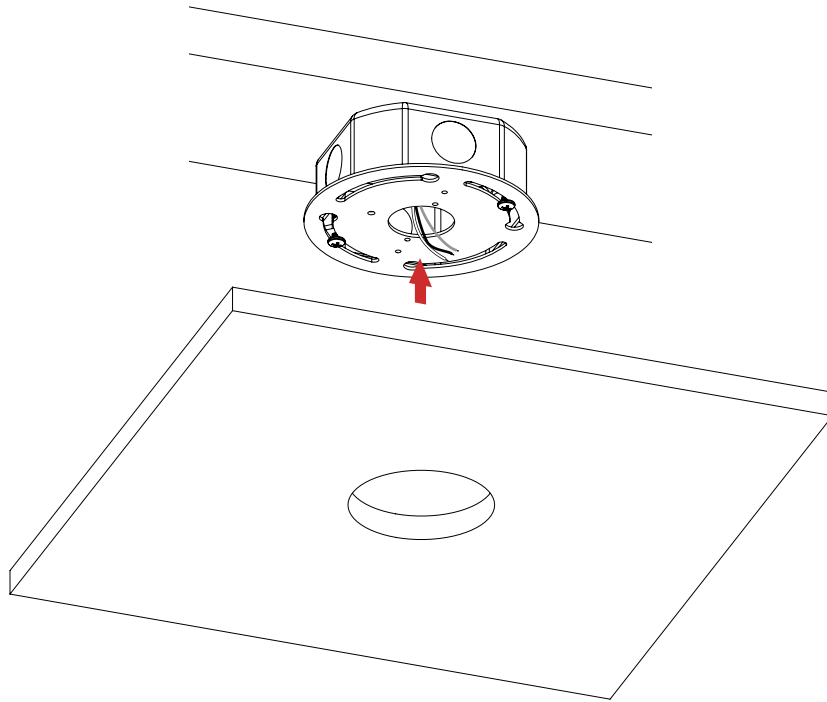

4 DETACH ADAPTER PIECE.

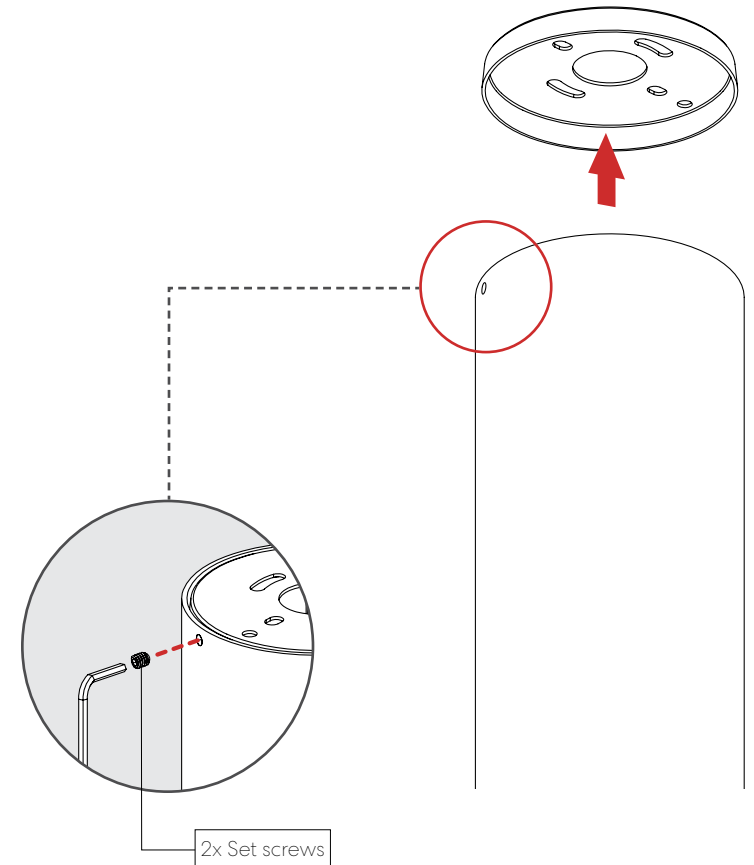


CYLINDER / CUBOID

Surface




DIRECT MOUNT - NEW CONSTRUCTION

5 INSTALL ADAPTER PIECE TO CEILING.

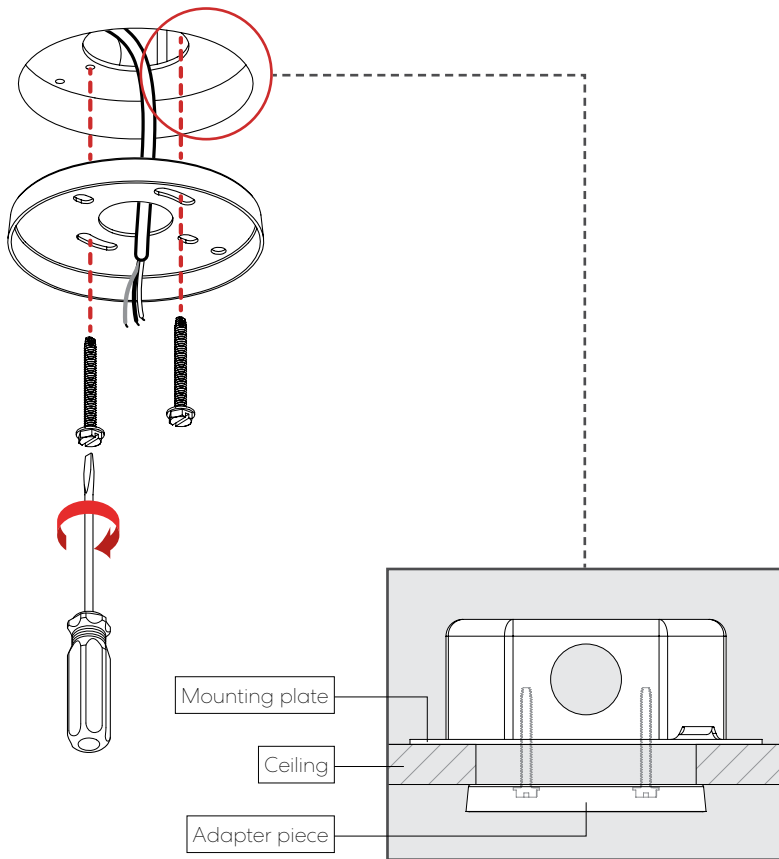

6 MAKE ELECTRICAL CONNECTIONS.

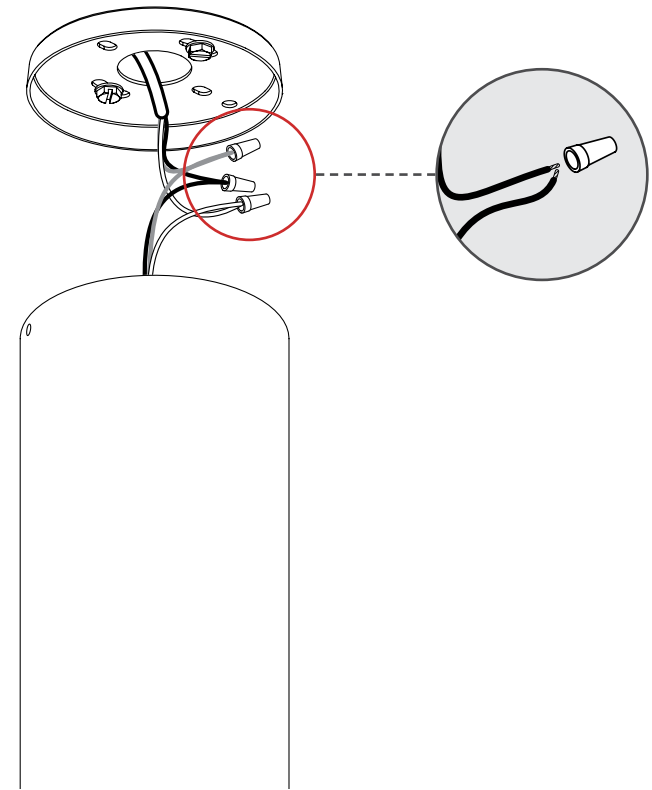

Note: Number of wires may vary.


CYLINDER / CUBOID

Surface



DIRECT MOUNT - NEW CONSTRUCTION

7 INSTALL HOUSING ASSEMBLY.

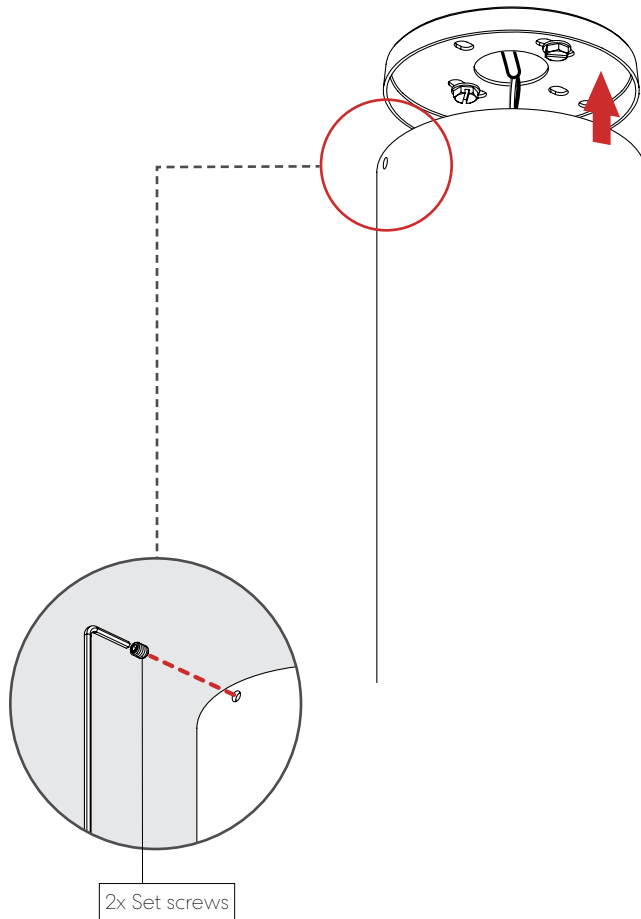


CYLINDER / CUBOID

Surface



DIRECT MOUNT - REMODEL

DIRECT MOUNT (DMRM)

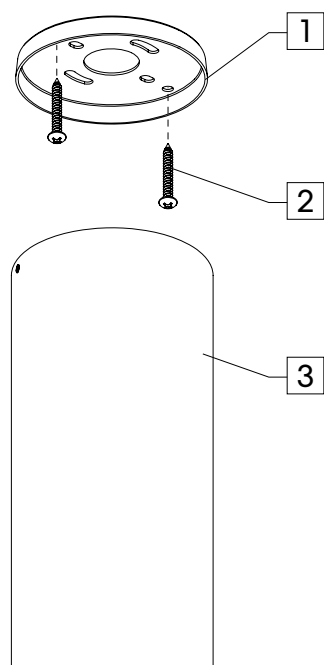

ITEMS LIST

1	Adapter piece
2	6-32 screw (by others)
3	Housing assembly

TOOLS REQUIRED

- Phillips screwdriver
- Allen key 5/64"
- Adjustable hole cutter
- Drill


CYLINDER / CUBOID

Surface




DIRECT MOUNT - REMODEL

1 DETACH ADAPTER PIECE.

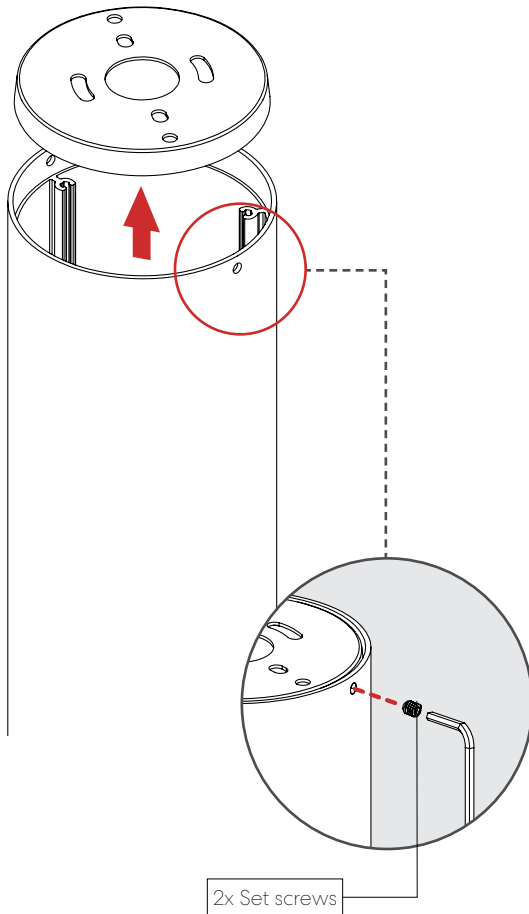

2 PREPARE CEILING.

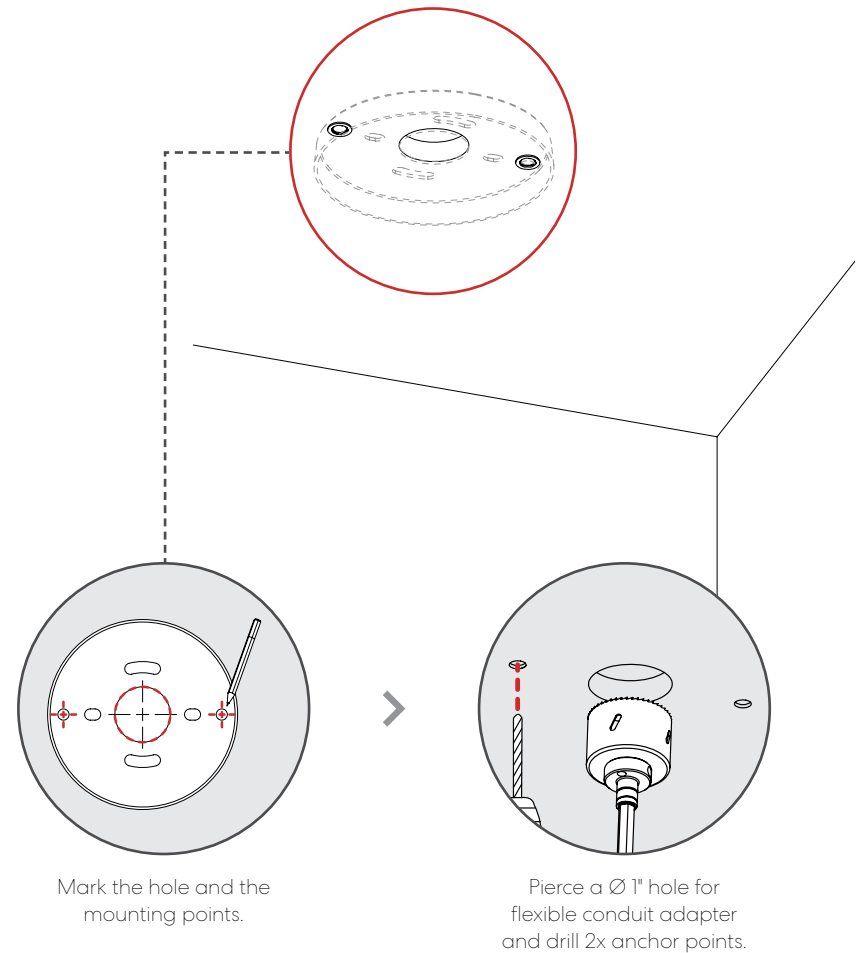


CYLINDER / CUBOID

Surface




DIRECT MOUNT - REMODEL

3 INSTALL CONDUIT ADAPTER TO ADAPTER PIECE.

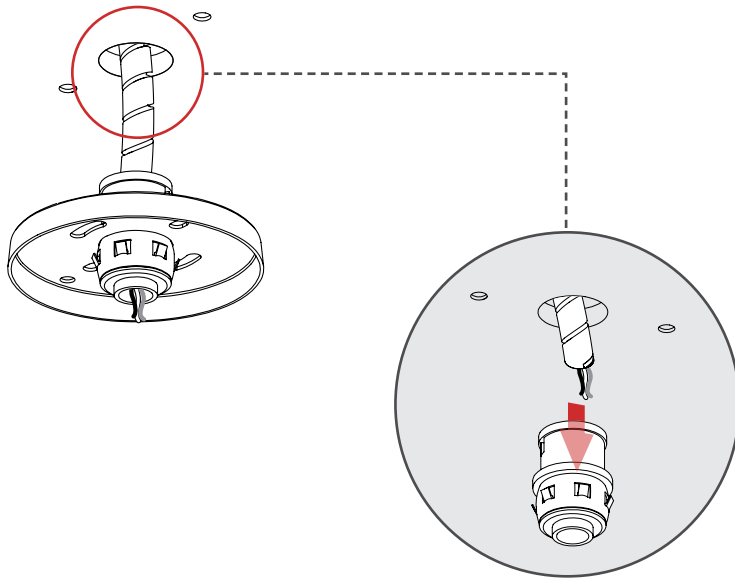

Note: Recommended adapter for flexible metal conduit:
3/8" push-in conduit connection, 1/2" snap-in knockout
connection.

4 INSTALL ADAPTER PIECE TO CEILING.

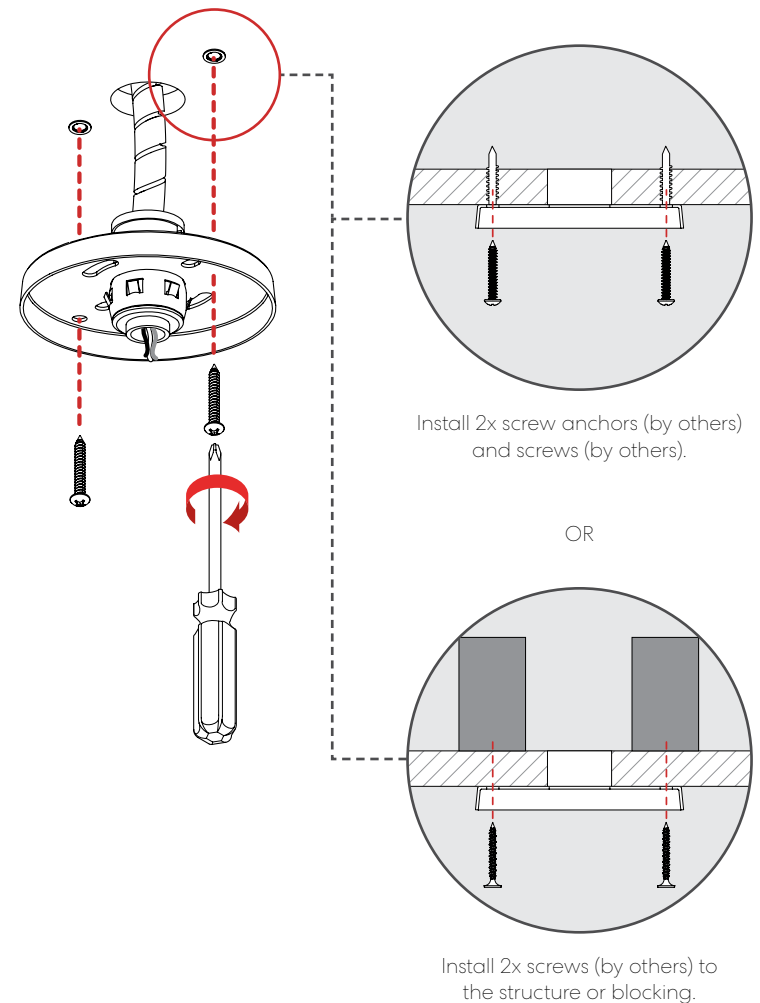


CYLINDER / CUBOID

Surface



DIRECT MOUNT - REMODEL

5 MAKE ELECTRICAL CONNECTIONS.

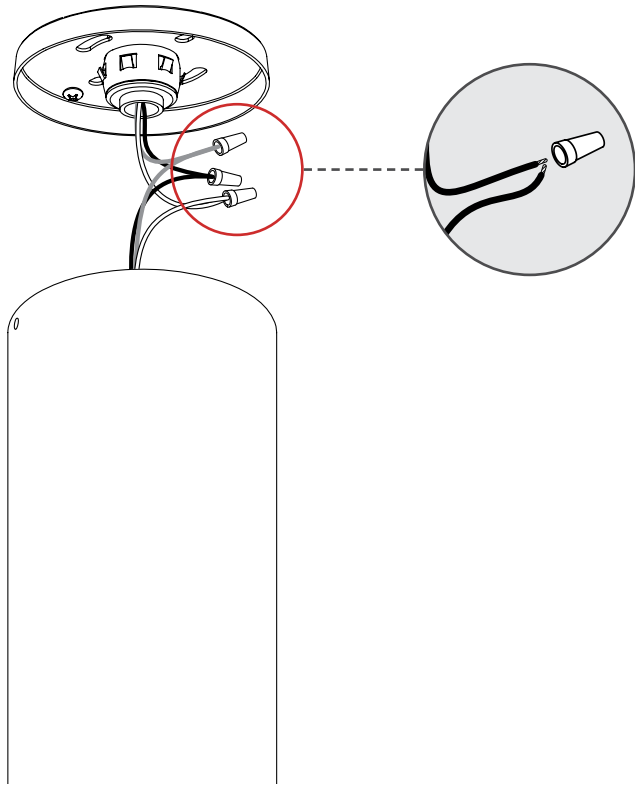

Note: Number of wires may vary.

6 INSTALL HOUSING ASSEMBLY.

