

CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



INSTALLATION INSTRUCTIONS

 This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

 Disconnect power before installation or servicing.

 Wire dimming conductors as Class 1.

 A luminaire with more than one power supply connection means shall be connected to only one branch circuit.


 For electrical connections, please refer to the [wiring diagram guide](#).




 For remote driver box installation instructions, please refer to the [remote driver installation sheet](#).




POWER CORD

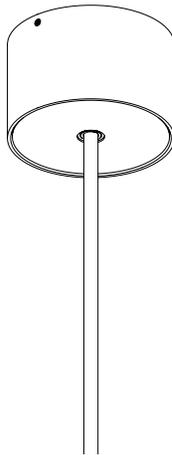

STEM

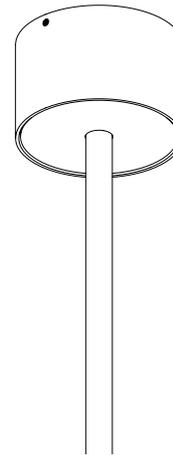

FIELD-CUTTABLE STEM

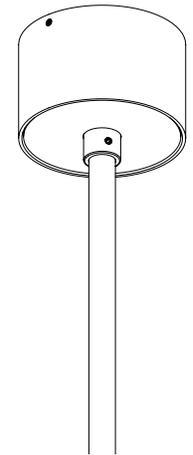

Go to the section specific to your suspension option.

INDEX

Power cord.....	P2
Stem.....	P7
Field-cutable stem.....	P11




CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



POWER CORD

DIRECT MOUNT (DMRM)

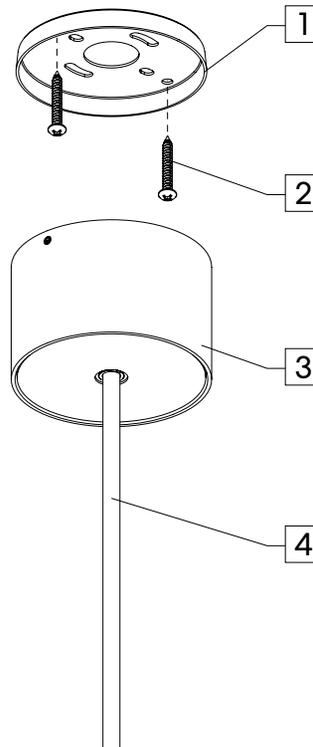

ITEMS LIST

1	Adapter piece
2	6-32 screw (by others)
3	Canopy assembly
4	Power cord

TOOLS REQUIRED

- Phillips screwdriver
- Power cord cutter (as required)
- Wire stripper (as required)
- Allen key 5/64
- Adjustable hole cutter

CANOPY SIZE

Ø 2"	Ø 2 3/16", Height 2"
Ø 3"	Ø 3 1/8", Height 2"
Ø 4"	Ø 4 1/8", Height 2"
Ø 5"	Ø 4 15/16", Height 2"


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




POWER CORD

1 DETACH ADAPTER PIECE.

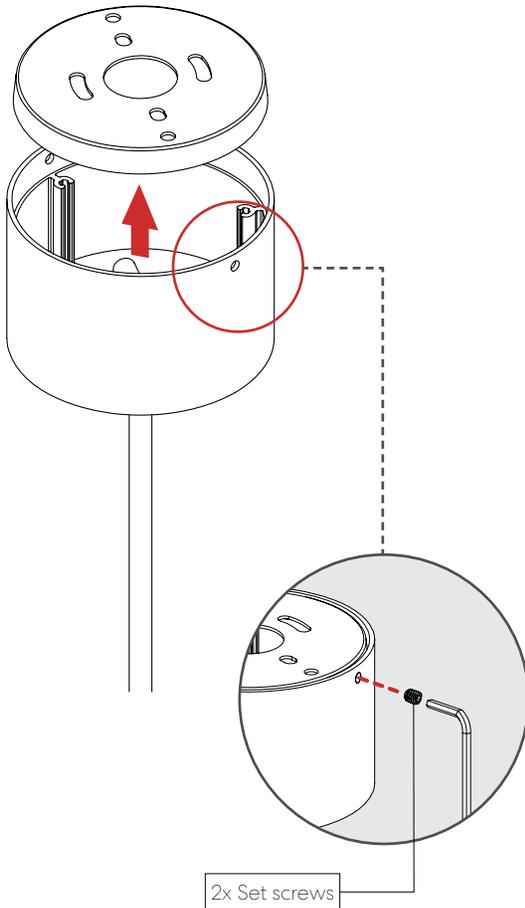

2 PREPARE CEILING.

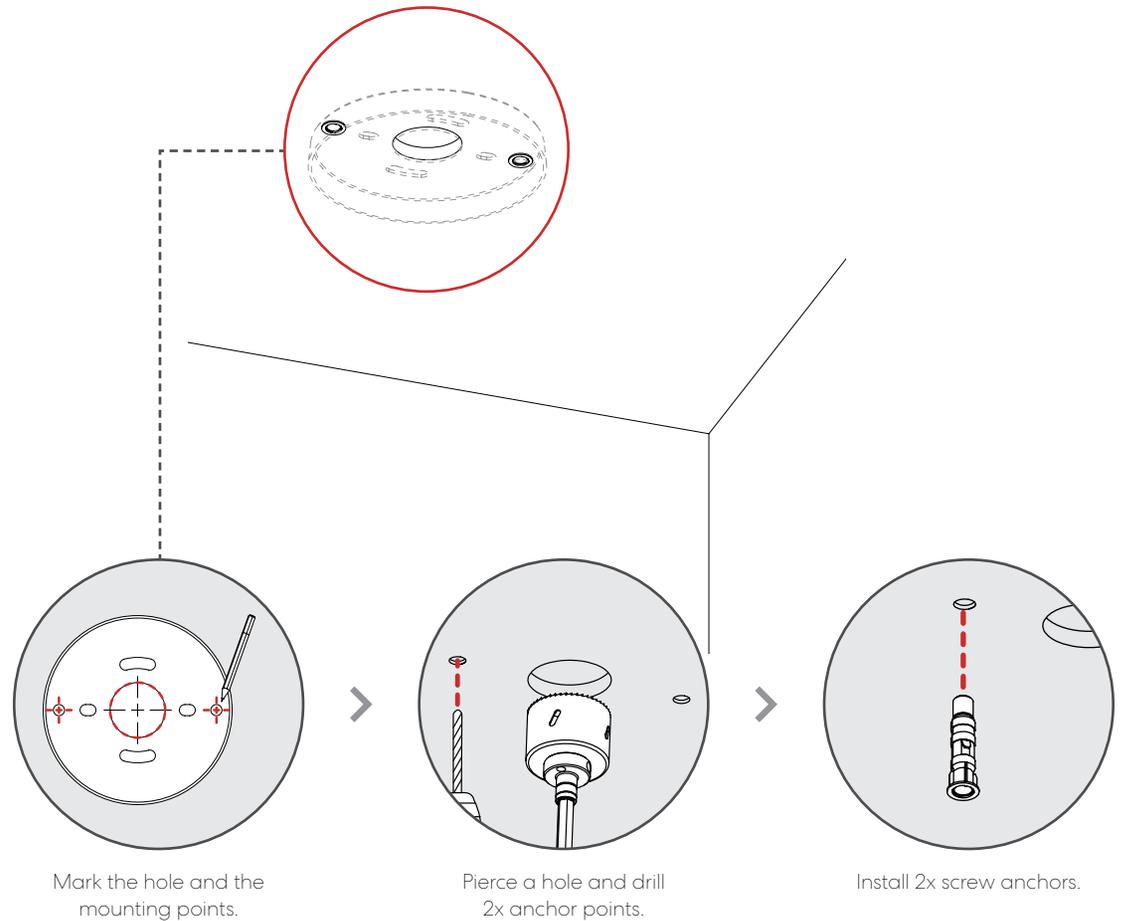


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




POWER CORD

3 INSTALL ADAPTER PIECE TO CEILING.

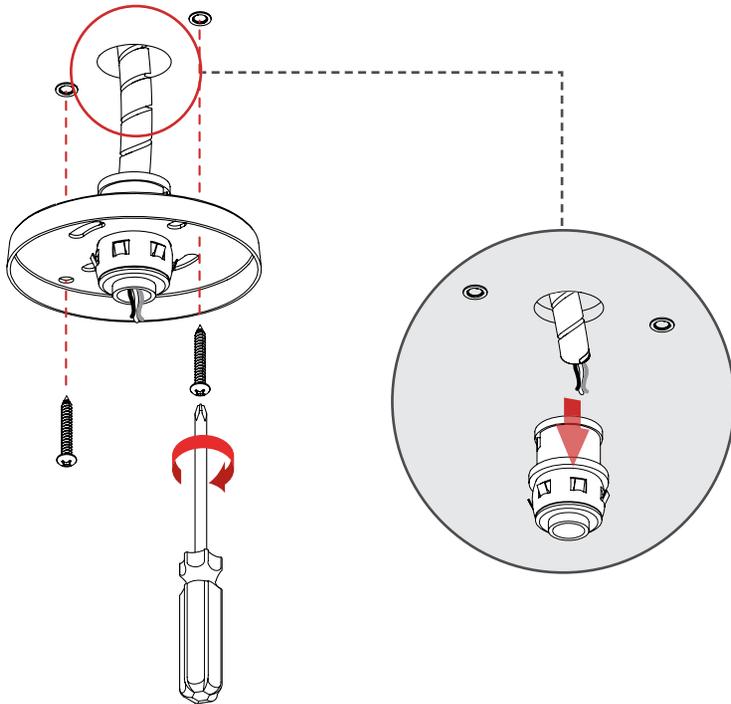

4 ADJUST POWER CORD LENGTH. **OPTIONAL**

4-1 Detach the cable holder.

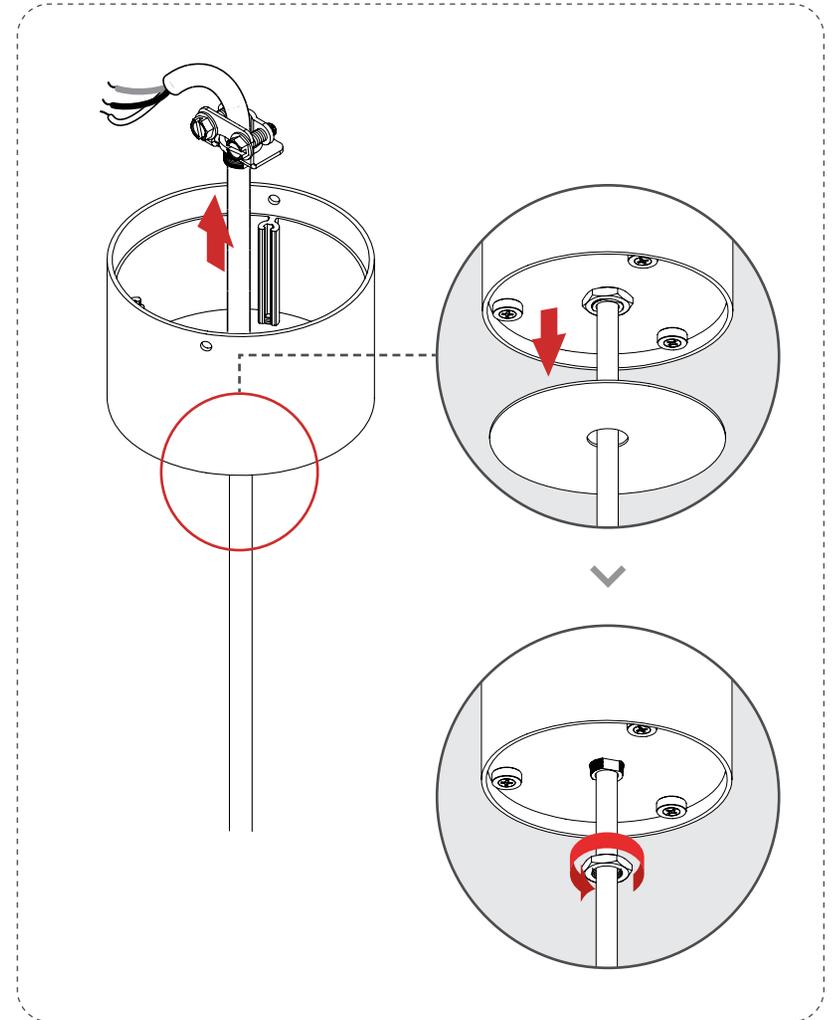

CYLINDER / CUBOID


Pendant - Direct Mount - Remodel




POWER CORD

4 ADJUST POWER CORD LENGTH. OPTIONAL


4-2 Untighten the cable holder.

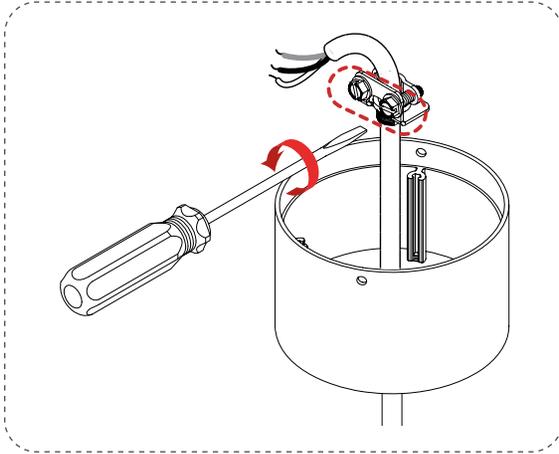


4-3 Adjust power cord length.

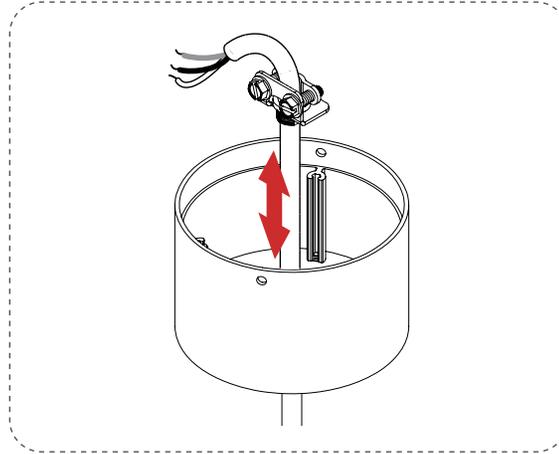


4-4 Cut the excess power cord.

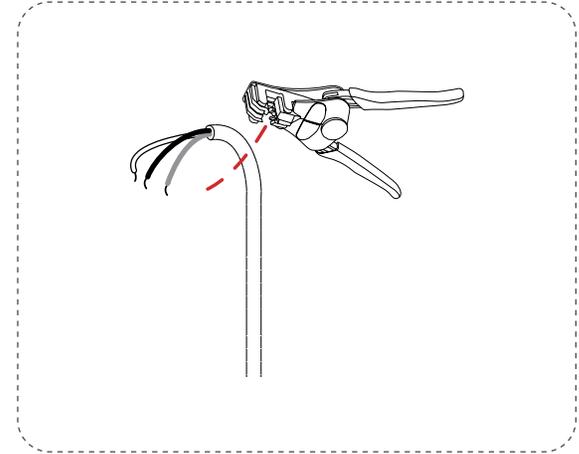

4-5 Tighten the cable holder.

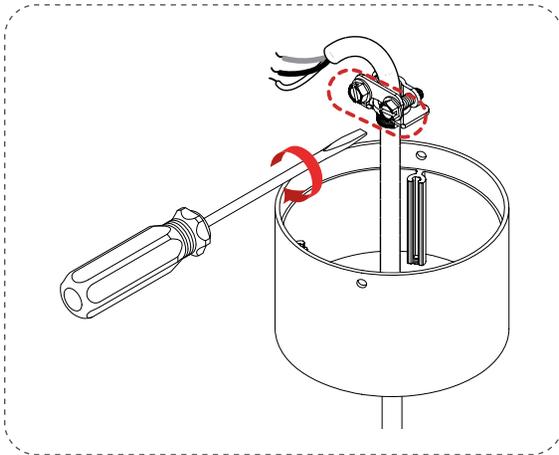

4-6 Attach the cable holder.

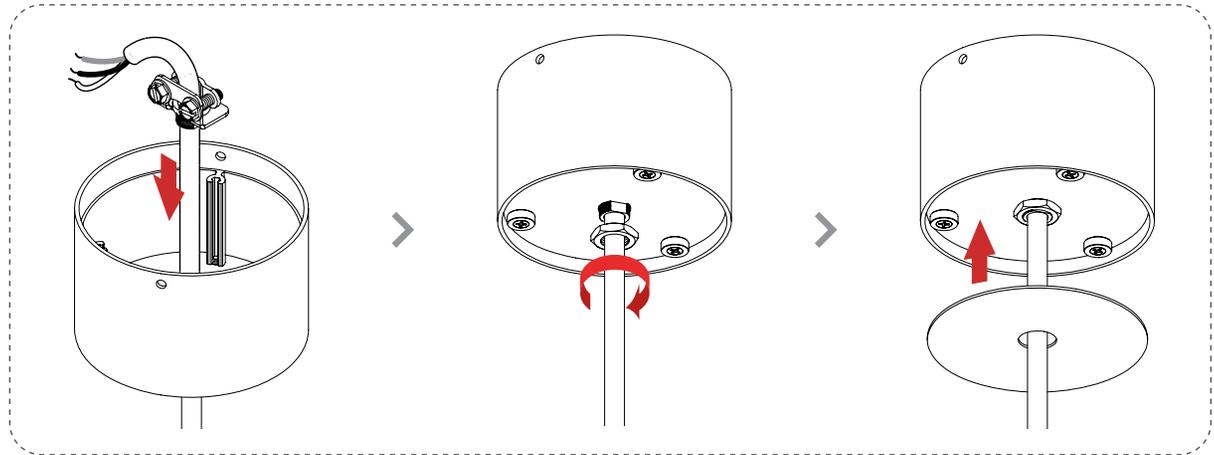


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




POWER CORD

5 MAKE ELECTRICAL CONNECTIONS.

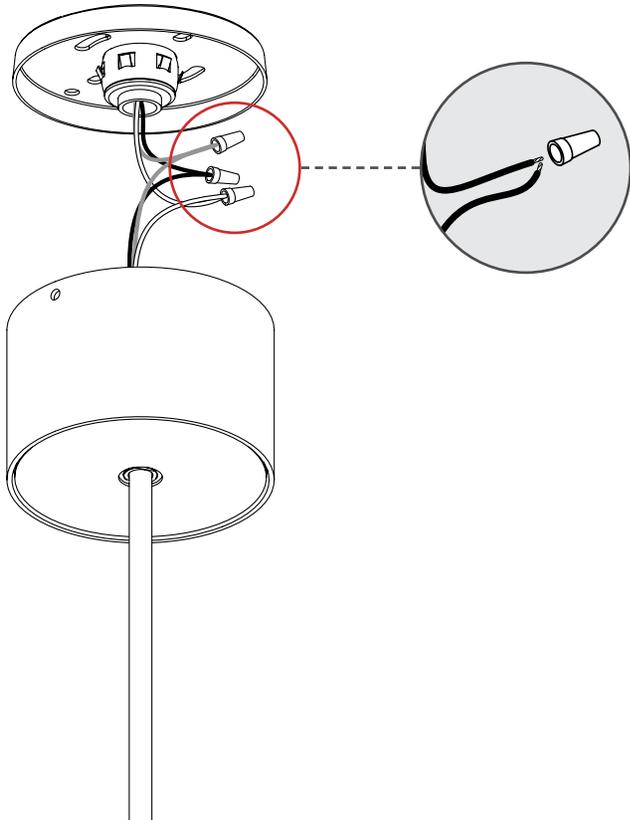

Note: Number of wires may vary.

6 INSTALL HOUSING ASSEMBLY.

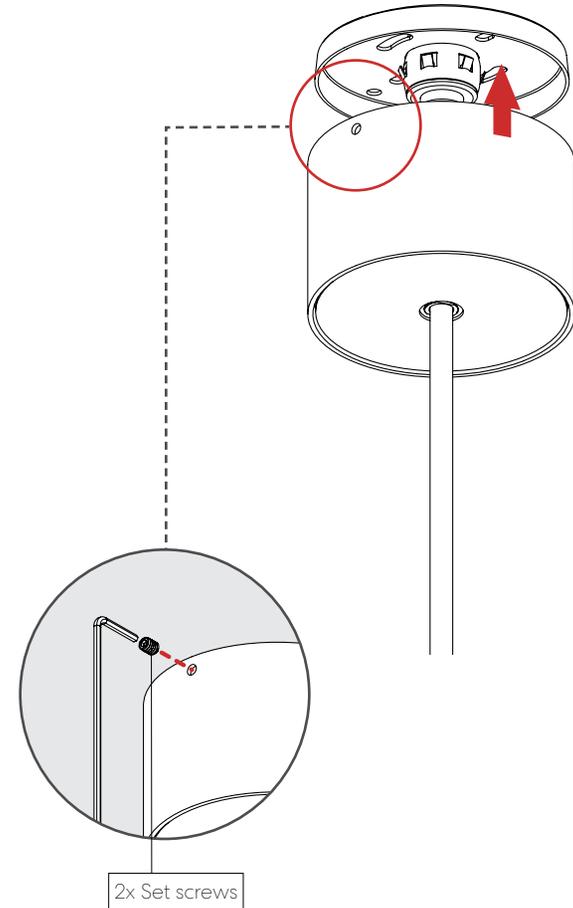


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



STEM

DIRECT MOUNT (DMRM)

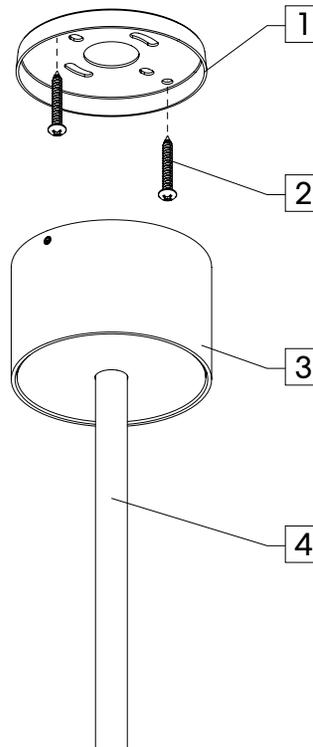

ITEMS LIST

1	Adapter piece
2	6-32 screw (by others)
3	Canopy assembly
4	Stem

TOOLS REQUIRED

- Phillips screwdriver
- Allen key 5/64
- Adjustable hole cutter

CANOPY SIZE

Ø 2"	Ø 2 3/16", Height 2"
Ø 3"	Ø 3 1/8", Height 2"
Ø 4"	Ø 4 1/8", Height 2"
Ø 5"	Ø 4 15/16", Height 2"


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




STEM

1 DETACH ADAPTER PIECE.

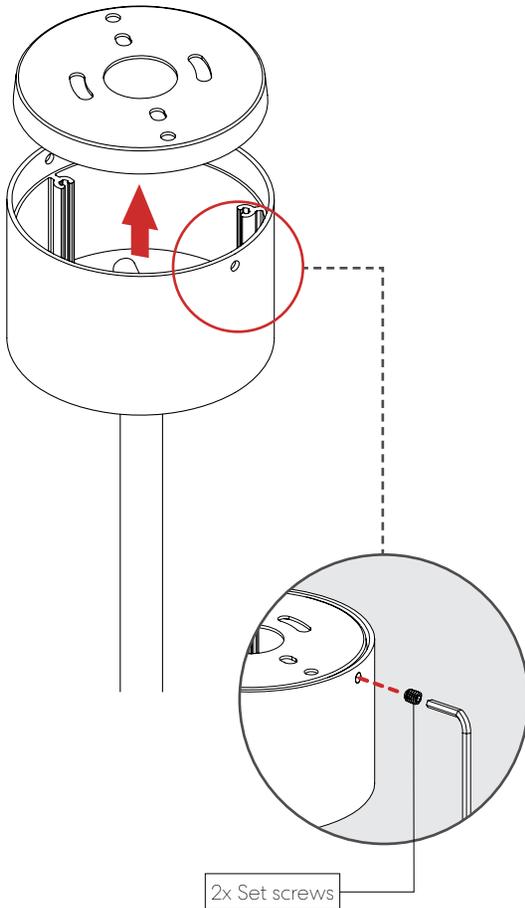

2 PREPARE CEILING.

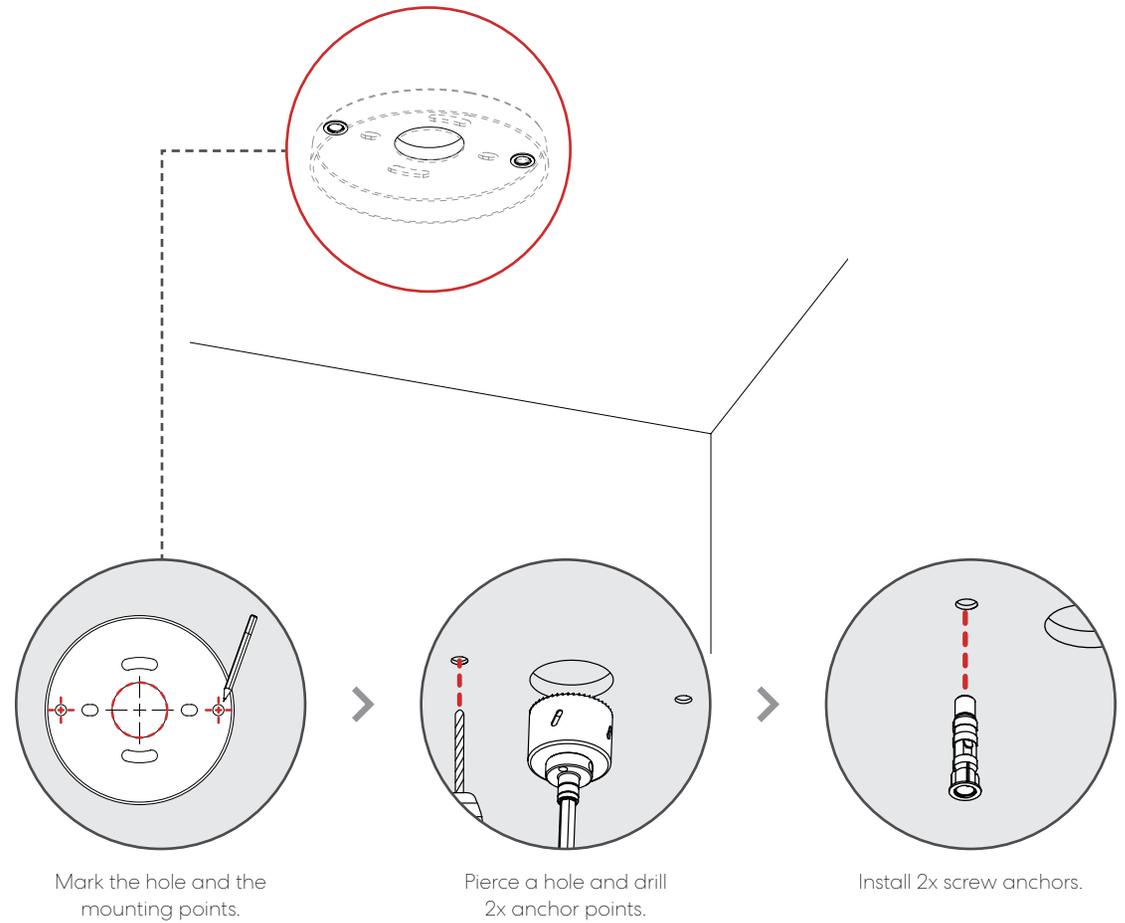


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




STEM

3 INSTALL ADAPTER PIECE TO CEILING.

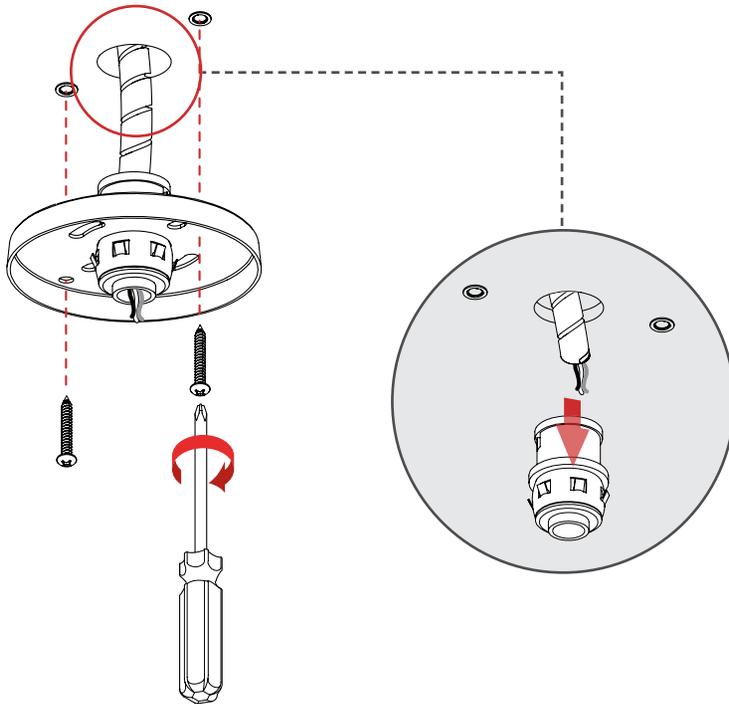

4 MAKE ELECTRICAL CONNECTIONS.

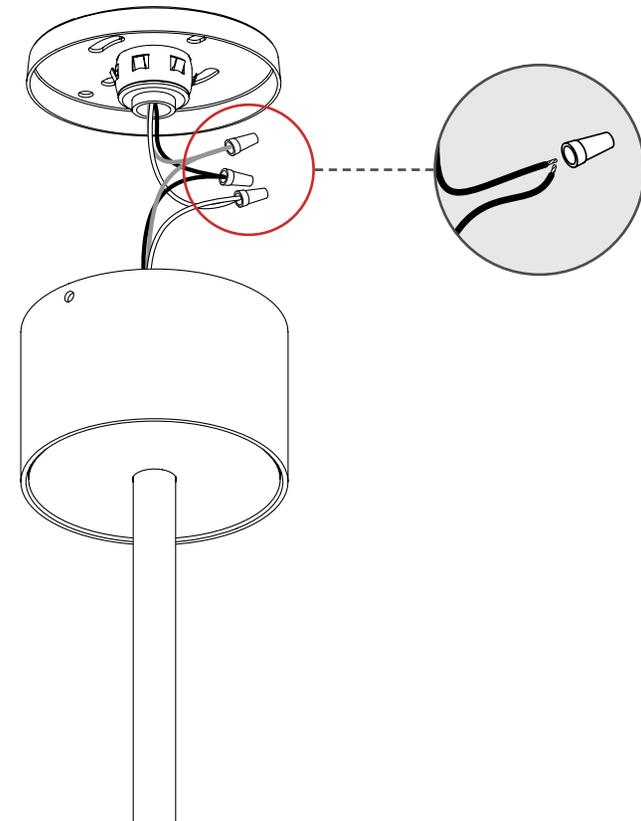

Note: Number of wires may vary.


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



STEM

5 INSTALL HOUSING ASSEMBLY.

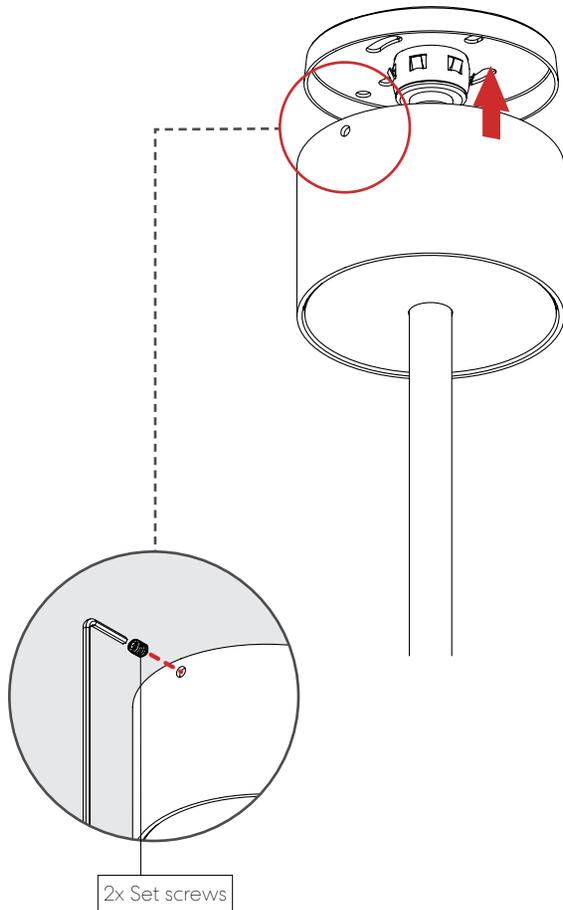


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



FIELD-CUTTABLE STEM

DIRECT MOUNT (DMRM)

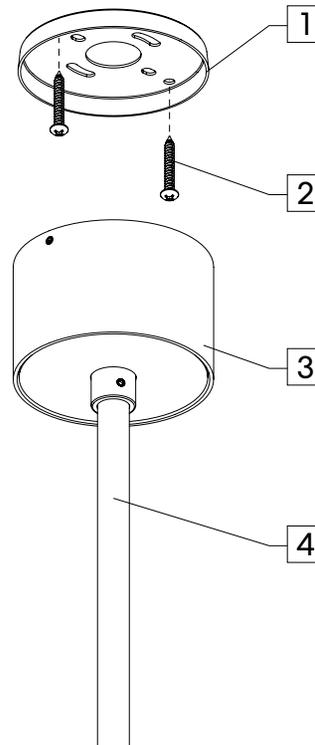

ITEMS LIST

1	Adapter piece
2	6-32 screw (by others)
3	Canopy assembly
4	Field-cuttable stem

TOOLS REQUIRED

- Flat head screwdriver	- Allen key 5/64
- Phillips screwdriver	- 1/8" drill bit
- Power cord cutter	- Hacksaw
- Wire stripper	
- Adjustable hole cutter	

CANOPY SIZE

Ø 2"	Ø 2 3/16", Height 2"
Ø 3"	Ø 3 1/8", Height 2"
Ø 4"	Ø 4 1/8", Height 2"
Ø 5"	Ø 4 15/16", Height 2"




CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




FIELD-CUTTABLE STEM

1 DETACH ADAPTER PIECE.

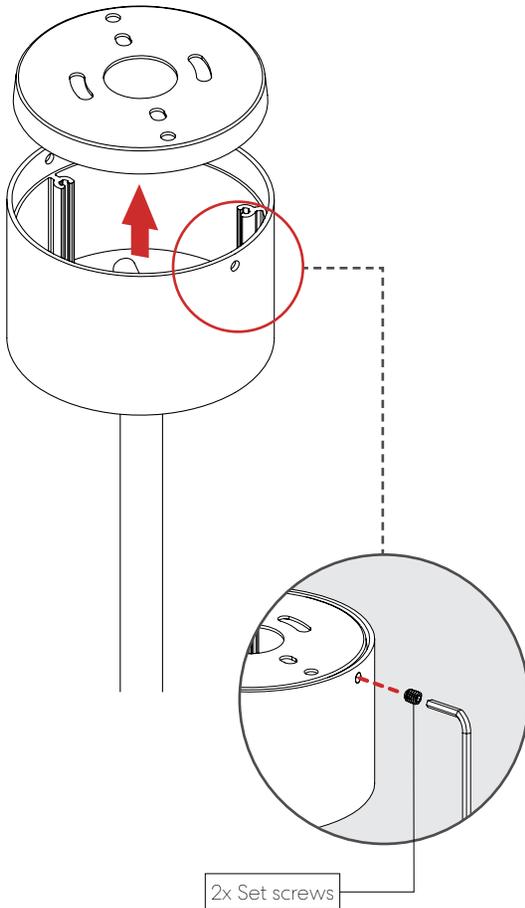

2 PREPARE CEILING.

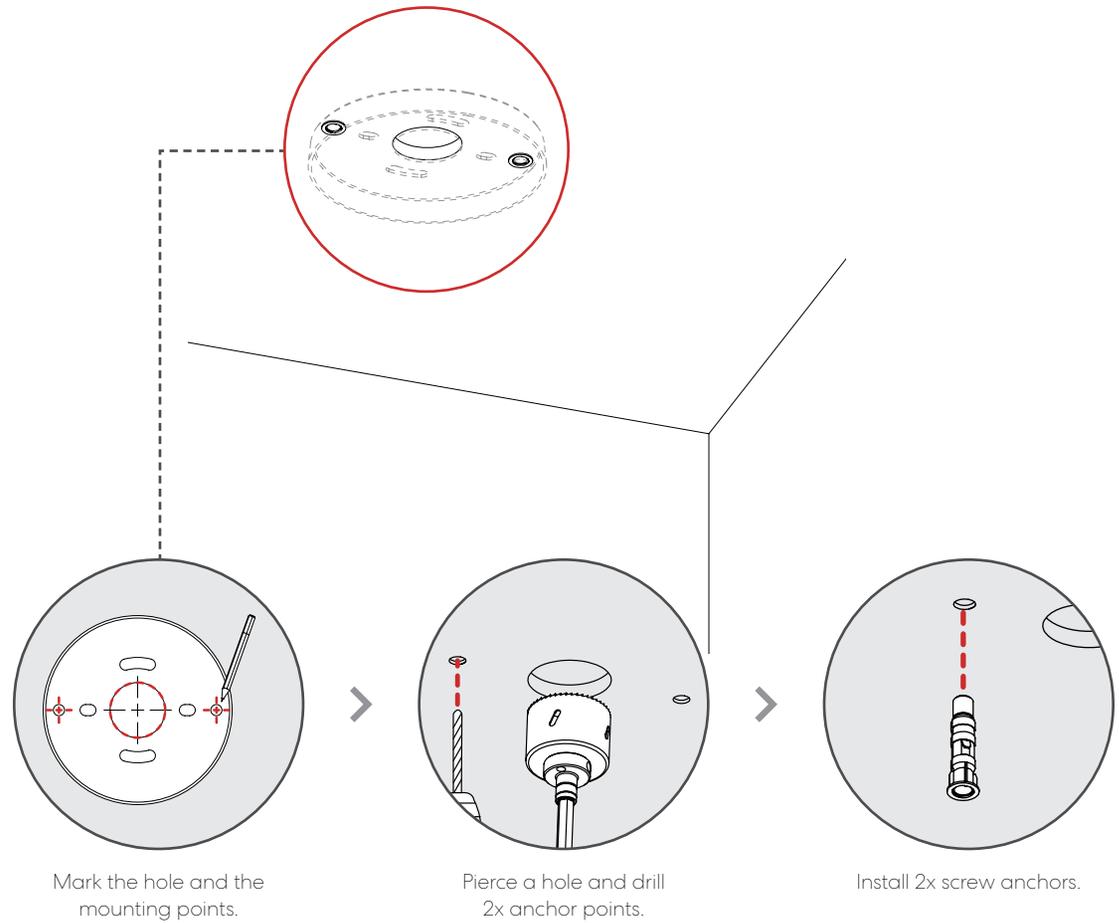


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




FIELD-CUTTABLE STEM

3 INSTALL ADAPTER PIECE TO CEILING.

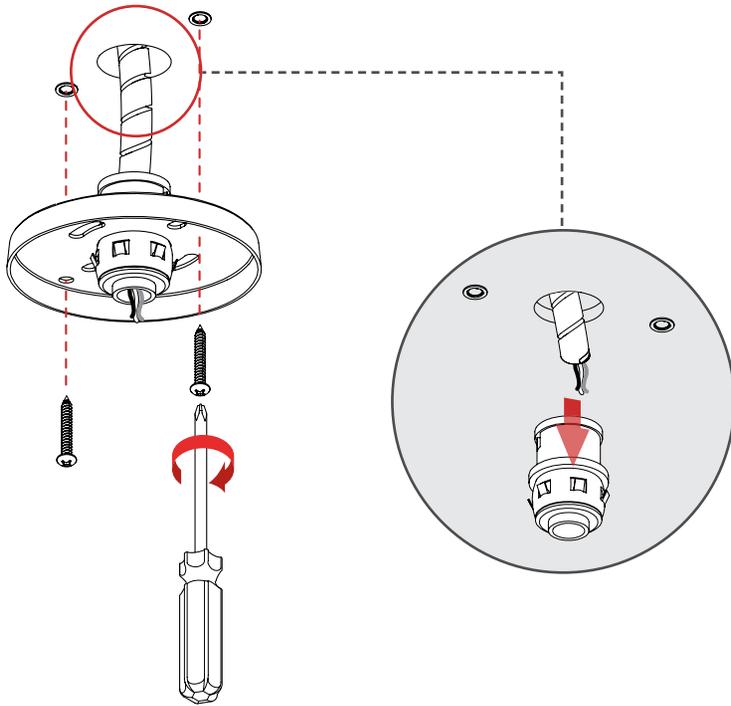

4 DETACH STEM FROM HOUSING.

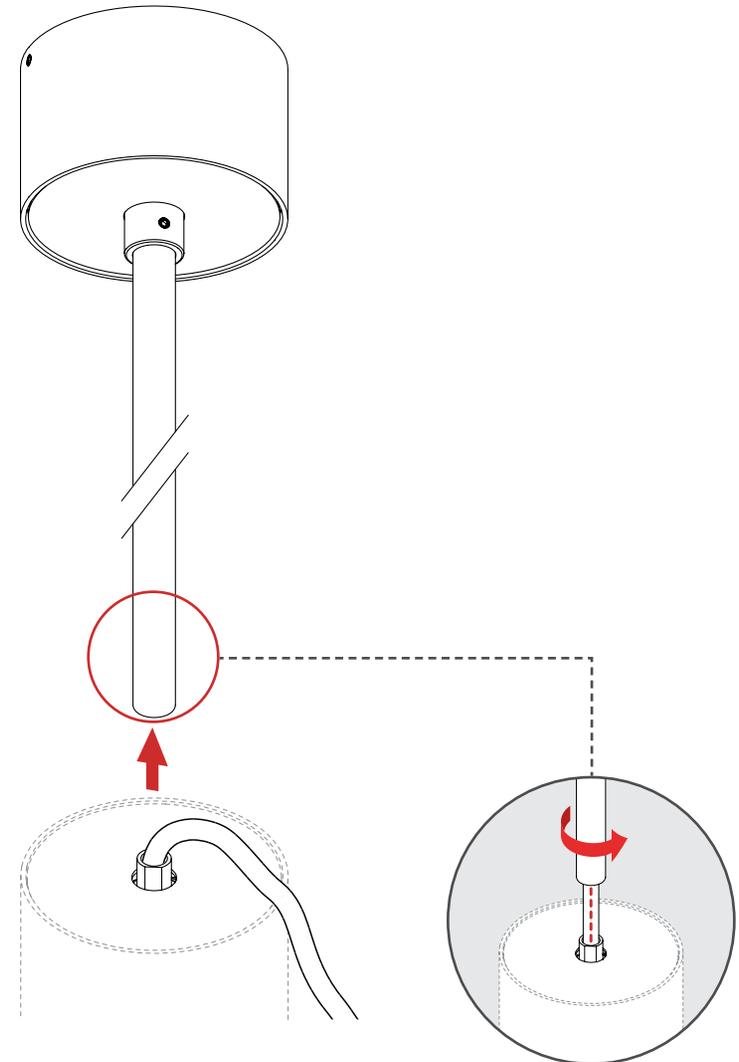


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



FIELD-CUTTABLE STEM

5 DETACH STEM FROM CANOPY ASSEMBLY.

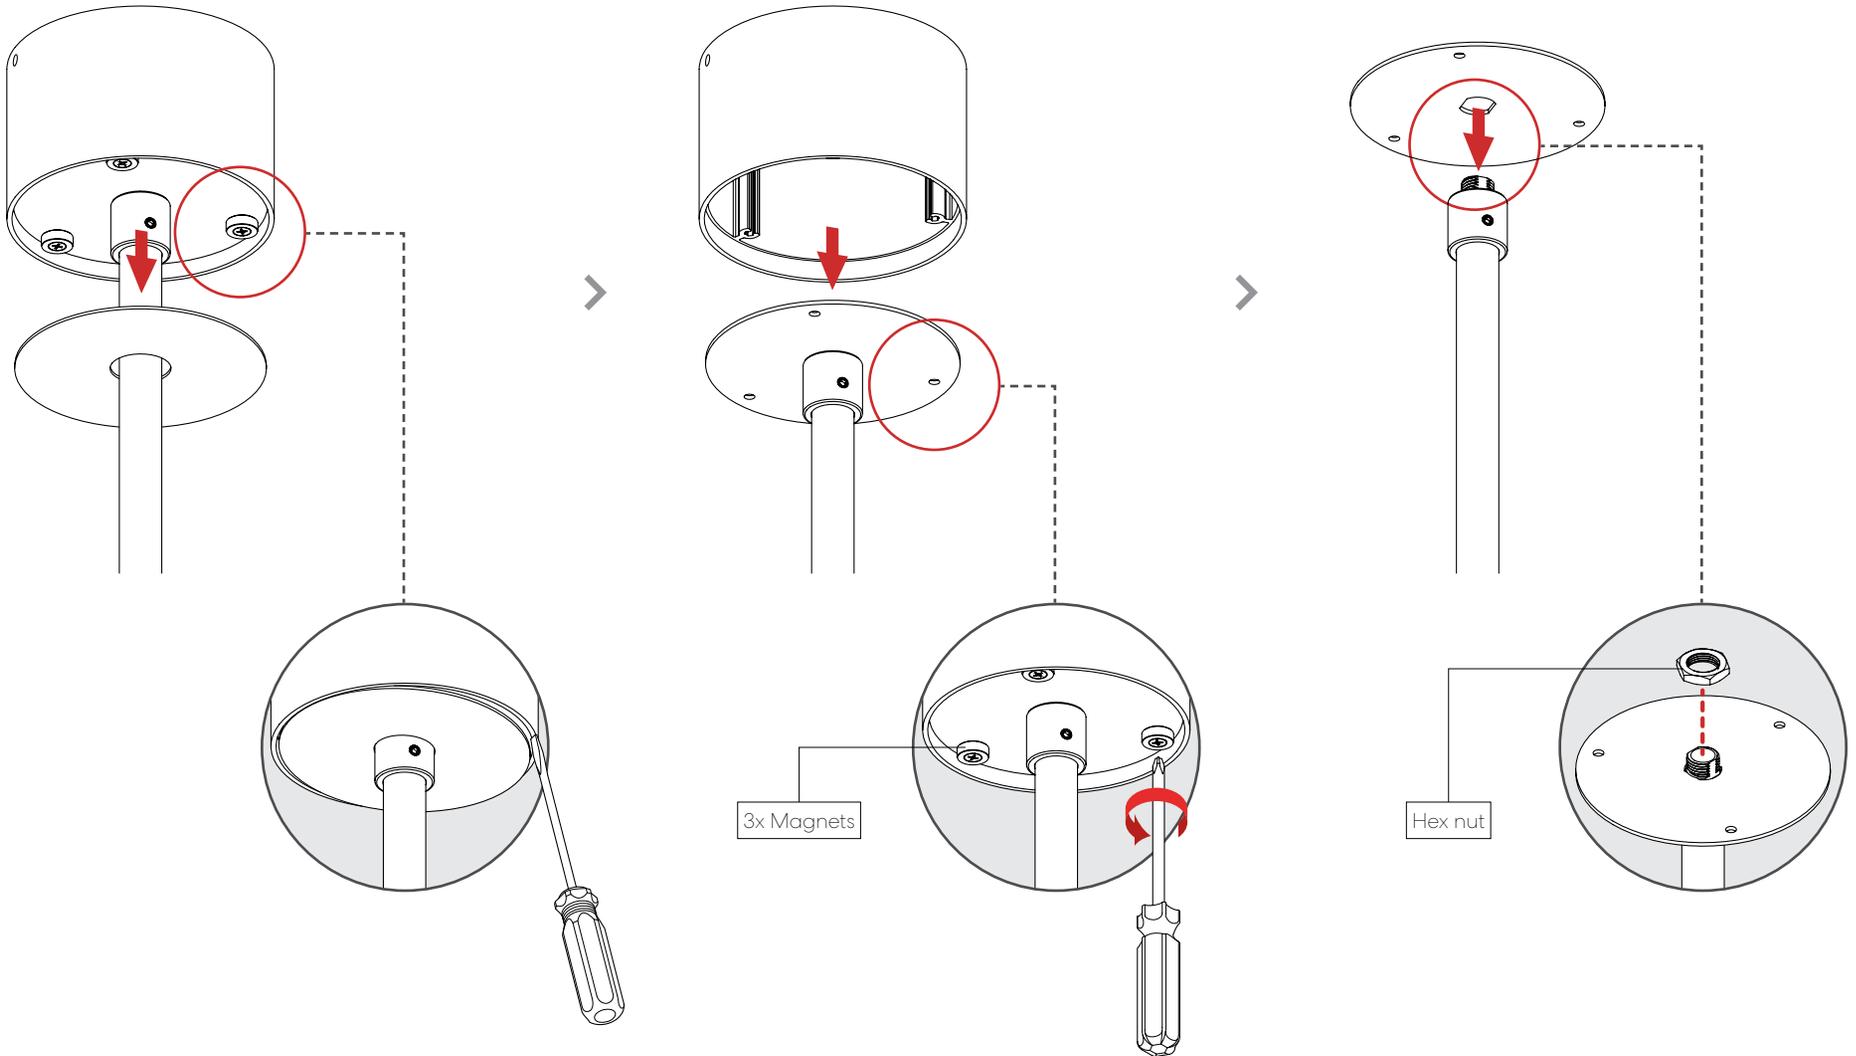


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




FIELD-CUTTABLE STEM


6 DETACH ADAPTER.

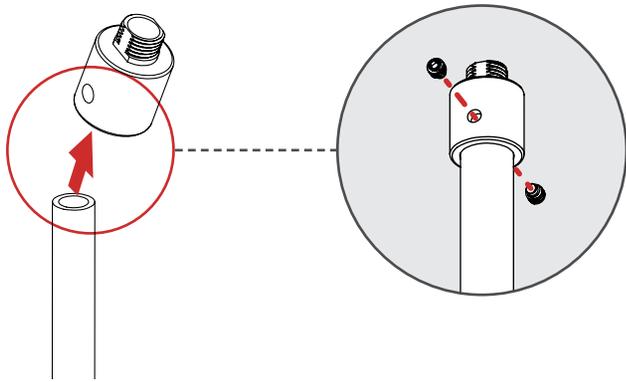

8 INSERT STEM INTO ADAPTER.



7 CUT STEM.

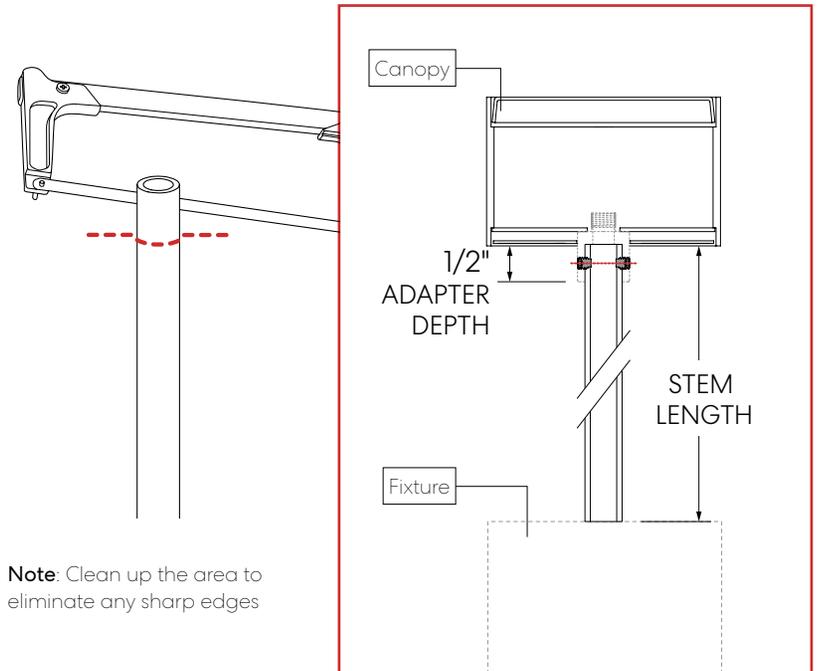

Note: Clean up the area to eliminate any sharp edges




CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




FIELD-CUTTABLE STEM

9 FIX STEM TO ADAPTER.

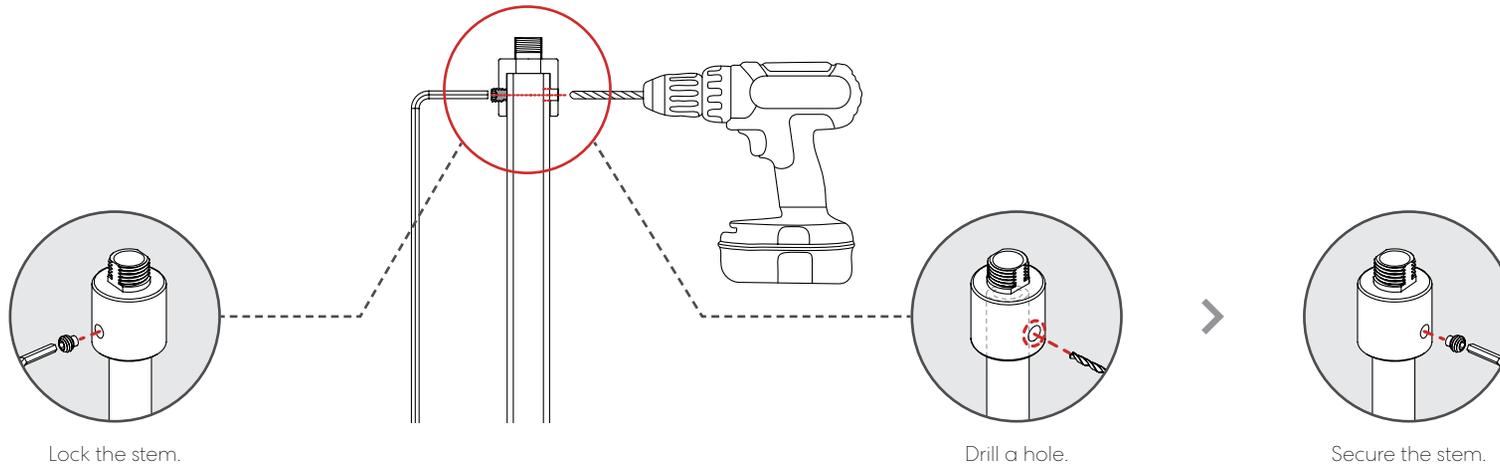

Repeat the process on the other side.

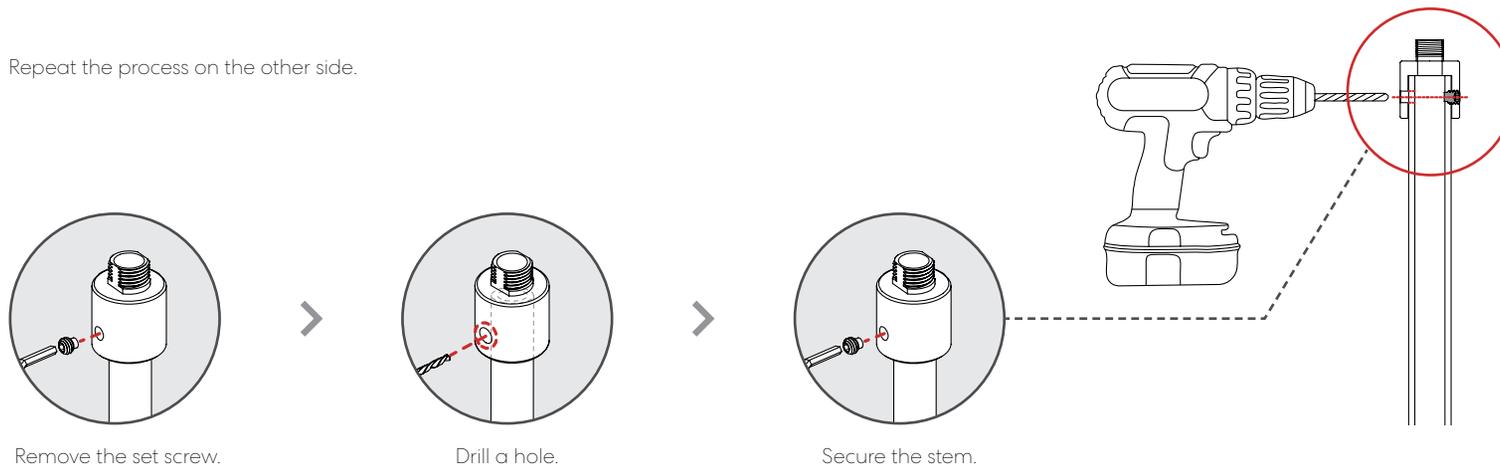


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



FIELD-CUTTABLE STEM

10 ATTACH STEM TO CANOPY ASSEMBLY.

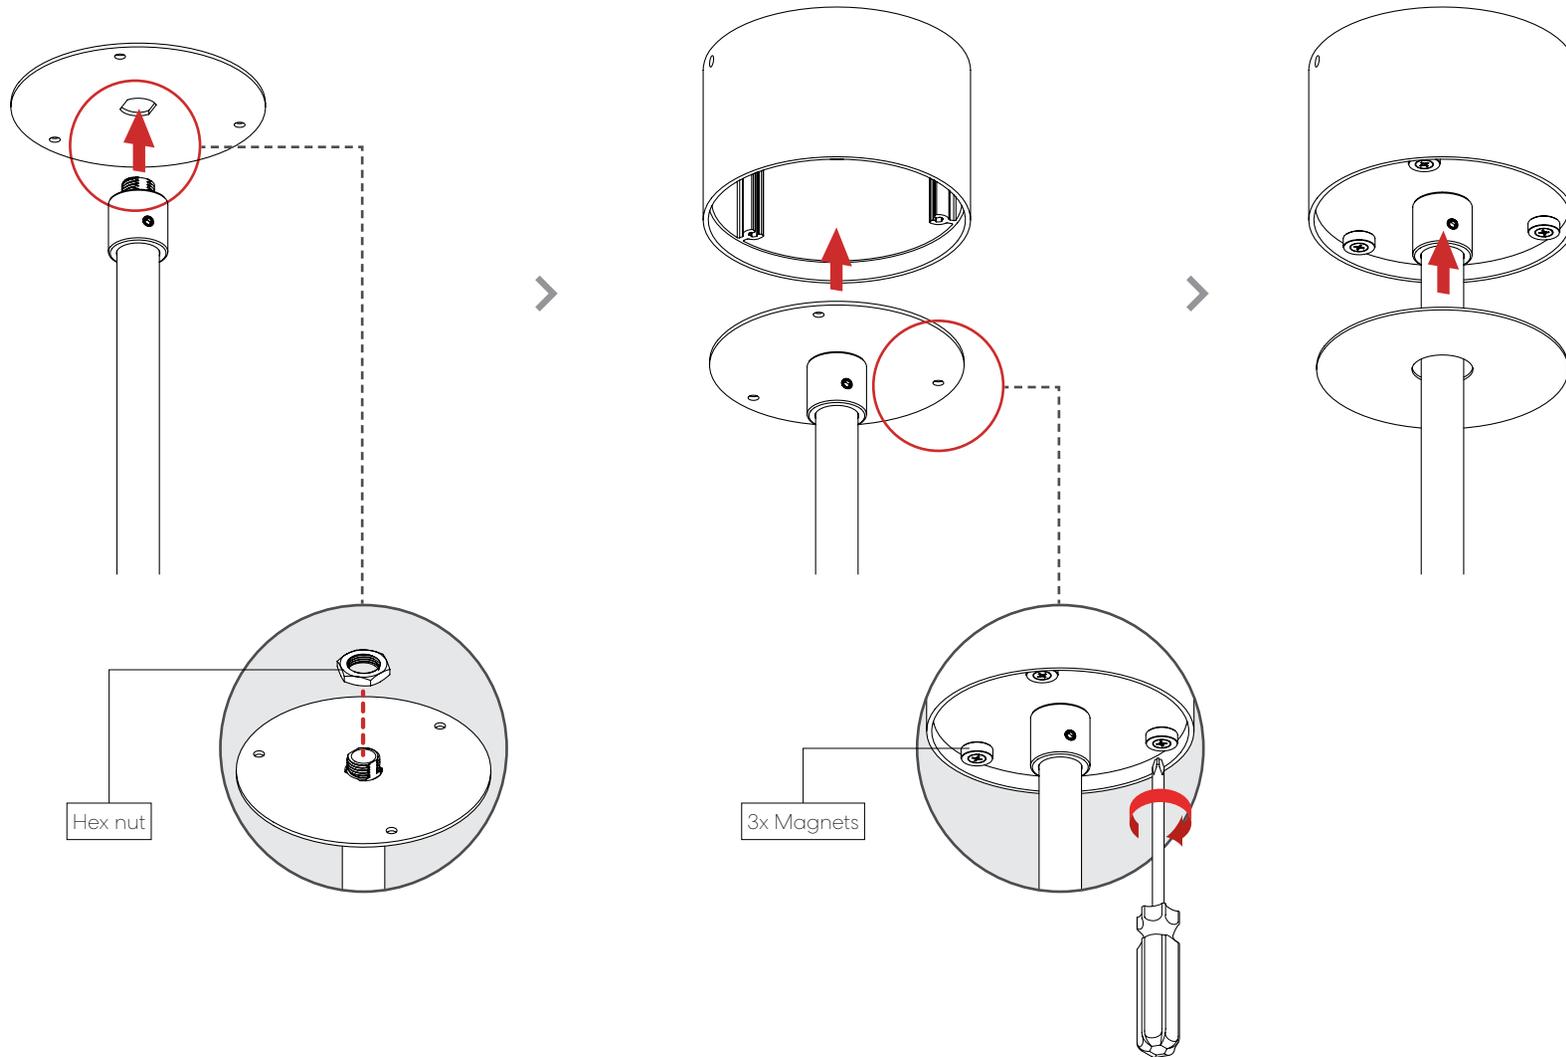


CYLINDER / CUBOID

Pendant - Direct Mount - Remodel




FIELD-CUTTABLE STEM

11 ATTACH STEM TO HOUSING.

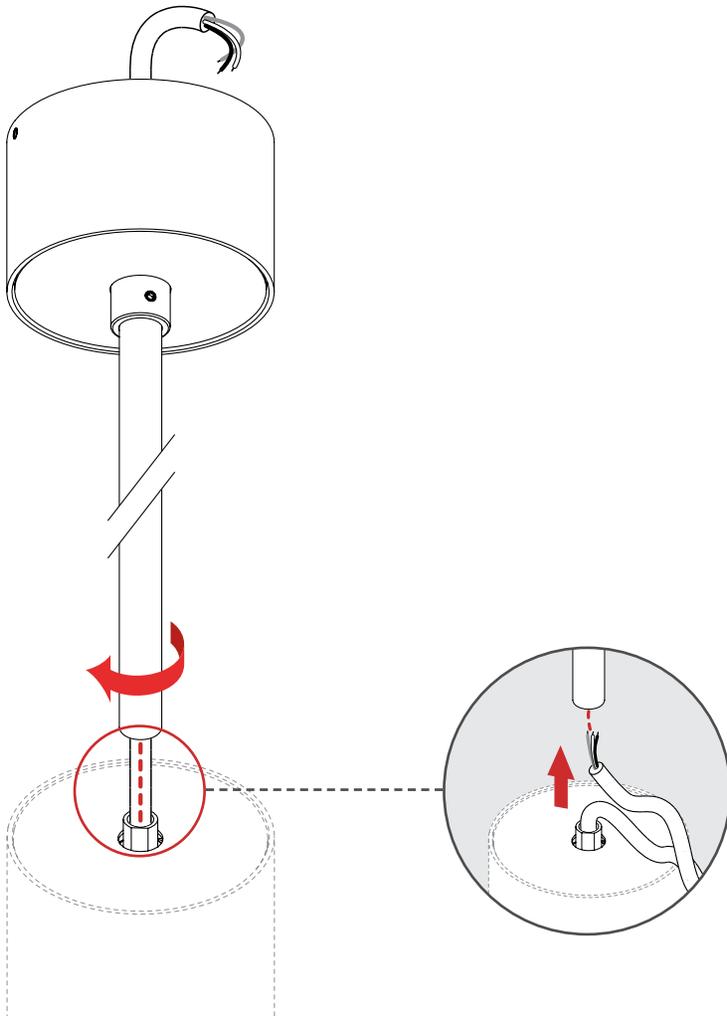

Note: Hold the power cord at the top to prevent it from twisting.

12 MAKE ELECTRICAL CONNECTIONS.

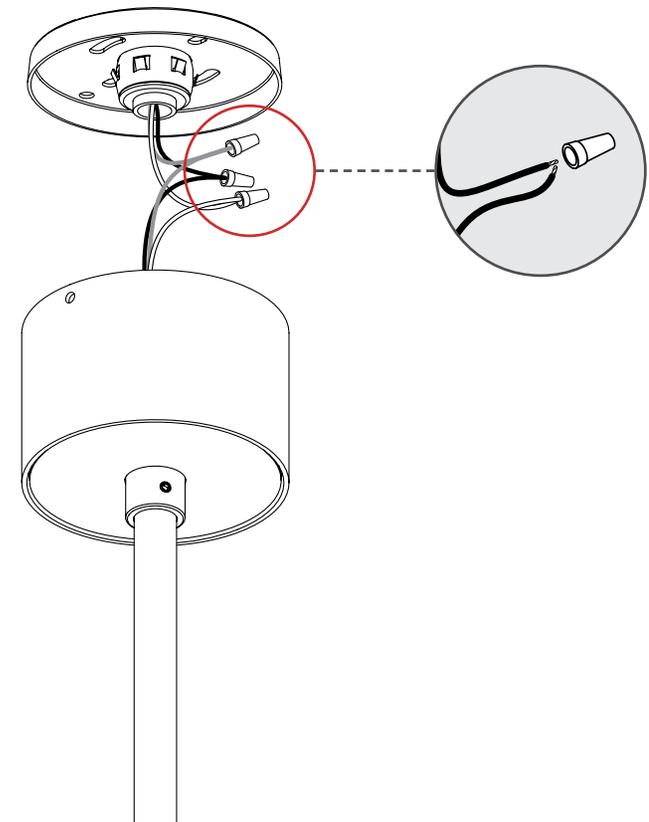

Note: Number of wires may vary.



CYLINDER / CUBOID

Pendant - Direct Mount - Remodel



FIELD-CUTTABLE STEM

13 INSTALL HOUSING ASSEMBLY.

