

INSTALLATION INSTRUCTIONS



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Disconnect power before installation or servicing.



Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.



Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.



Wire dimming conductors as Class 1.



A luminaire with more than one power supply connection means shall be connected to only one branch circuit.



For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.



For luminaires installed in wet locations, properly seal all mounting and electrical points.




Warranty claims will not be accepted if incorrect driver or light element is used.

EVOQ SLIM

Fixture with ramp



INSTALLATION INSTRUCTIONS

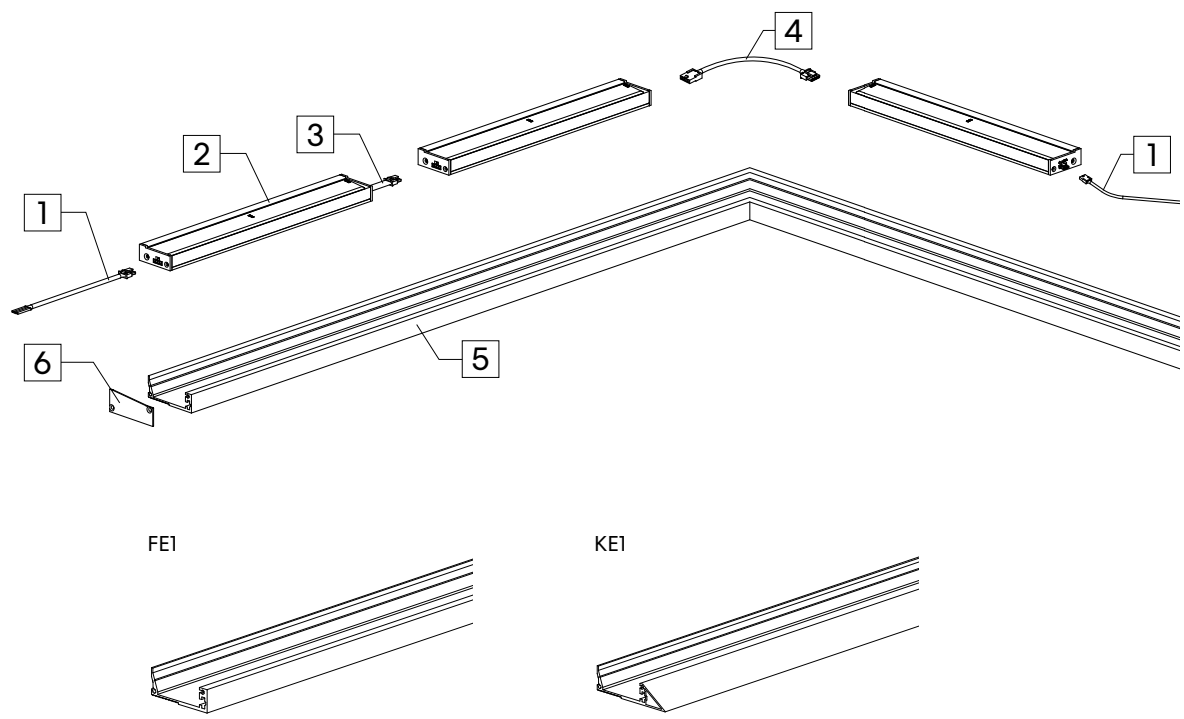



For electrical connections, please refer to the [wiring diagram guide](#).



For remote driver box installation instructions, please refer to the [remote driver installation sheet](#).



INDEX	
Ramp Installation.....	P.3
Fixture Installation.....	P.6

ITEMS LIST	
1	Leader cable
2	Fixture
3	Retractable cable
4	Jumper cable
5	Ramp
6	End cap (Optional)

TOOLS REQUIRED
- Hand drill
- Drywall screws
- Paint brush
- Drywall compound tools
- 5/64" Allen key




RAMP - INSTALLATION INSTRUCTIONS

1 LOOSEN ALIGNER.


Loosen the set screws [A] on the aligner [B].

Slide the aligner [B] all the way into the ramp [C].

FLAT EDGE

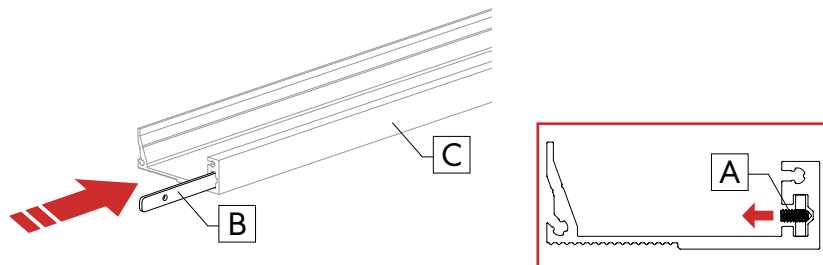

KNIFE EDGE

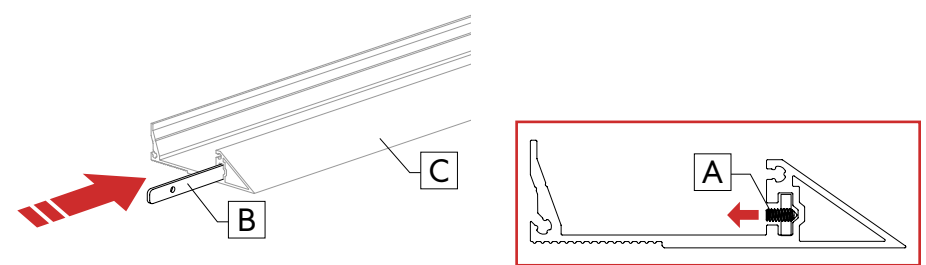

2 INSTALL FIRST RAMP TO BEAMS.


Locate the support beams [D] and trace a reference line on the wall where to install the ramp [C].

Drill holes on the drywall all the way to the beams [D], where the ramp [C] will be located.


With the help of a level, anchor the ramp [C] onto the beams with drywall screws [E].

Note: For pattern with straight corner, the ramp [C] must be installed starting from the corner.


FLAT EDGE

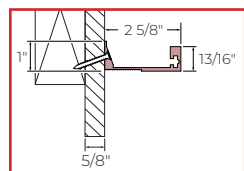


KNIFE EDGE

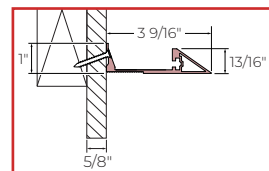

LINEAR

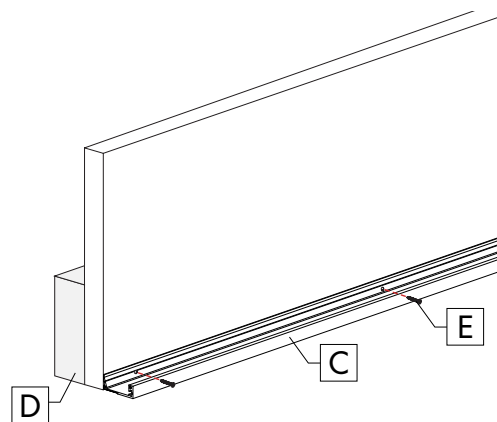


PATTERN WITH STRAIGHT CORNER

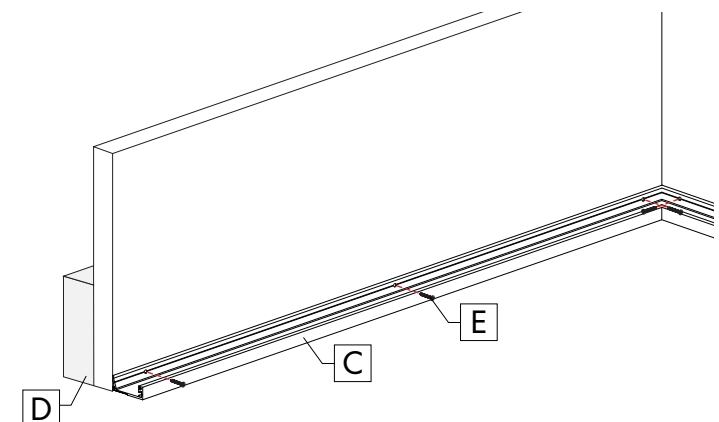

RAMP - INSTALLATION INSTRUCTIONS


3 INSTALL RAMP TO BEAMS.

Align the next ramp [F] to the 1st ramp [C] using a level.

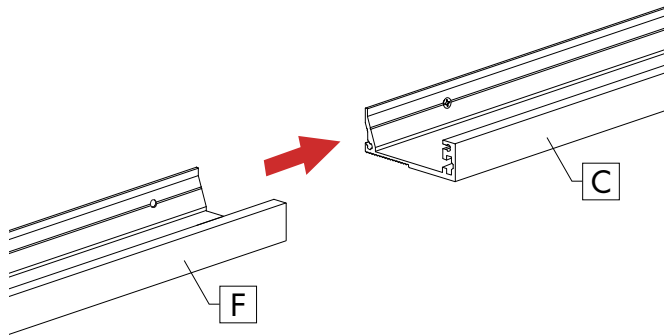

Drill holes on the drywall all the way to the beams, where the next ramp [F] will be located.

With the help of a level, anchor the next ramp [F] onto the beams with drywall screws [G].

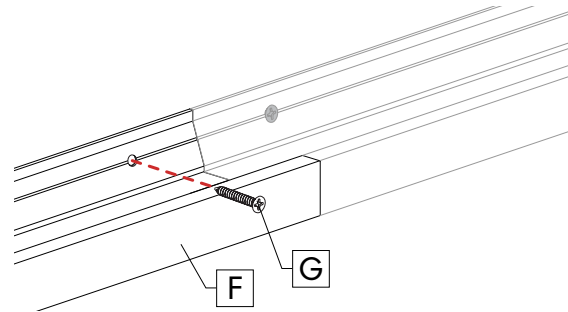


4 JOIN RAMPS.

Slide the aligner [B] from one side to the middle of the two ramps.


Secure the aligner [B] by tightening the set screws [A].

Note: Repeat steps 1 to 4 for each ramp section.

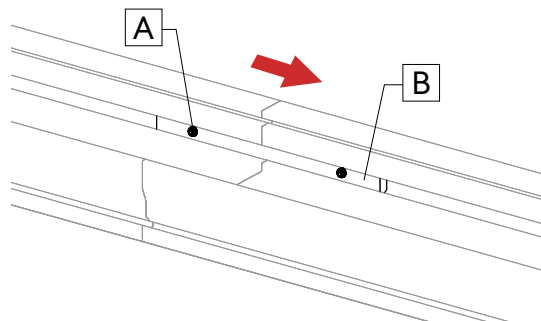

5 INSTALL END CAPS. **OPTIONAL**

Place end caps [H], if provided, at the extremities of the ramp [C] and secure them with screws [I].

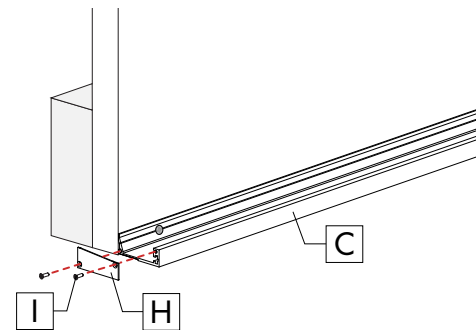

RAMP - INSTALLATION INSTRUCTIONS

6 FINISH RAMP.


- 1) Finish the ramp [C] installation with primer paint.
- 2) Apply drywall compound in front of and under the ramp, then sand until everything is smooth and even.
- 3) Paint the ramp the desired color.

Note: Applying primer paint before installing drywall compound will help it to stick to the surface.
Use drywall tape between joining sections for better results.




SHOWN WITH FE1, APPLICABLE TO KE1.

BOTTOM VIEW

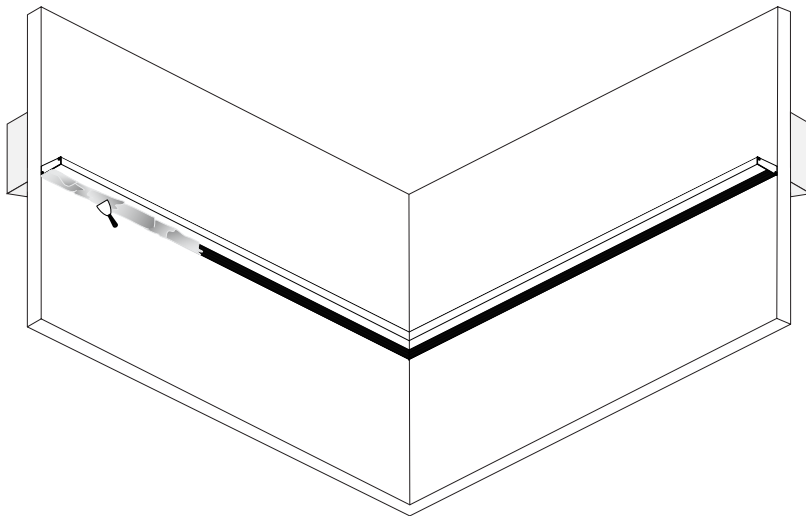

TOP VIEW

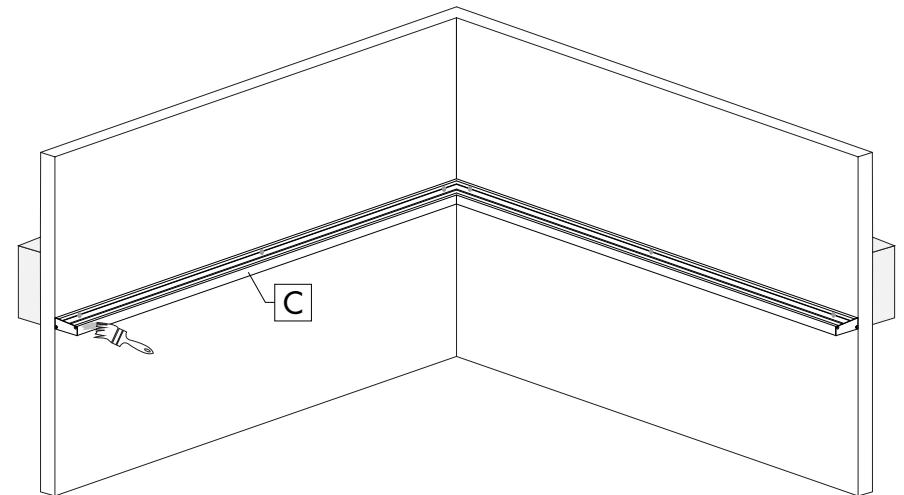

EVOQ SLIM

Fixture with ramp



FIXTURE - INSTALLATION INSTRUCTIONS




Do not install fixtures before drywall and painting are complete.

1 MAKE ELECTRICAL CONNECTIONS.

Connect the provided leader cable(s) [A] to the fixture.



Make electrical connections between the cable [B] from the driver and the provided leader cable(s) [A] with wire nuts [C] (by others).

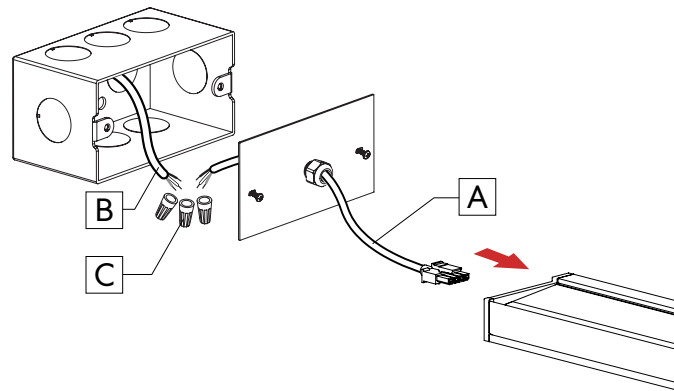

2 INSTALL FIXTURES.

Install all fixtures into the ramp [D].


Note: Refer to layout drawings for recommended fixture placement.

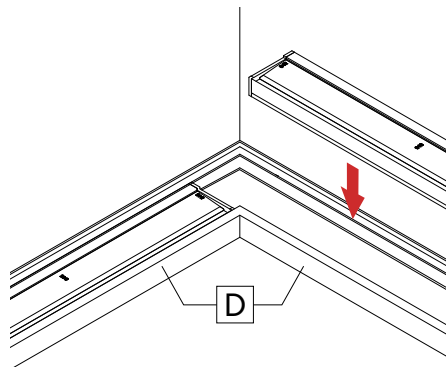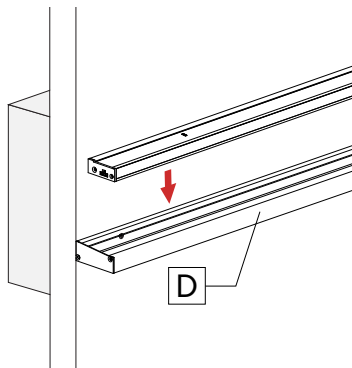

FIXTURE - INSTALLATION INSTRUCTIONS

3 CONNECT FIXTURES.

Make electrical connections between fixtures by using retractable connection cable [E].
To connect fixture further away from each other, or in a corner, use the provided jumper cable [F].

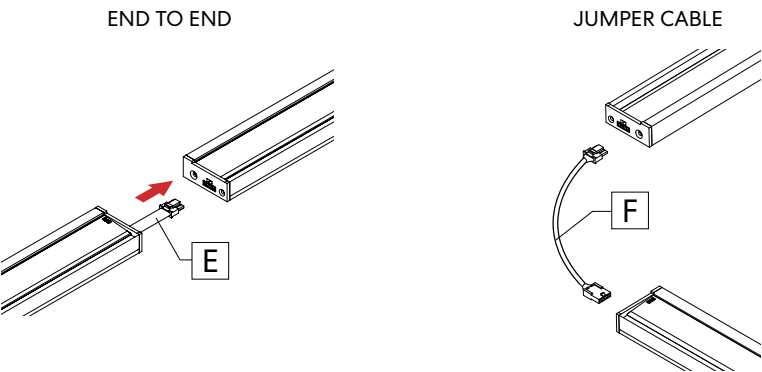

Maximum run length per leader cable

	350 lm/ft	500 lm/ft	750 lm/ft	1000 lm/ft
Static white - 80+ CRI/ 90+ CRI	16'	16'	16'	12'
Static white - 95+ CRI	16'	16'	12'	NA
Full spectrum static white	16'	16'	10'	NA
SOLA/DUO	8'	8'	5'	NA