

HEMI

Downlights - Recessed Remodel (RM)



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Wire dimming conductors as Class 1.




For electrical connections, please refer to the [wiring diagram guide](#).




1 PREPARE CEILING.

Cut hole opening **[A]** in ceiling, according to shape and dimensions shown in table below.


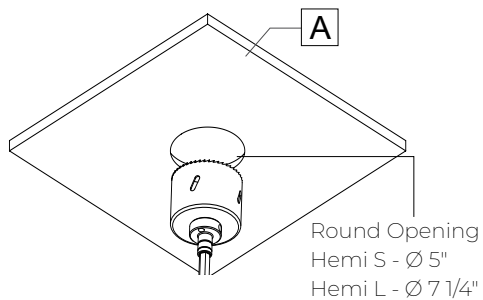


2 MAKE ELECTRICAL CONNECTIONS.


Bring BX cable(s) **[B]** from the ceiling opening.
Note: If 2 driver boxes are provided, a separate BX cable is required for each driver box.

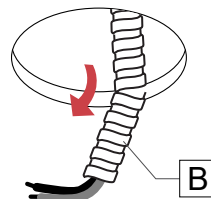

Unfasten screw(s) **[C]** and pivot the cover(s) **[D]**.
Make electrical connections between BX cable(s) **[B]** and driver cables **[E]** with wire nuts **[F]** (by others).
Warning: A luminaire with more than one power supply connection means shall be connected to only one branch circuit.

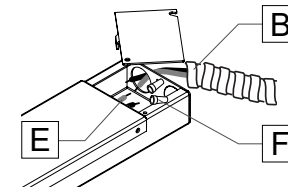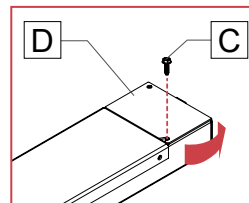


Reinstall the cover(s) **[D]** by pivoting it back into place, and tighten the screw(s) **[C]** to secure the cover(s) **[D]**.

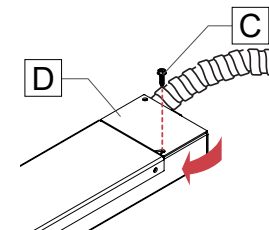

3 ATTACH SAFETY CABLE.



Attach the provided safety cable(s) **[G]** from the trim piece or mudplate piece onto the driver box(es) **[H]**.

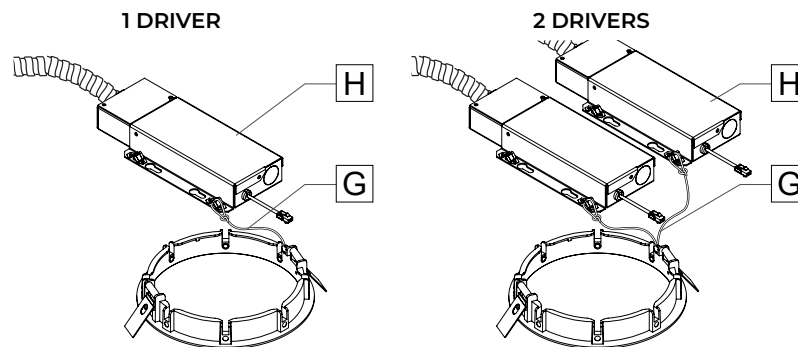

4 INSERT DRIVER.

Place the driver(s) **[H]** into the ceiling.

Note: Secure the driver box(es) **[H]** in the ceiling using the key slot holes **[I]**.

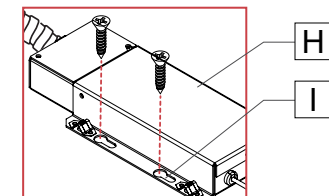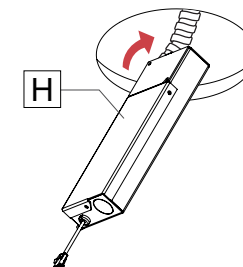


HEMI

Downlights - Recessed Remodel (RM)

5 INSTALL LIGHT ELEMENT.


FLANGED TRIM

Squeeze spring clips [J] upwards onto flanged trim [K]. Insert the flanged trim [K] into opening until spring clips [J] snap back above the ceiling in the housing.

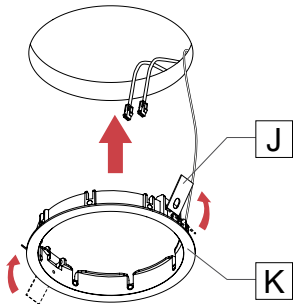


Bring the light element [L] closer to the ceiling. Connect the quick connectors [M] from the light element [L] to driver in housing. Attach the safety cable [N] to the trim piece.

Note: When there is more than 1 light element, follow the corresponding indicators on the quick connectors to connect the light elements to drivers in housing.

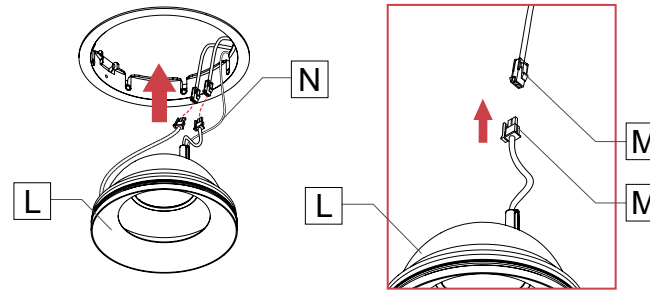


TRIMLESS DRYWALL MUDPLATE

Attach mudplate [O] to ceiling and screw onto ceiling. Plaster and sand over mudplate [O].

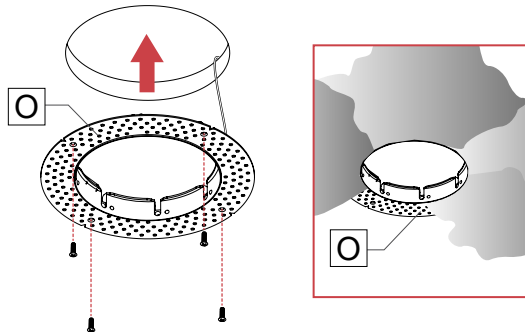

Bring the light element [L] closer to the ceiling. Connect the quick connectors [M] from the light element [L] to driver in housing. Attach the safety cable [N] to the mudplate piece.

Note: When there is more than 1 light element, follow the corresponding indicators on the quick connectors to connect the light elements to drivers in housing.

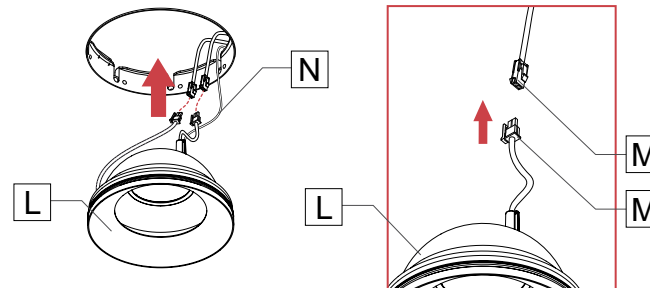


6 INSTALL FIXTURE.

Snap in the fixture [P] in place into ceiling opening until audible click is heard.

Rotate the baffle or hot aim adjustable module if needed.

FLANGED TRIM

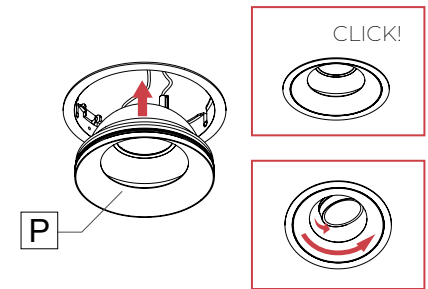

TRIMLESS DRYWALL MUDPLATE

