



NOTE: Wire dimming conductors as Class 1

1 SINGLE FIXTURE

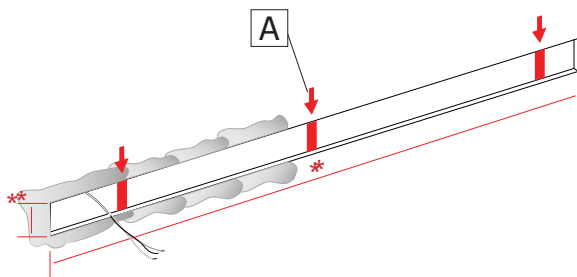


Make the hole in the wall with the right dimension (*) using provided client drawing. Be sure to have access to the main power cable. Mark on the wall where the studs (A) are.

2

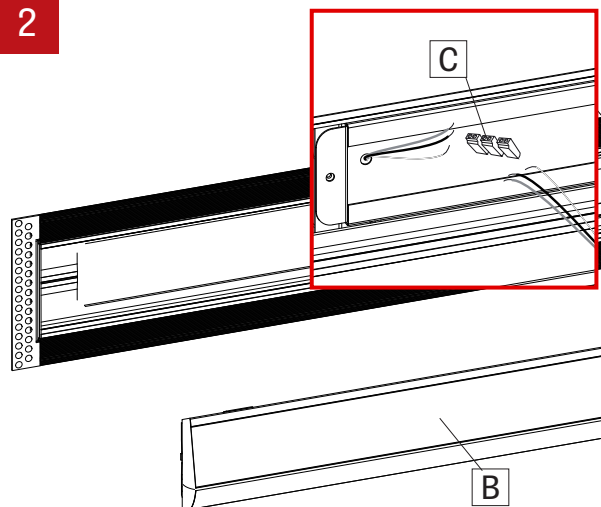


Remove the optic (B) and disconnect the quick connectors (C). Place the cartridge in a safe place.

3

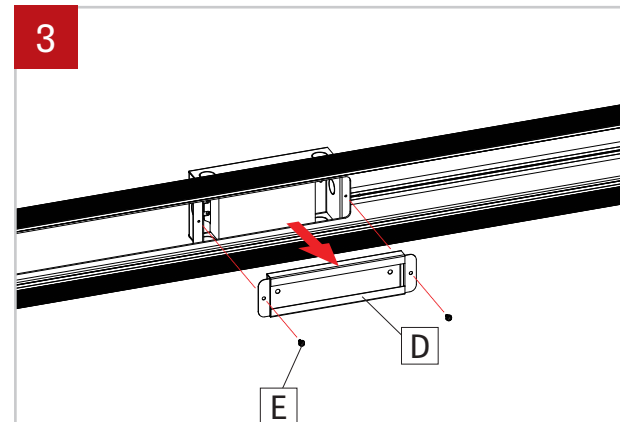


Remove the driver box cover (D) by unscrewing it. Keep the screws (E) in a safe place.

4

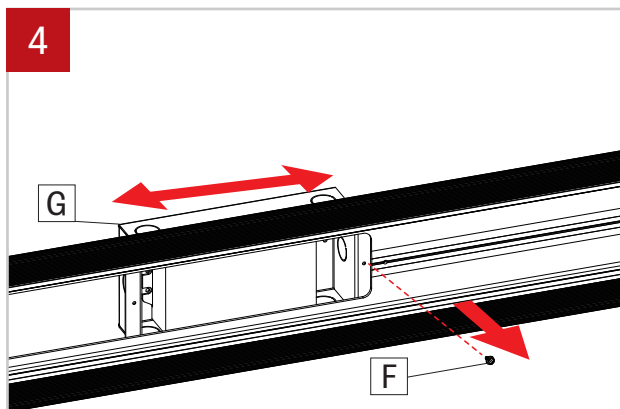


Remove the driver box screw (F) and keep it in a safe place. Slide the driver box (G) to be able to fit it between wall studs.

5






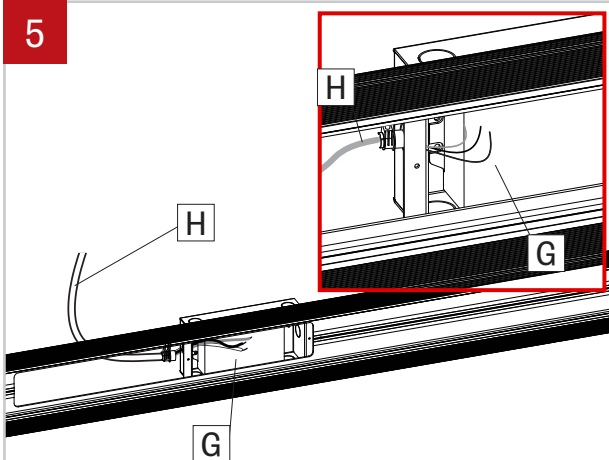


Pass the main power cable (H) through the driver box (G) without doing the connection.



6

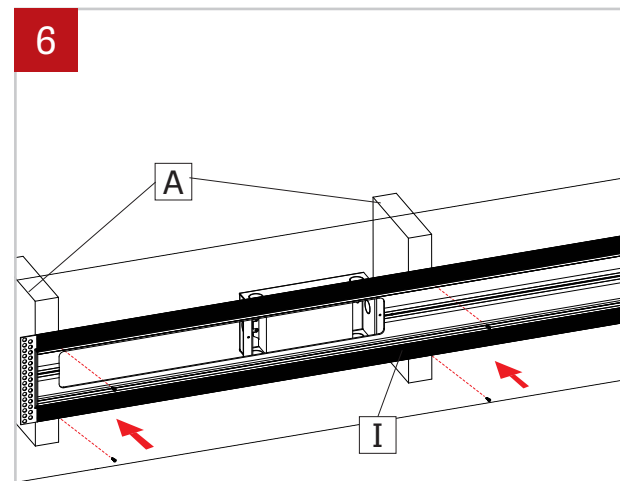

Drill hole (D0.250") in the housing (I) referring to the studs (A) position. Screw the fixture in place (screws not provided) to the wall.

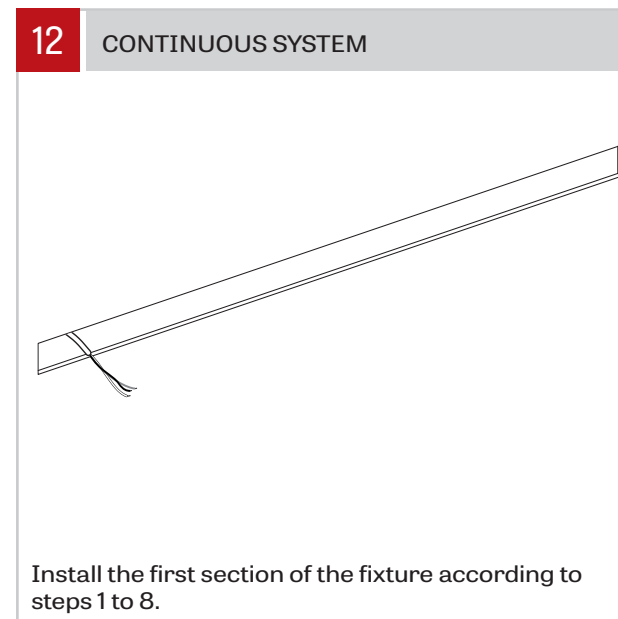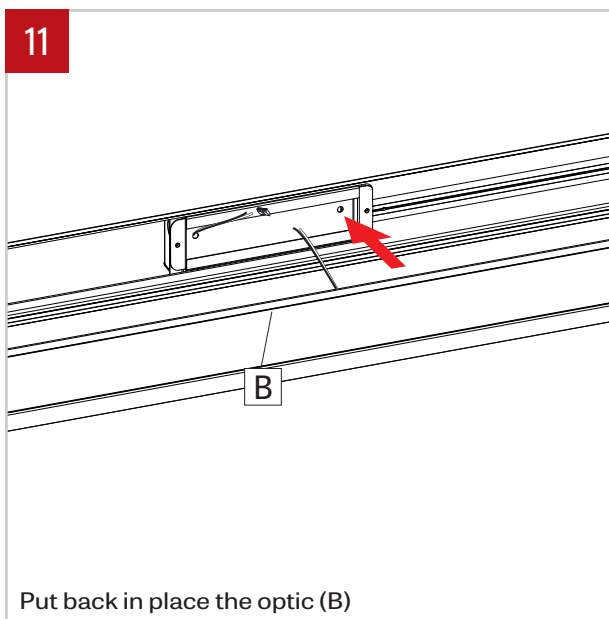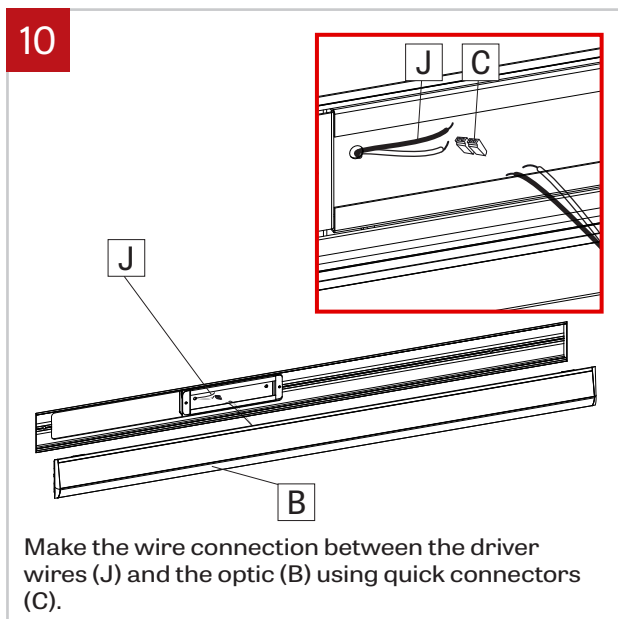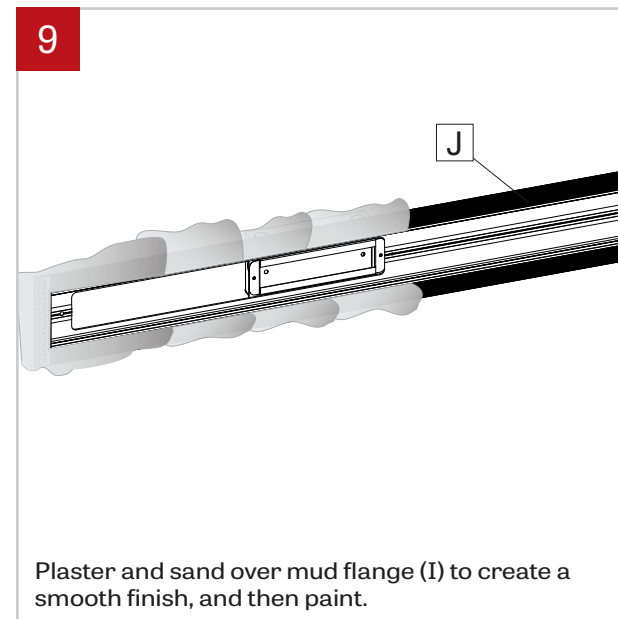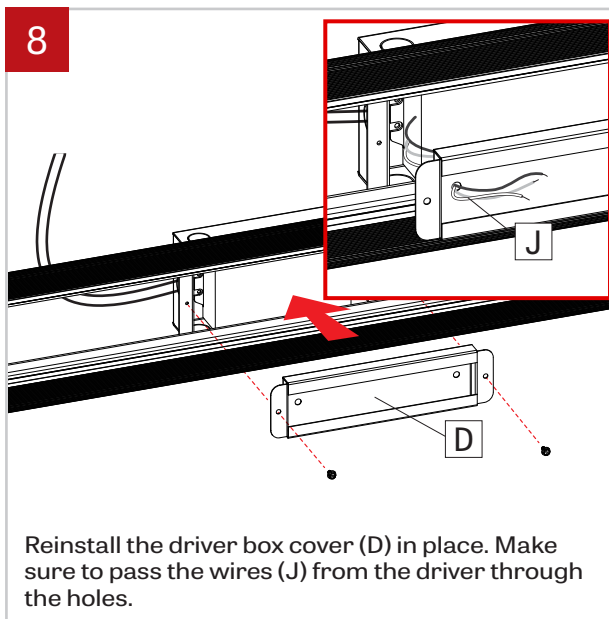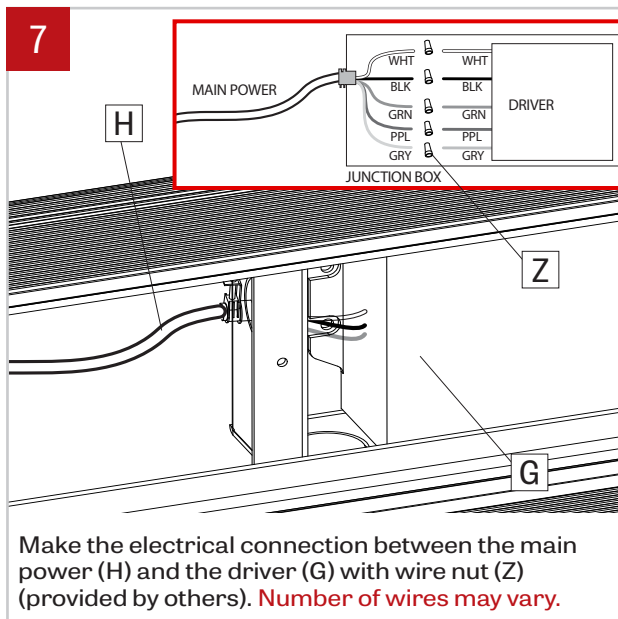


13

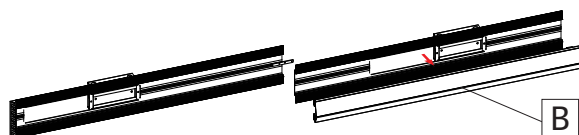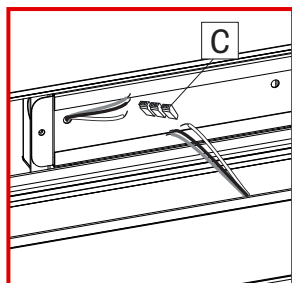


Remove the optic (B) from the second fixture and disconnect the quick connectors (C). Place the cartridge in a safe place.

14

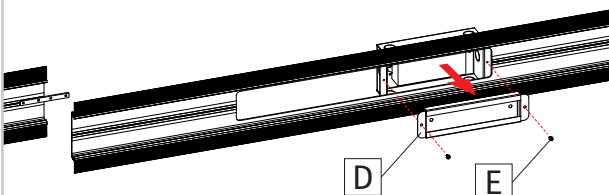


Remove the driver box cover (D) by unscrewing it. Keep the screws (E) in a safe place.

15

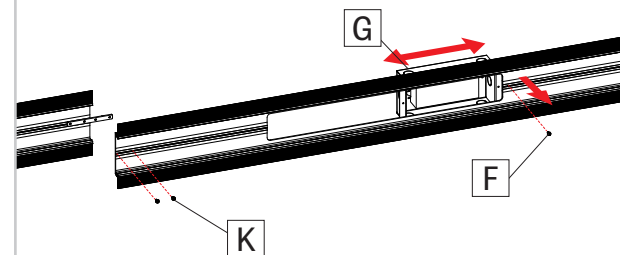


Remove the joining screws (K) and keep it in a safe place. Remove the driver box screw (F) and keep it in a safe place. Slide the driver box (G) to be able to fit it between wall studs.

16

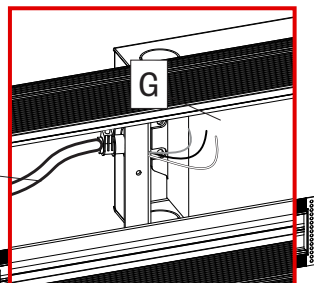


Pass the main power cable (H) through the driver box (G) without doing the connection.

17

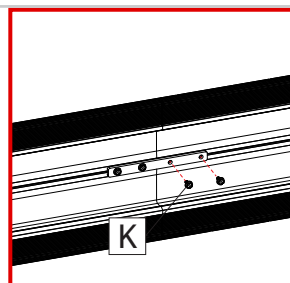


Insert the housing in the hole, slide it against the first section so there is no gap between the 2 adjacent sections. Attach the 2 housings together using the 2 joining screws (K) previously removed from the joining bracket.


18

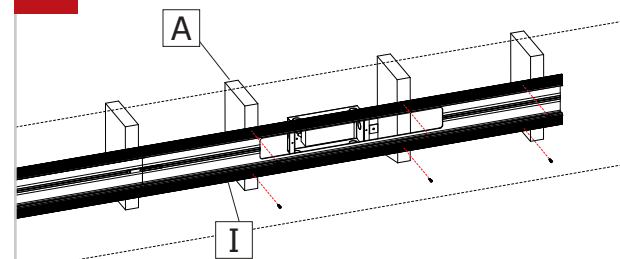


Drill hole (D0.250") on the mud flanges (I) referring to the studs (A) position. Make sure they are aligned (using the alignment pins already in the alignment holes). Screw the fixture in place (screws not provided) to the wall.

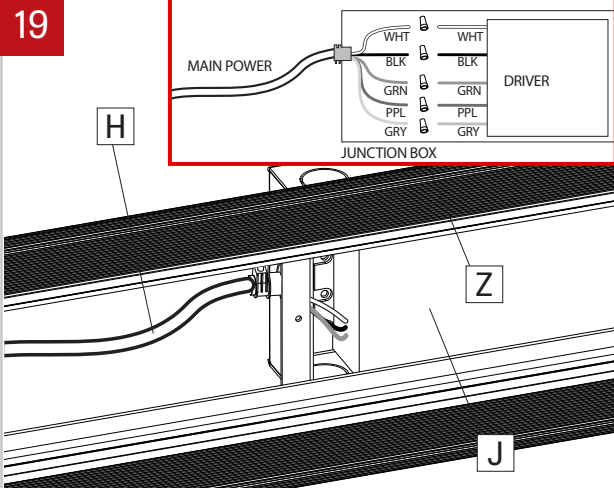


Make the electrical connection between the main power (H) and the driver (J) with wire nut (Z) (provided by others). **Number of wires may vary.**

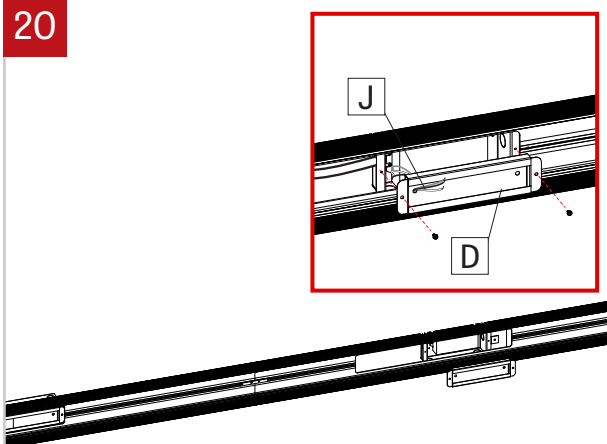


Reinstall the driver box cover (D) in place. Make sure to pass the wires (J) from the driver through the holes.

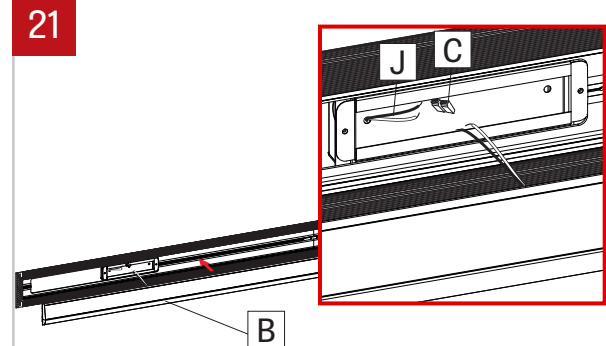

Make the wire connection between the driver wires (J) and the optic (B) using quick connectors (C). **Number of wires may vary.**

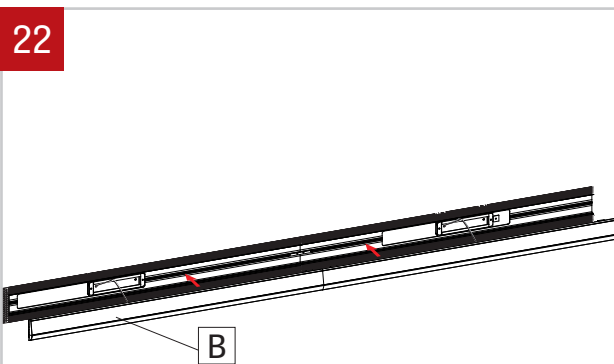

Put back in place the optic (B)

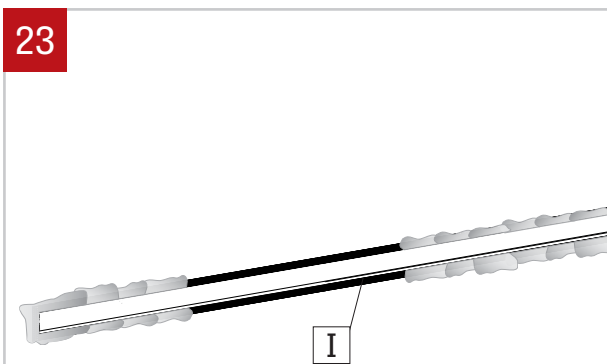

Plaster and sand over mud flange (I) to create a smooth finish, and then paint.