



NOTE: Wire dimming conductors as Class 1

1 SINGLE FIXTURE

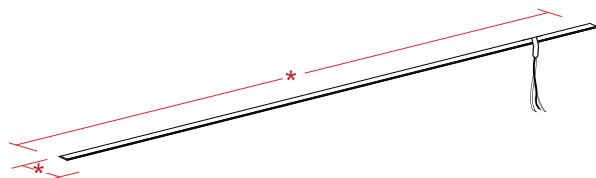


Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [*] given in the client drawings.

2

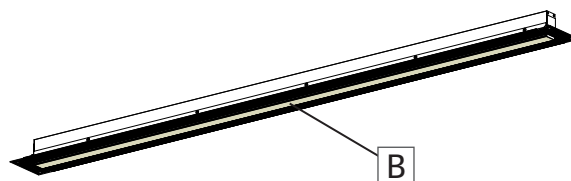


Make sure that the lens (A) is installed on the fixture and protected by a lens cover.

3

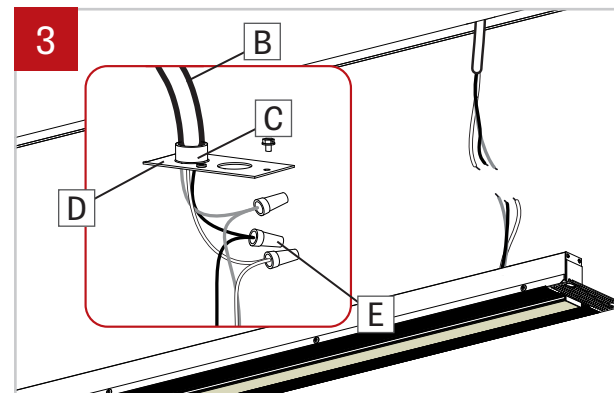


Unscrew and remove the power plate. Install power cable (B) through the connector (C) and install onto the power plate (D) provided. Make electrical connections between power cable (B) and fixture cables using electrical marettes (E). Push wires inside the fixtures and reinstall the power plate (D) to the fixture.

4

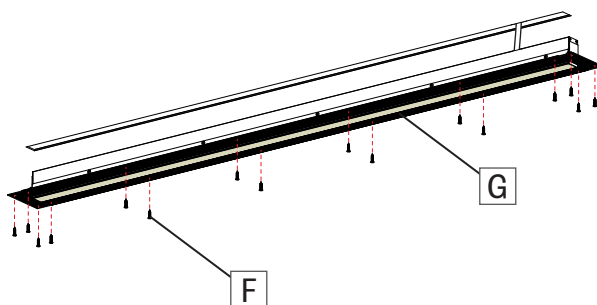


Fasten drywall screws (F) through the obround holes of the flanges (G).

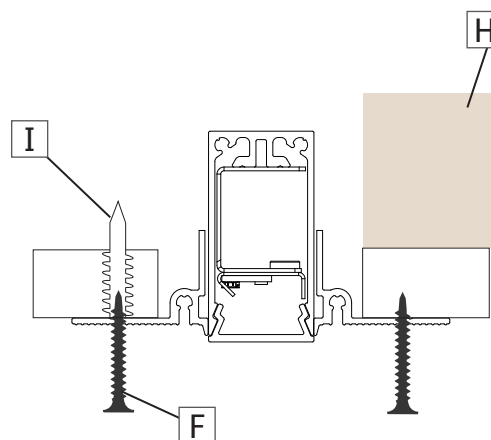


To reinforce the screws (F) that maintain the fixture in the drywall, wood blocking (H) or drywall anchors (I) must be used.

5

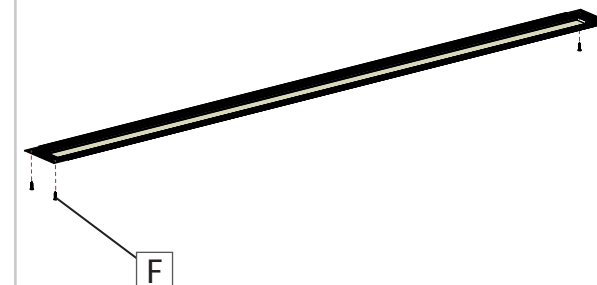


If the fixture position need adjustments, remove screws (G) on one side of the fixture and adjust it. Reinstall the screws once the position is settled.

6

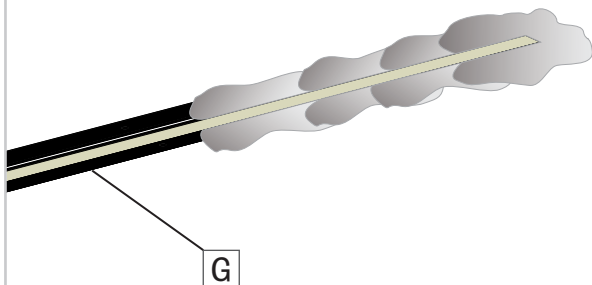

Plaster and sand over mud flange (G) to create a smooth finish.


7

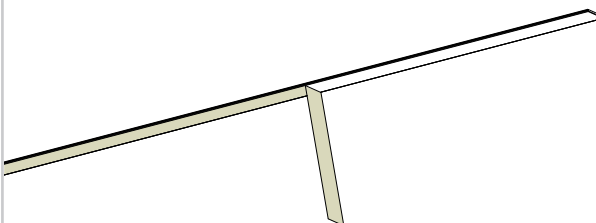

Once the mud is totally dry and painted, remove gently the lens cover.


8

CONTINUOUS SYSTEM

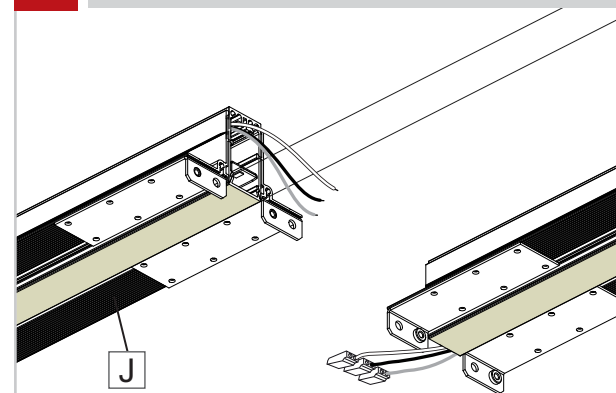


For a continuous system, follow steps 1 to 5 for the first fixture (J) in the run.

9

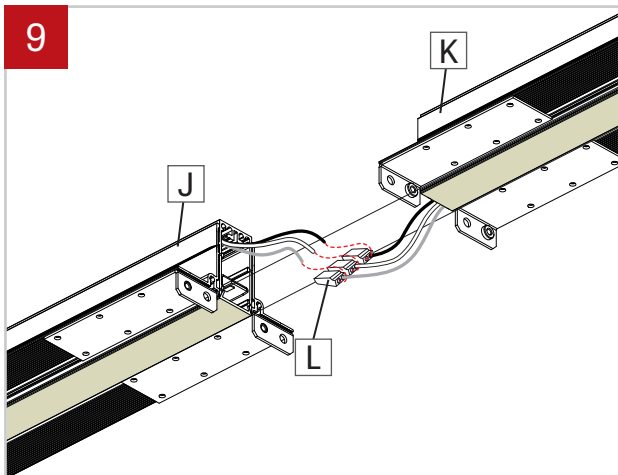


Make the wire connection between the first two sections (J) and (K) using wire connectors (L). Insert the second section (K) into the drywall hole.

10

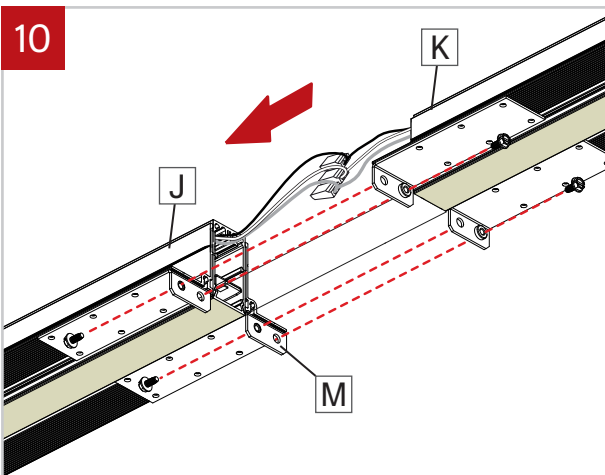


Slide the fixtures (J) and (K) together. Attach the two fixtures by fastening screws on the joiners (M).

11

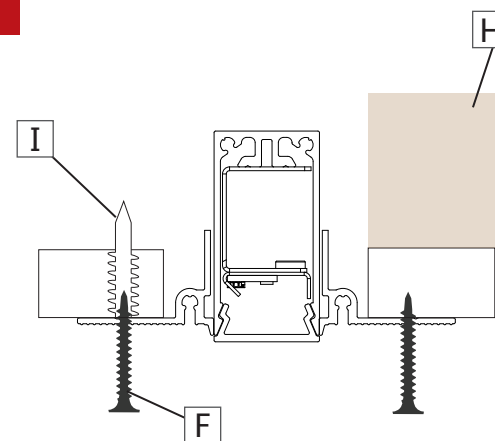


Fasten fixture to the ceiling by fastenning drywall screws (F) through flanges into anchors (I) of wood blocking (H).

12

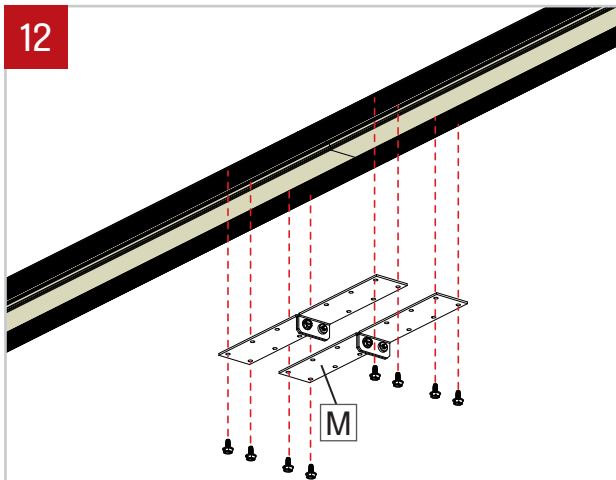


Once the fixtures are attached to the ceiling, remove the joiners (M).

13

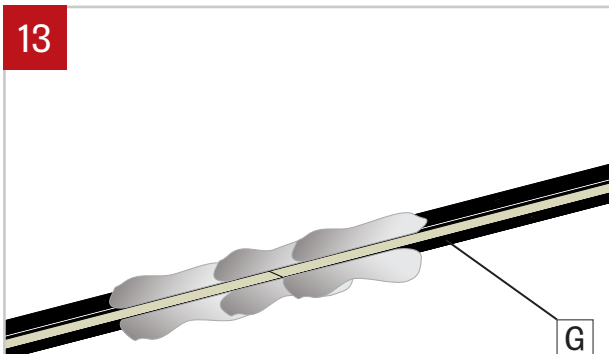

Plaster and sand over mud flange (G) to create a smooth finish.

14

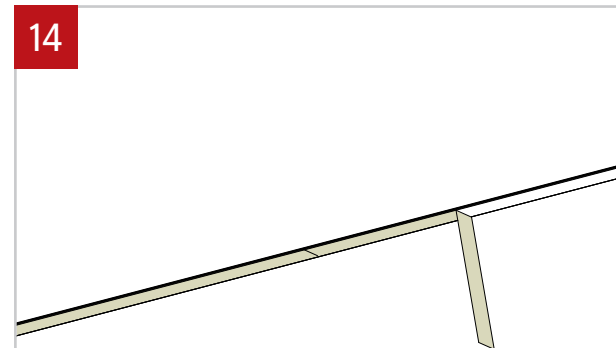

Once the mud is totally dry and painted, remove gently the lens cover.