

NOTE: Wire dimming conductors as Class 1

1 SINGLE FIXTURE




Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [*] in the client drawings.

2




Make sure that the lens (A) is installed on the fixture and protected by a lens cover.

3

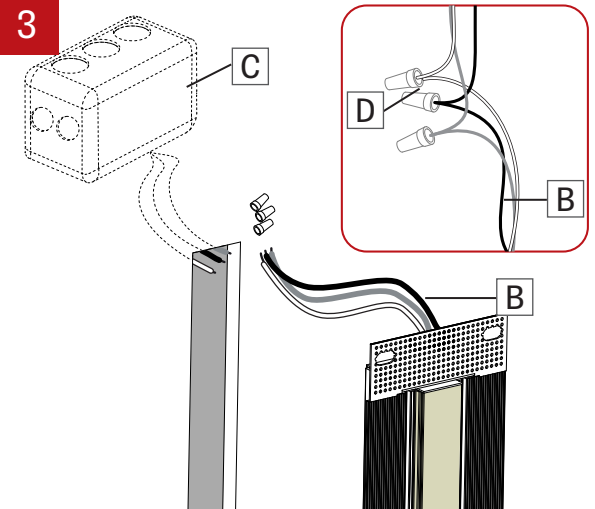


Make electrical connections between power cable (B) (by other) and junction box (C) using wire nuts (D).

4

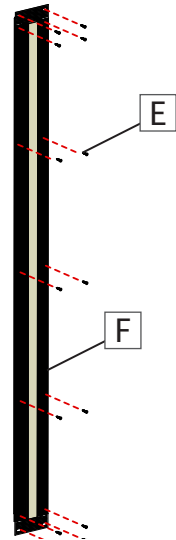


Fasten drywall screws (E) through the obround holes of the flanges (F).

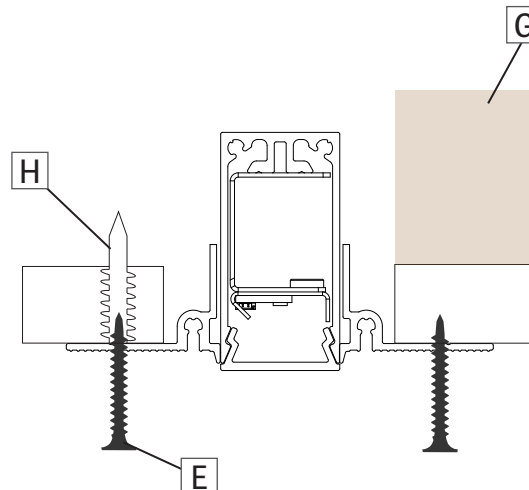


To reinforce the screws (E) that maintain the fixture in the drywall, wood blocking (G) or drywall anchors (H) must be used.

5

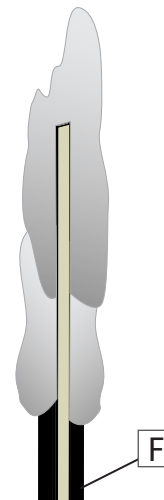

Plaster and sand over mud flange (F) to create a smooth finish.

6

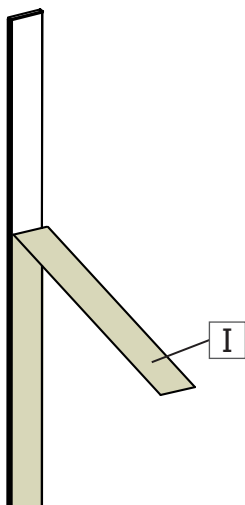

Once the mud is totally dry and painted, remove the cover (I) gently.