


**NOTE:** Wire dimming conductors as Class 1

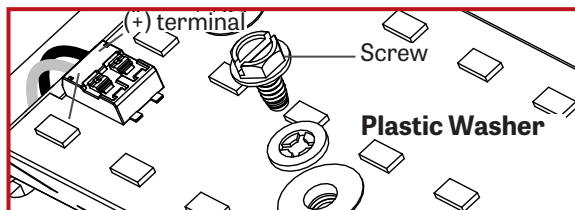

Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly




### 1 SINGLE FIXTURE




Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [\*] given in the client drawings.

### 2

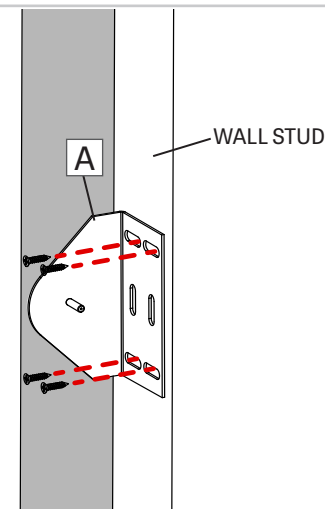


Insert mounting brackets (A) into the pre-cut hole and screw it to the wall stud according to the dimensions given in the client drawings.

### 3

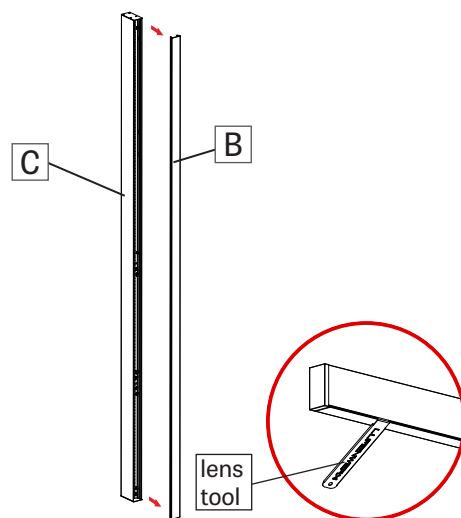


Remove the lens (B) from the fixture (C).

### 4

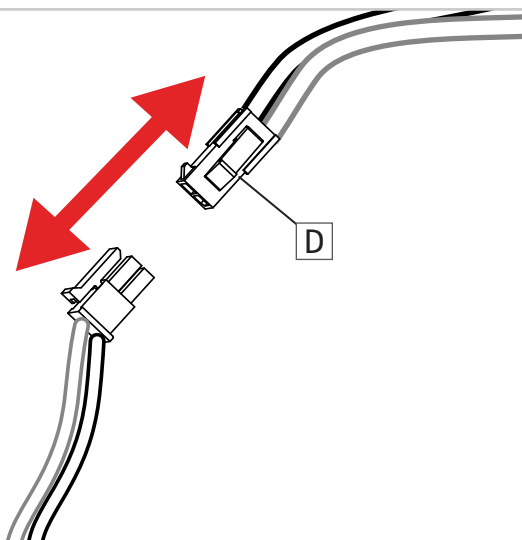

Disconnect moxle quick connector (D) from the LED board.

### 5

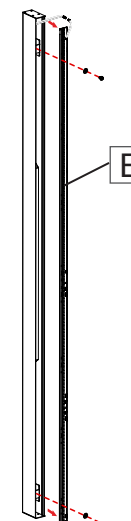

Unscrew the cartridge (E) and remove it from the fixture. Place the cartridge in a safe place.

