


IMPORTANT: Installation instructions are shown with Nova and applies to Nova and Vega fixtures


NOTE: Wire dimming conductors as Class 1

1

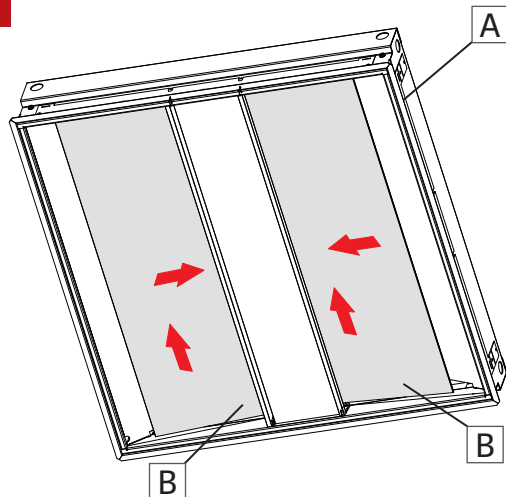


Make sure the power to the fixture (A) is turned off. Remove side lens (B) by sliding and pulling them.

2

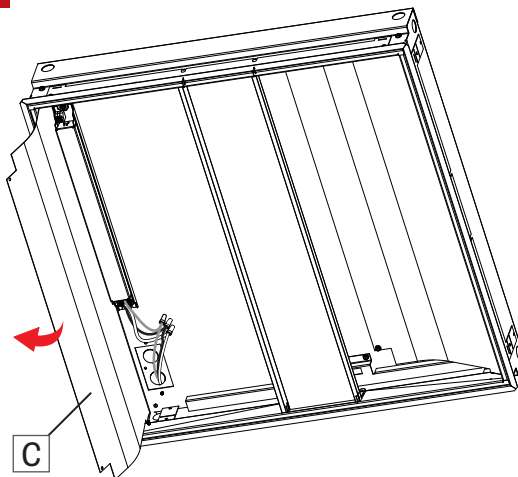


Unscrew to open the reflector (C).

3

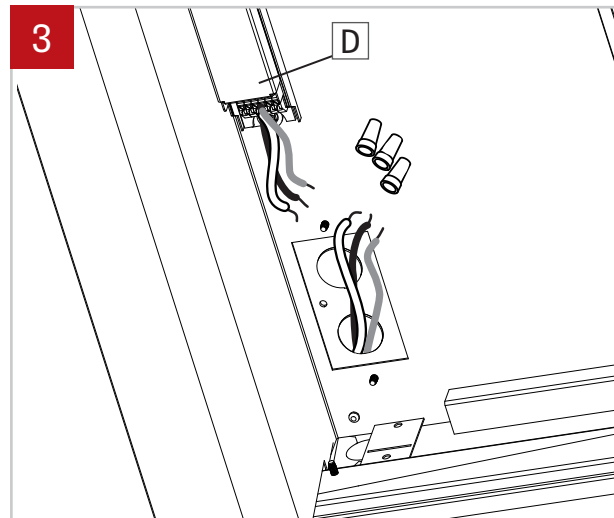


Disconnect wires from the driver (D).

4

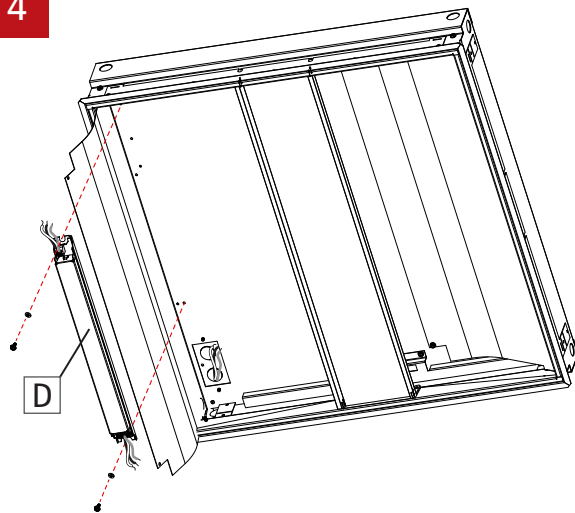


Unscrew the driver (D) from the fixture. Replace the driver and make connection with wire nuts.

5

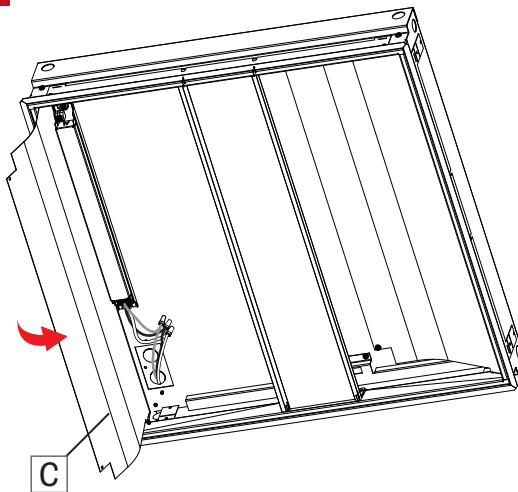

Screw the reflector (C) back into place.

6

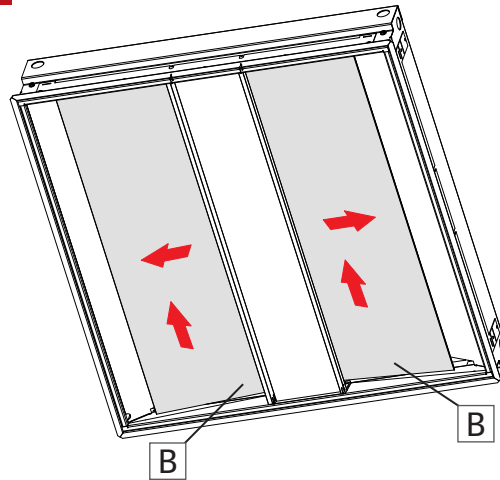

Reinstall side lens (B).