


# NOVA-VEGA FLUORESCENT

## DRYWALL MOUNT - INSTALLATION

**IMPORTANT:** Installation instructions are shown with Nova and applies to Nova and Vega fixtures


**NOTE:** Wire dimming conductors as Class 1

### 1 SINGLE FIXTURE

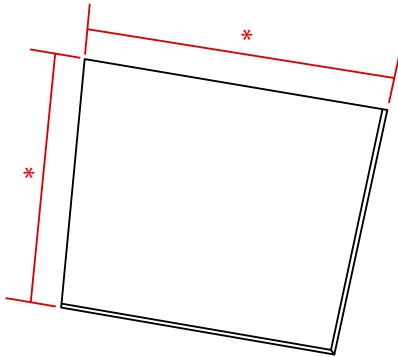


Make sure the power to the fixture is turned off. Cut hole in the drywall according to the dimension [\*] in the client drawings.

2

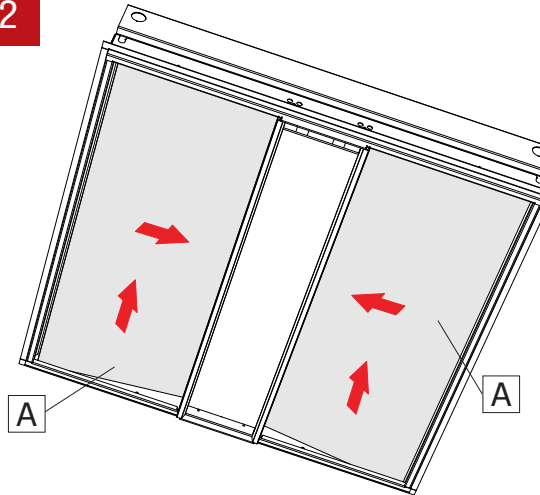


Remove the side lens (A) by sliding and pulling them.

3

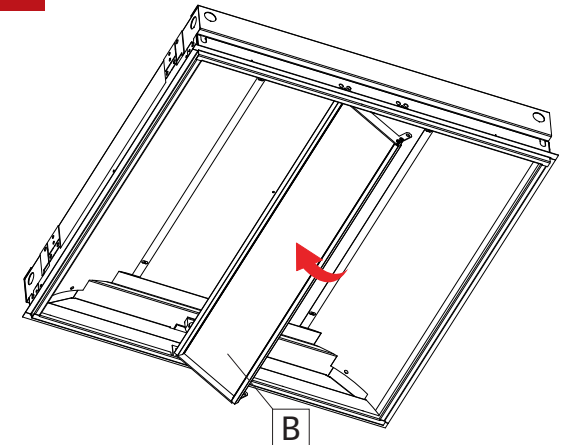


Pull the center basket (B) down to rotate.

4

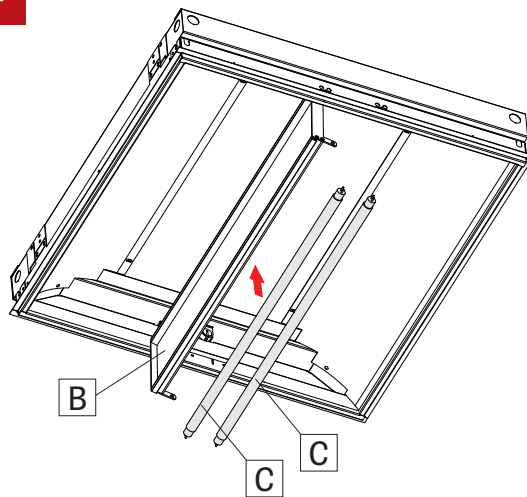


Install the lamps (C) and put back in place the center basket (B).

5

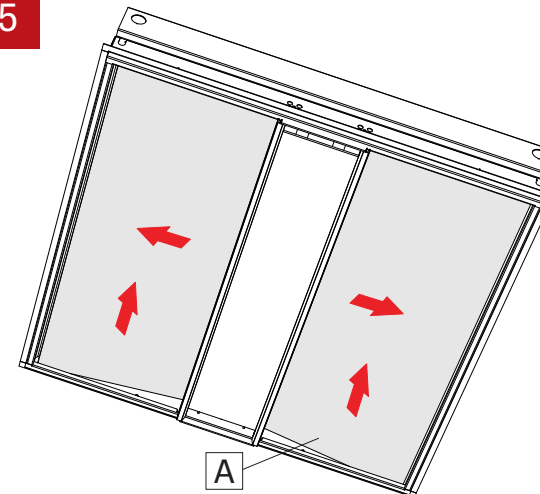

Reinstall the side lens (A).







6

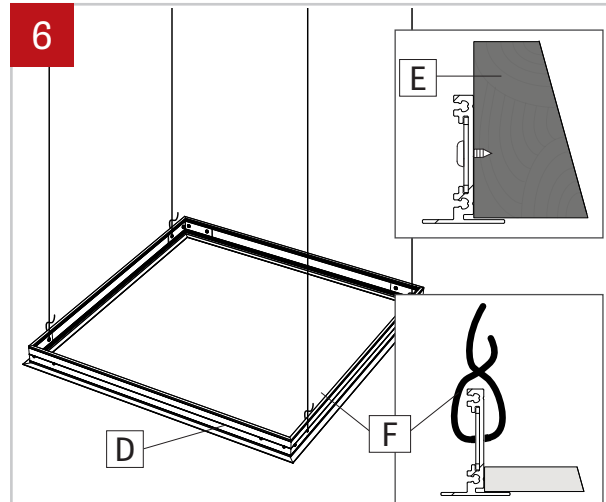



Insert the drywall kit (D) into the hole and attach it to a wooden frame (E) or hang it using hanger wires (F).

# NOVA-VEGA FLUORESCENT


## DRYWALL MOUNT - INSTALLATION

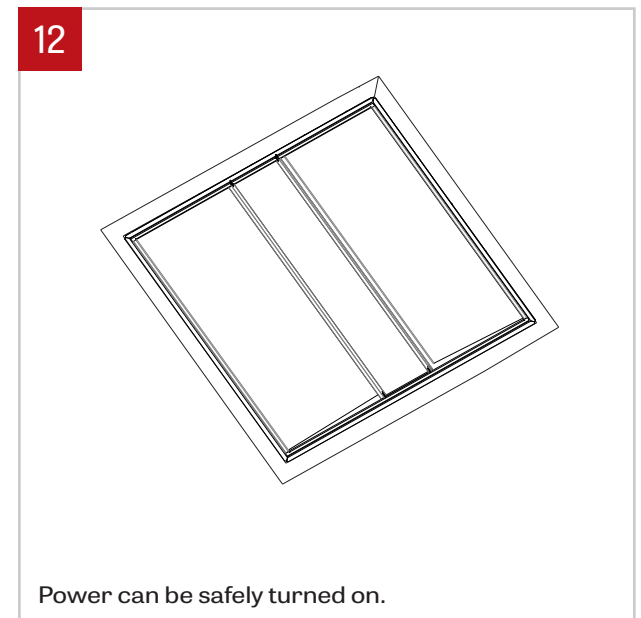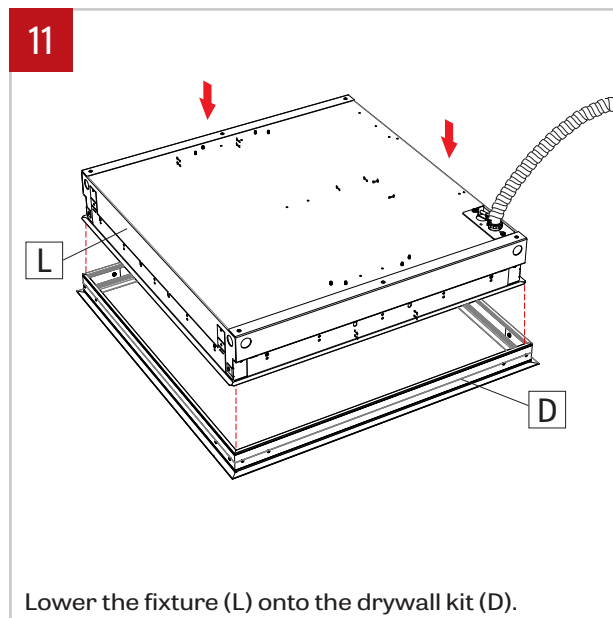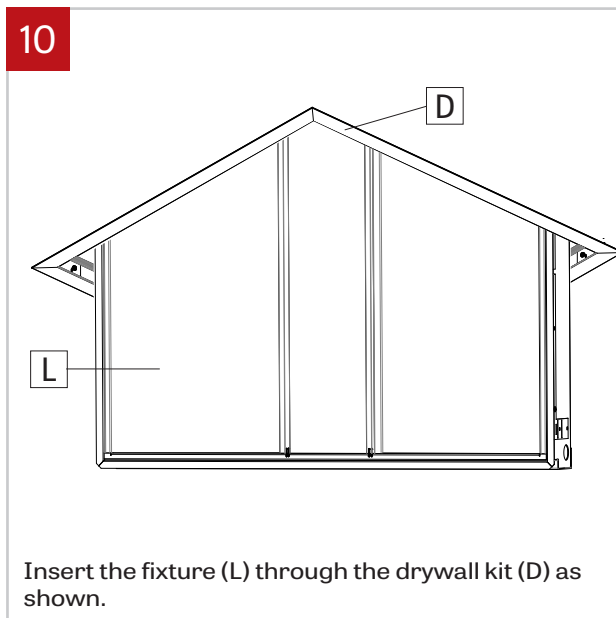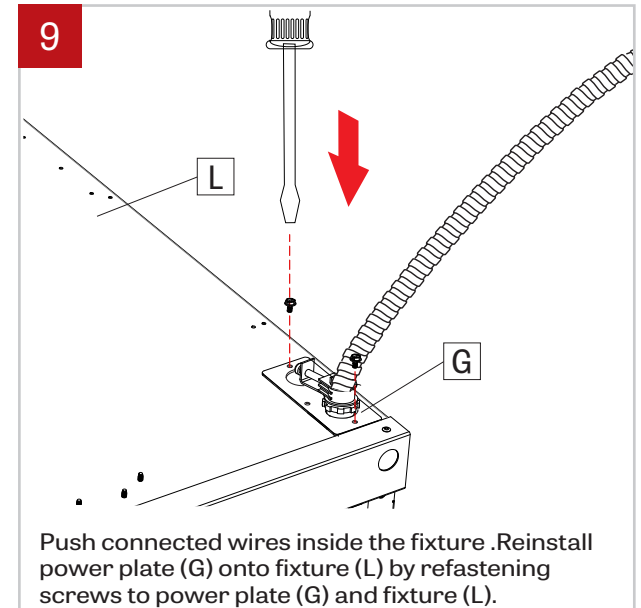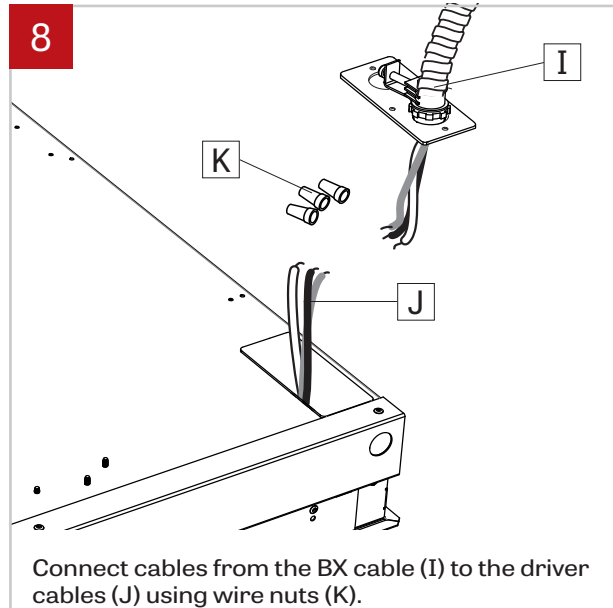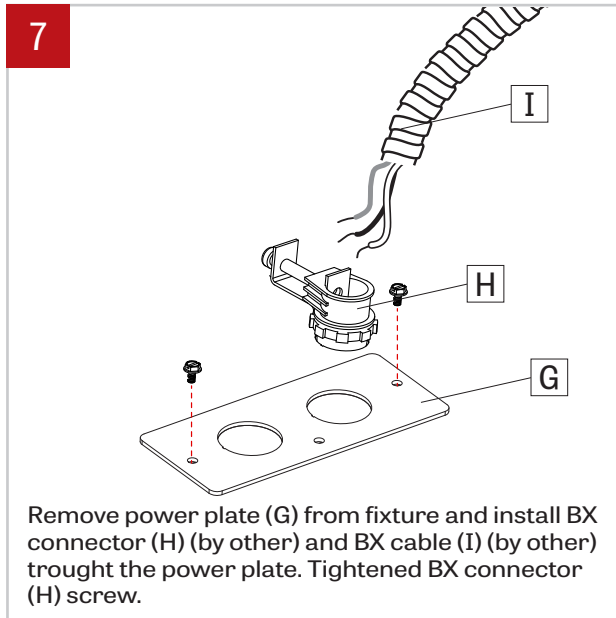

### TOP VIEW

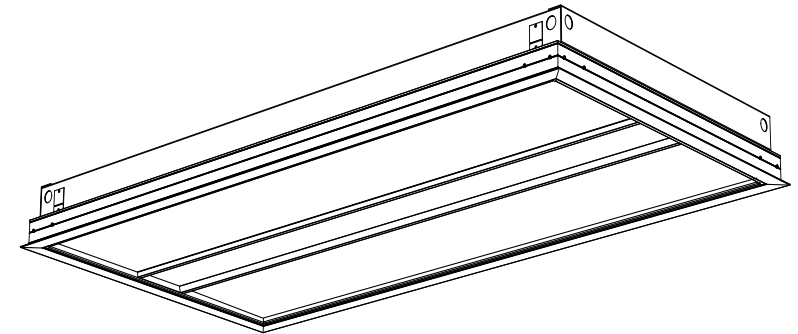
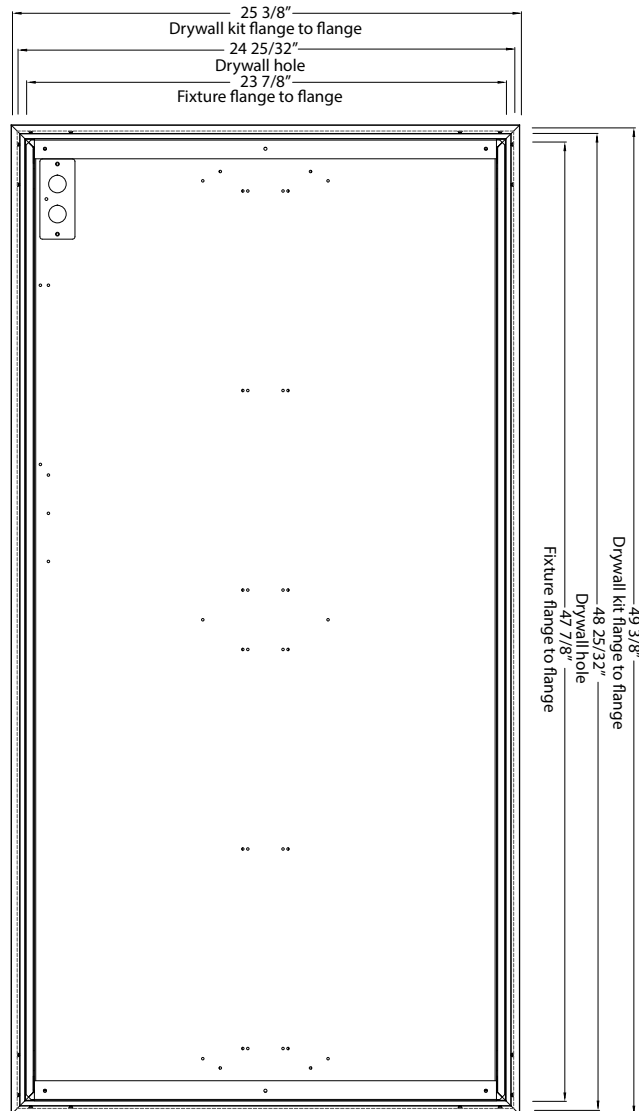


NOVA

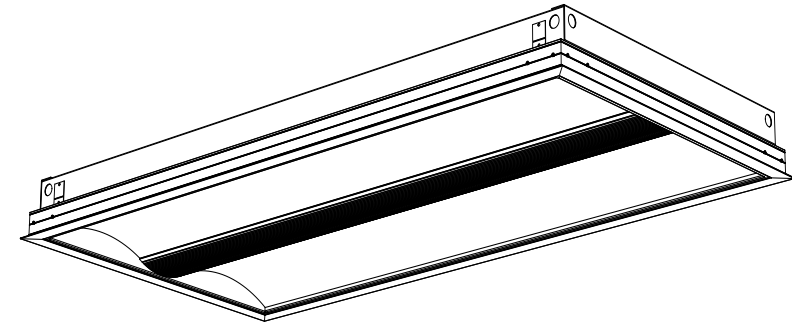


VEGA

## TOP VIEW

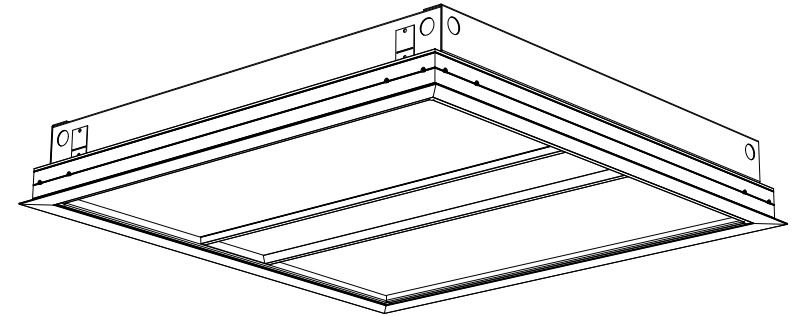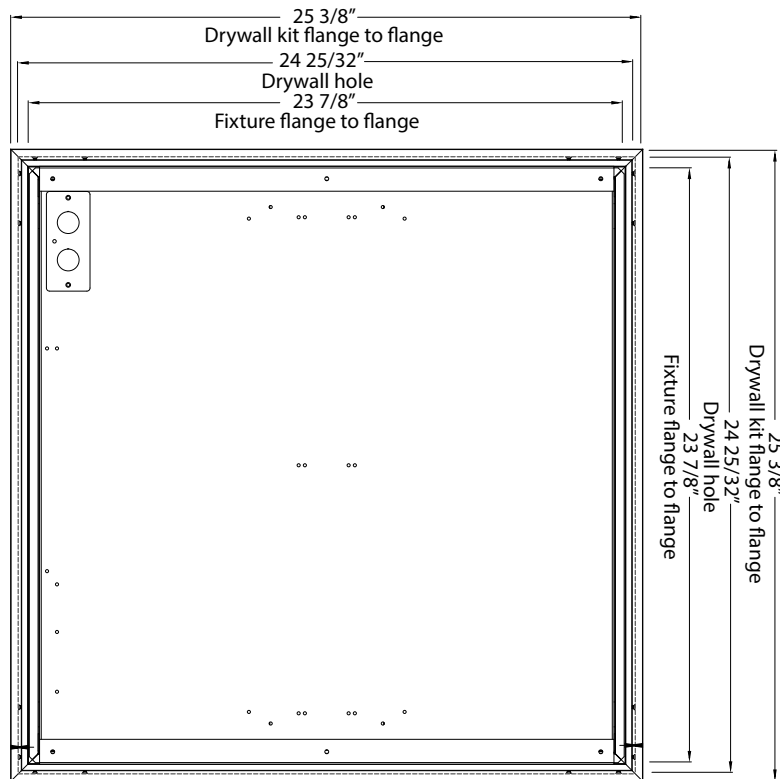

NOVA


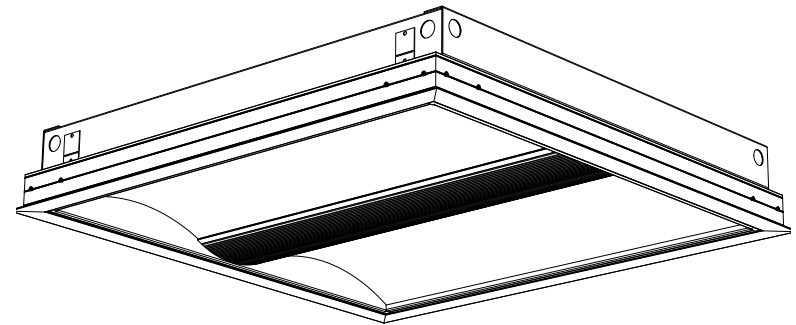


VEGA


# NOVA-VEGA14

## DRYWALL MOUNT - INSTALLATION INSTRUCTIONS

### TOP VIEW

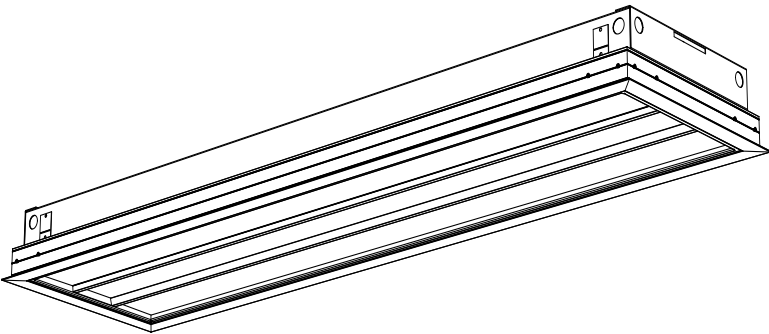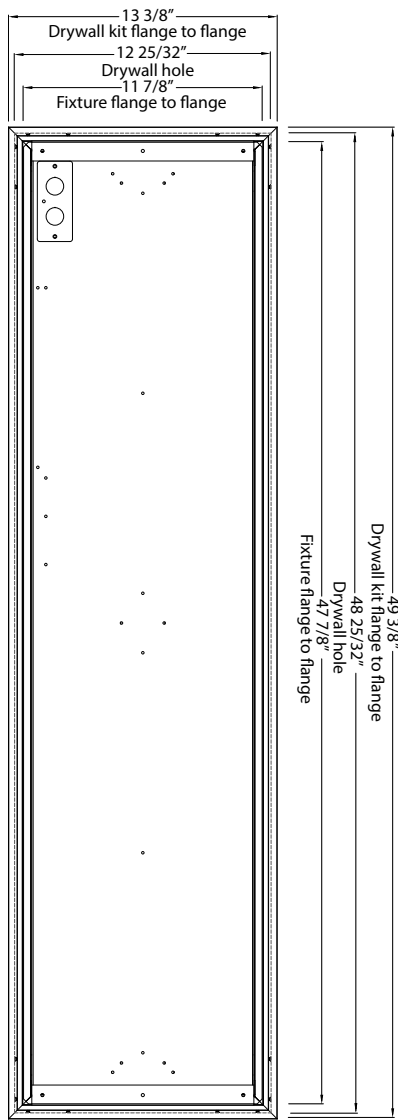

NOVA

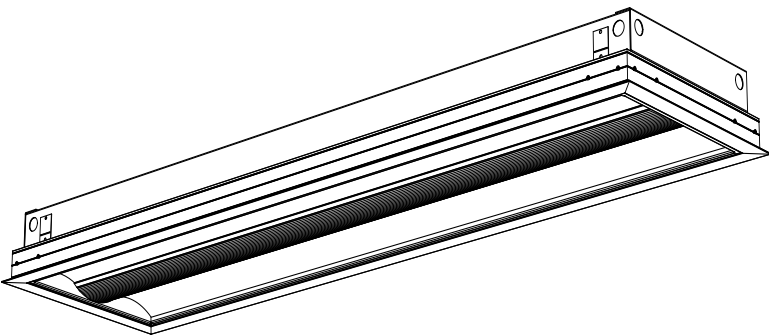

VEGA