


IMPORTANT: Installation instructions are shown with Nova and applies to Nova and Vega fixtures

NOTE: Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

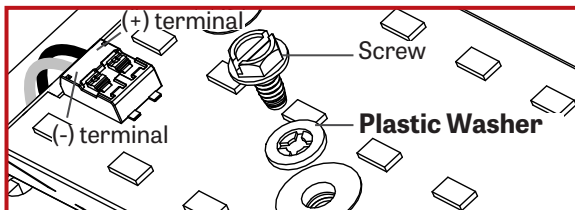


1

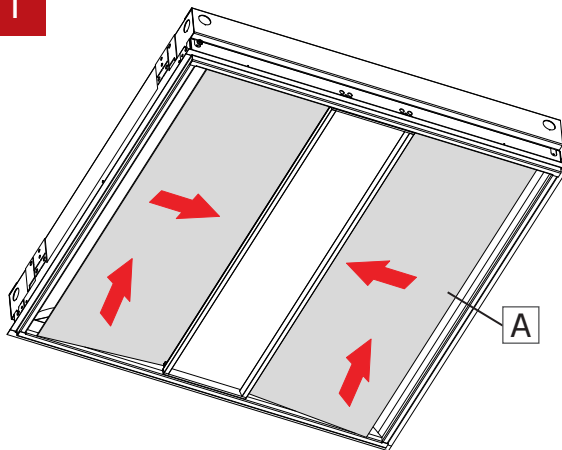


Remove the side lens (A) by sliding and pulling them.

2

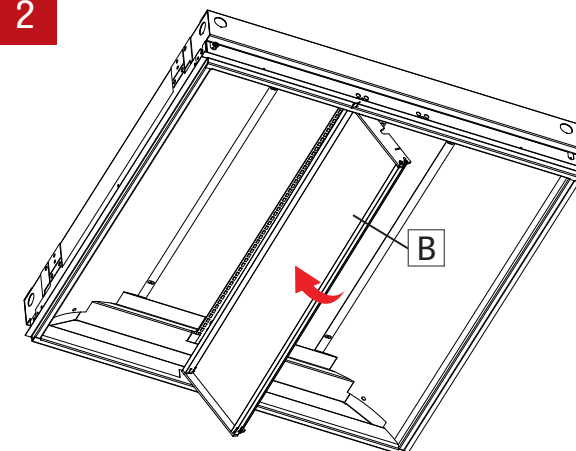


Pull the center basket (B) down to get access to the led boards.

3

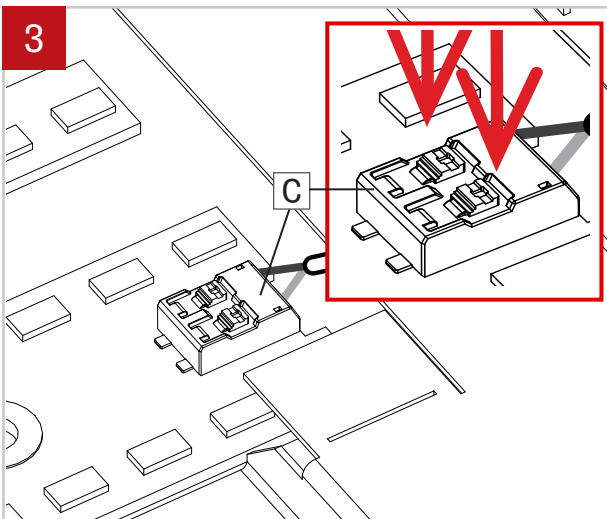


Disconnect LED mox connector (C) by taking a pointed object and pressing on the two tabs on the top. Repeat for second board.

4

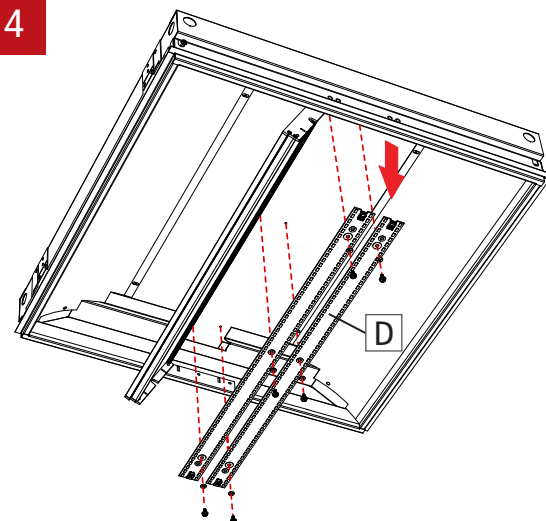


Unscrew LED boards (D) and remove them from the fixture.

5

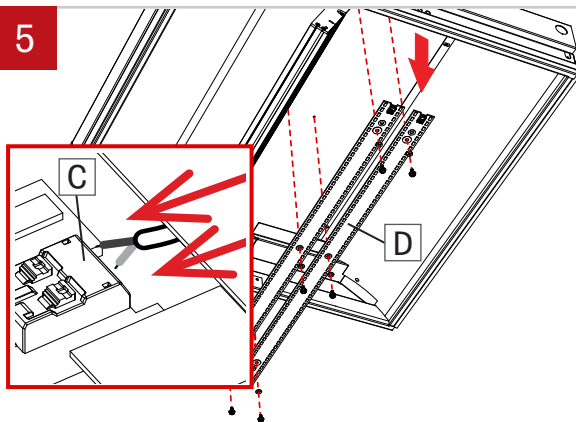


Replace LED boards (D) and reconnect LED connector (C). **NOTE: connect white wire into the negative (-) terminal and black wire into (+) positive terminal.** Screw the LED boards (D) back in place by using **screws with plastic washers.** **Do not apply too much pressure.**

6

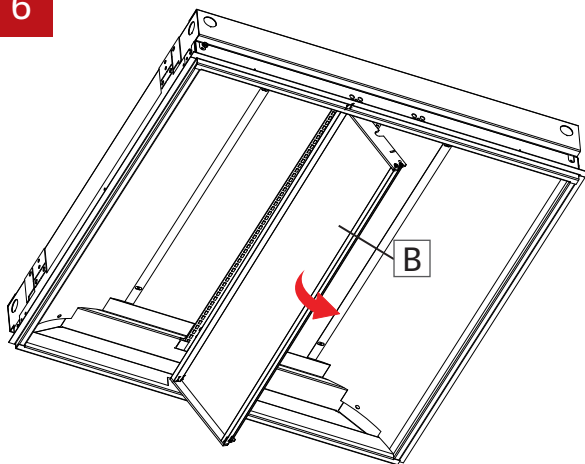

Close the center basket (B) by snapping it back into place.

7

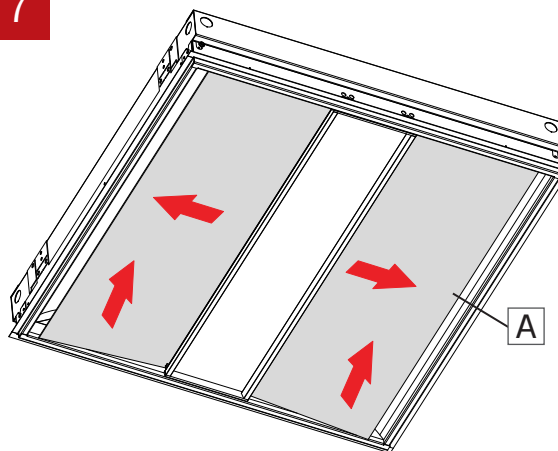

Reinstall the side lens (A) by sliding. Power can be safely turn on.