






## **IMPORTANT**: Installation instructions are shown with ORY 22 and applies to all ORY sizes

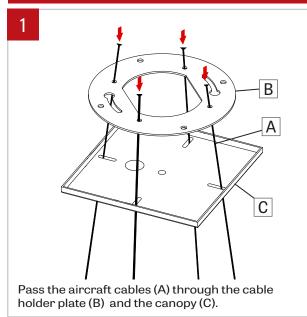

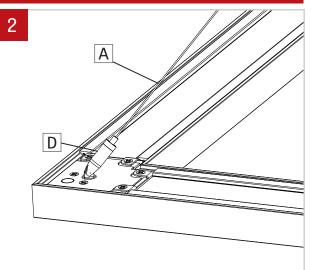


Insert the aircraft cables (A) into the cable grippers (D).

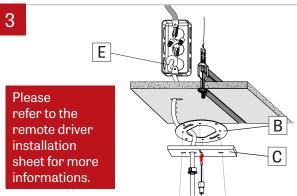

Locate ceiling mounting points according to supplied client drawing. Pass the low voltage power cord through the canopy, make a knot in the power cord (E) and then connect it to the ceiling power feed. Install the cable holder plate (B) and canopy (C). Installation may differ dependind of your type of ceiling, please refer to the remote driver installation sheet for more infos.

November 13, 2019

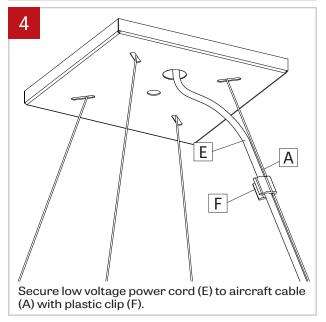



www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILE NAME: ORY-PENDANT-PATTERN-CABLE-INST



Page: 1/1