Lumenwerx

INSTALLATION INSTRUCTIONS

⚠ This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

⚠ Disconnect power before installation or servicing.

⚠ Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.

⚠ Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.

⚠ Wire dimming conductors as Class 1.

⚠ A luminaire with more than one power supply connection means shall be connected to only one branch circuit.

⚠ For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.

⚠ For luminaires installed in wet locations, properly seal all mounting and electrical points.

⚠ Warranty claims will not be accepted if incorrect driver or light element is used.

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC.
Lumenwerx ULC. reserves the right to change or modify product specifications without notification.

PETITE DOWNLIGHT
Recessed Remodel

Lumenwerx


INSTALLATION INSTRUCTIONS

For electrical connections, please refer to the wiring diagram guide.

For remote driver box installation instructions, please refer to the remote driver installation sheet.

1 PREPARE CEILING.


TRM/TRMP/TLMP/GLR/GLR1
Cut hole opening **[A]** in ceiling, according to dimensions shown in table.

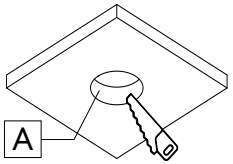


	Drywall	Acoustic tile	Millwork
TRM	Ø 1 11/16"		N/A
TRMP / TLMP	Ø 1 11/16"	N/A	
GLR / GLR1	Ø 1 11/16"		

TRMW
Cut hole opening **[A]** in ceiling with the router according to dimensions shown on the section view.

Note: The baffle opening is cut-through, but the trim opening is a step-hole that is located on the ceiling.

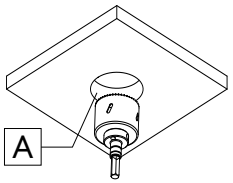

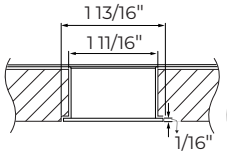


2 INSTALL MUDPLATE. (TRMP/TLMP ONLY)


Note: For TRM/GLR/GLR1/TRMW, skip to step 3.


Attach the mudplate **[B]** and fix with drywall screws **[C]** (by others) onto the ceiling. Plaster and sand over mudplate **[B]**.

TRMP

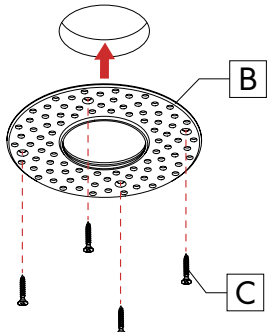

TLMP

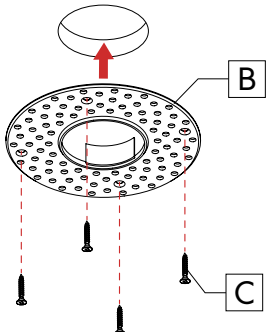

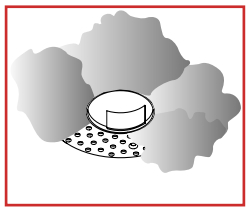


PETITE DOWNLIGHT
Recessed Remodel

Lumenwerx


INSTALLATION INSTRUCTIONS

3 MAKE ELECTRICAL CONNECTIONS.


Connect the main AC power cable to the remote driver box. Then bring the remote driver box DC cable **[D]** from the ceiling opening.

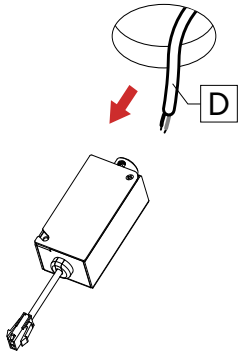


Unfasten screw **[E]** and pivot the cover of the low-voltage connection box **[F]**.

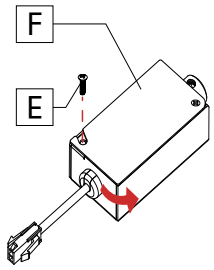

Make electrical connections between the remote driver box DC cable **[D]** and the low-voltage connection box **[F]** with wire nuts **[G]** (by others).

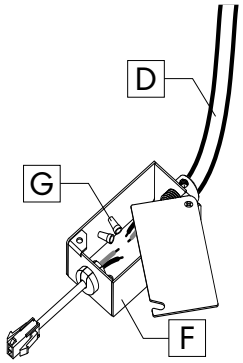


Reinstall the cover by pivoting it back into place, and tighten the screw **[E]**.

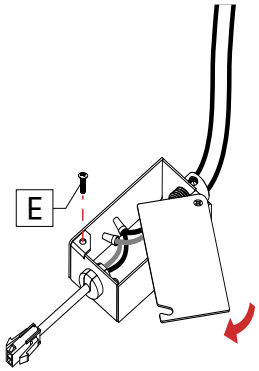


4 INSERT CONNECTION BOX.

Place the connection box **[F]** into the ceiling.

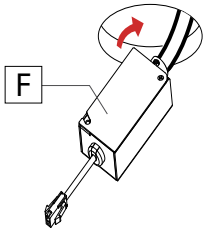


5 CONNECT LIGHT ELEMENT.

Bring the light element **[H]** closer to the ceiling. Connect the light element **[H]** to the connection box in ceiling with quick connectors **[I]**.

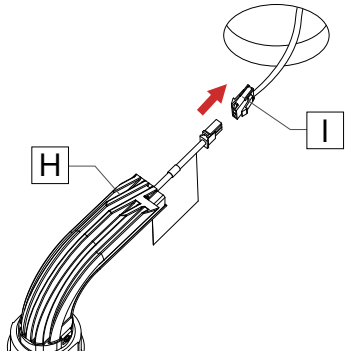

6 INSERT LIGHT ELEMENT INTO CEILING.

Squeeze the spring clips **[J]** upwards onto the light element **[H]**. Insert the light element **[H]** into ceiling until the spring clips **[J]** snap back above the ceiling.

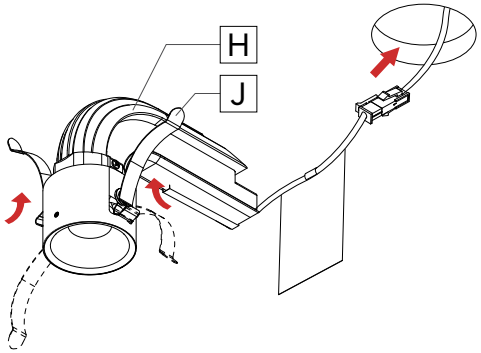

Intertek

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to Lumenwerx ULC.
Lumenwerx ULC. reserves the right to change or modify product specifications without notification.