



IMPORTANT: Installation instructions are shown with POLY 2x2 and applies to POLY 1x1, POLY 1x4, POLY Y and POLY TRI

1

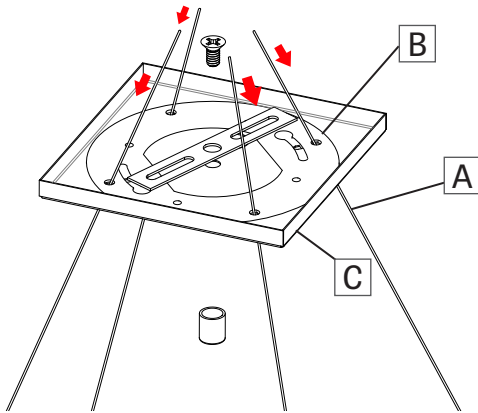


Pass the aircraft cables (A) through the cable holder plate (B) and the canopy (C). **Numbers of cables may vary.**

2

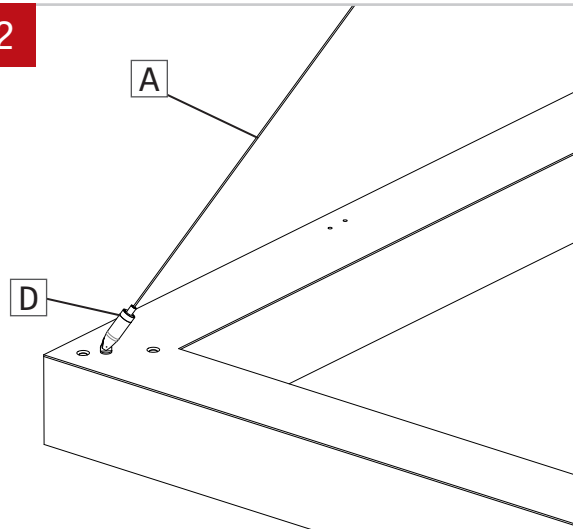

Insert the aircraft cables (A) into the cable grippers (D).


3

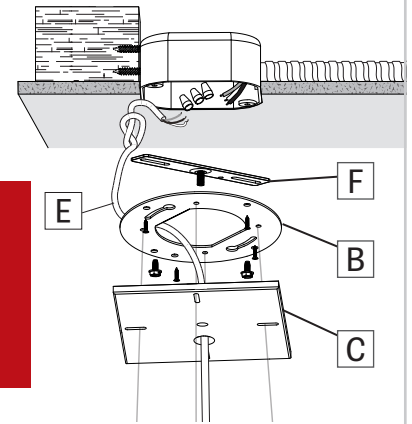

Please refer to the remote driver installation sheet for more informations.

Locate ceiling mounting points according to supplied client drawing. Pass the power cord through the canopy, make a knot in the low voltage power cord (E) and then connect it to the ceiling power feed. Install the junction box cross bar (F), cable holder plate (B) and canopy (C).


4

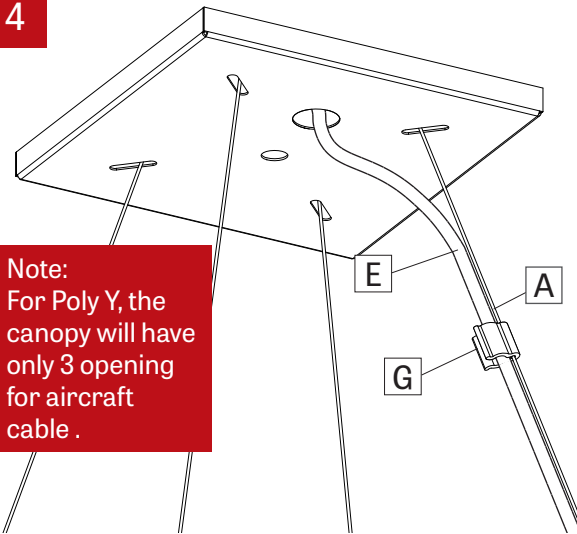

Note:
For Poly Y, the canopy will have only 3 opening for aircraft cable.

Secure low voltage power cord (E) to aircraft cable (A) with plastic clip (G).

5

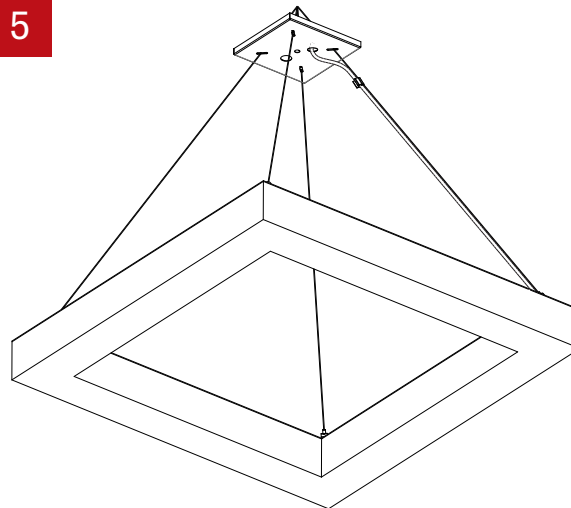

Power can be safely turned on.