

# POLY RECESSED

## GRID CEILING - INSTRUCTIONS

**LUMENWERX**  
WWW.LUMENWERX.COM

**IMPORTANT:** Installation instructions are shown with POLY 2x2 and applies to all POLY except 1x1


**NOTE:** Wire dimming conductors as Class 1



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. proper grounding is required for safety.


Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. la mise à terre électrique est obligatoire pour la sécurité.

1

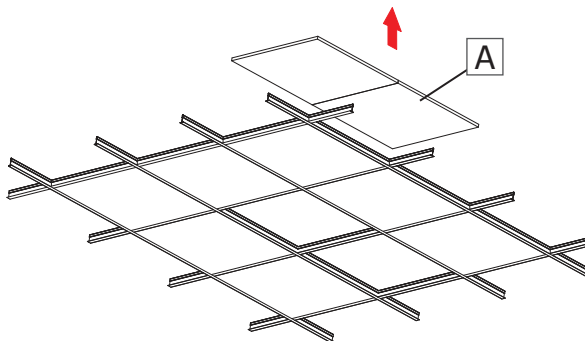


Remove ceiling tiles (A) where the fixture will be installed and adjacent tiles for easy access during installation. **NOTE: Once installation is complete, luminaire needs to be accessible from above for visual branch circuit connection inspection.**

2

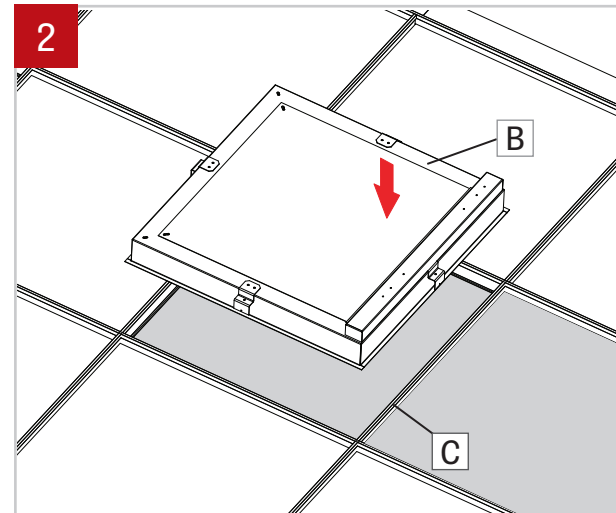


Insert the fixtures (B) above the ceiling grid. Lower fixture (B) onto the t-bar grid (C).

3

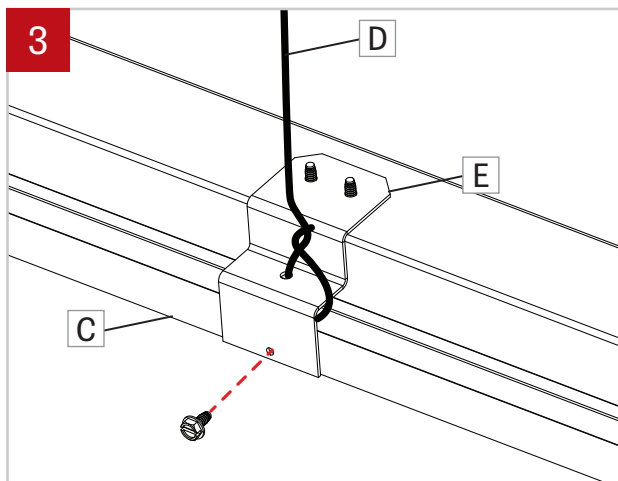


For additional safety, a security wire (D) can be attached from mounting brackets (E) and a screw can be used to fix to the fixture to the T-bar grid (C).

4

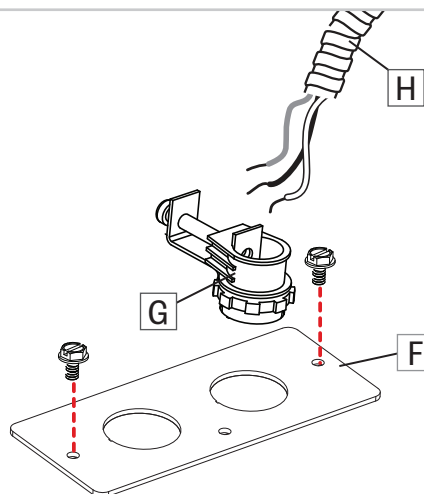

Remove power plate (F) from fixture and install BX connector (G) (by others) and BX cable (H) (by others) through the power plate. Tighten BX connector (G) screw.

5

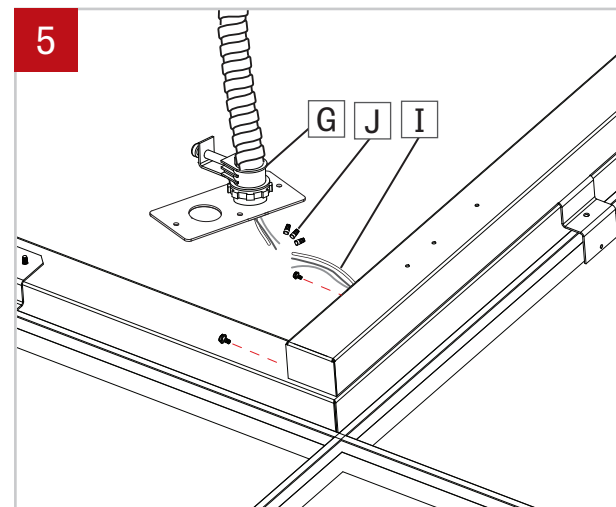

Connect wires from the BX cable (G) to the fixture driver wires (I) using wire nuts (J). Ensure connections comply with local and national electrical codes.

## POLY RECESSED

### GRID CEILING - INSTRUCTIONS

**LUMENWERX**  
WWW.LUMENWERX.COM

