


**IMPORTANT:** Installation instructions are shown with POLY 2x 2 and applies to all POLY size


**NOTE:** Wire dimming conductors as Class 1

1

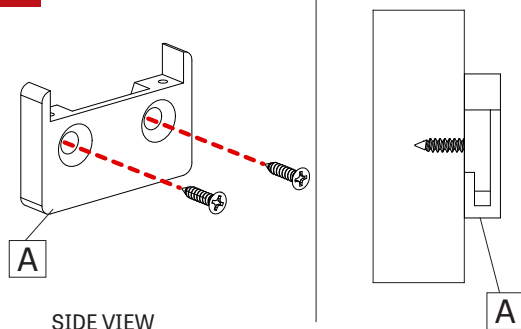


Locate wall bracket position using provided client drawing. Install mounting brackets (A) to wall. Align with structural stud (need double studs – distance between screws is 1.250") or use metal anchors with min. length 1.250". Flat head Philips drive screw, nominal size #10, min. length 1.250".

2

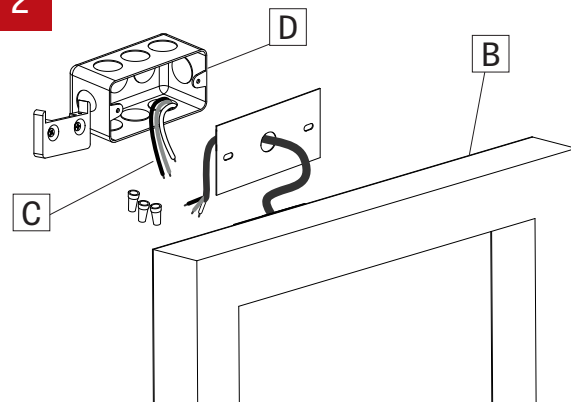


Make electrical connection between fixture (B) and low voltage cable (C) inside the junction box (D).  
**Number of wires may vary.**  
**Installation may differ depending of the localisation of your driver box, please refer to the remote driver installation sheet for more infos.**

3

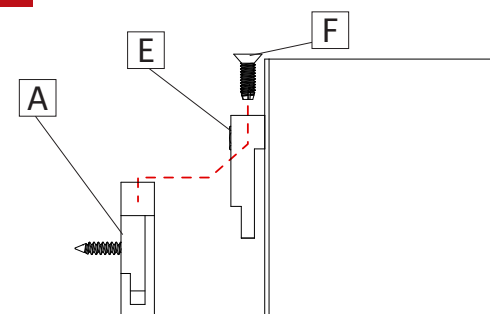

Insert fixture bracket (E) into wall bracket (A), and secure in place with supplied screw (F).

4

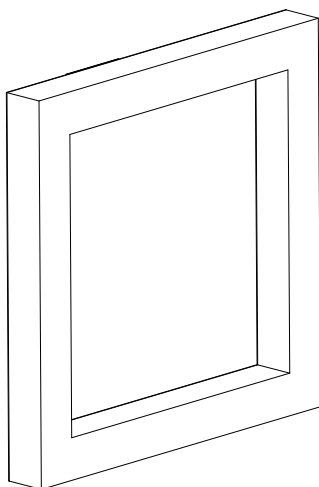

Power can be safely turned on