


POP COLOR SQUARE 44

SURFACE - INSTRUCTIONS


NOTE: Wire dimming conductors as Class 1

1

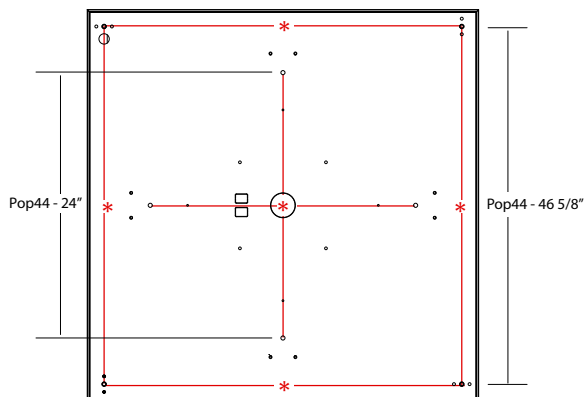


Locate mounting points [*] on the ceiling according to the client drawings.

2

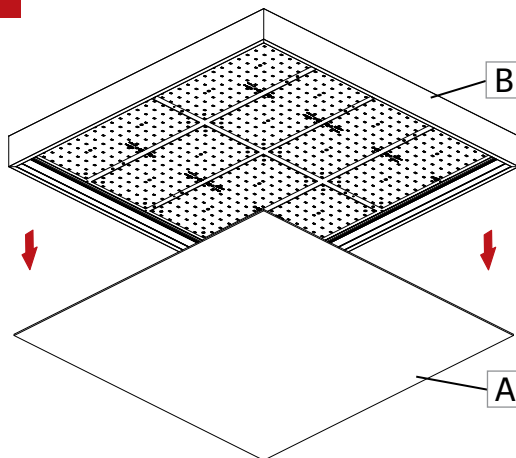


Push the lens (A) up and guide it out of the housing (B).

3

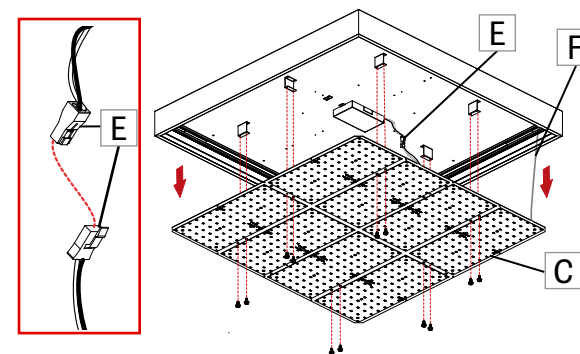


Unscrew the LED plate holder (C) to get access to the driver. Disconnect quick connectors (E) between driver and LED board. Remove security cable (F).

4

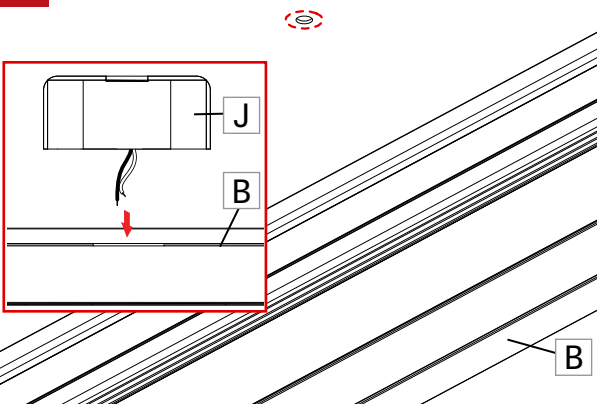


Pass the power wires from the junction box (J) through the hole in the housing (B). Then install the housing (B) on ceiling centered on the junction box according to the dimensions given in the client drawings. Screw the housing (B) to attach it.

5

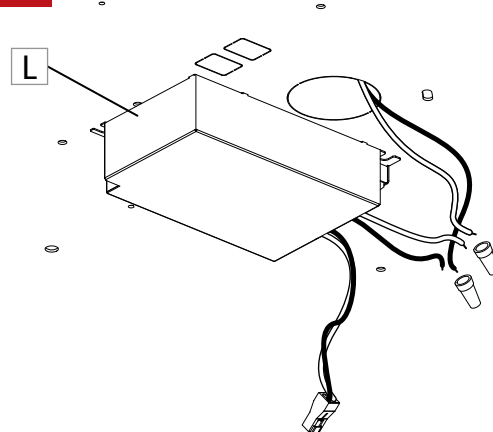

Make electrical connection between driver (L) and power wires from the junction box.

6

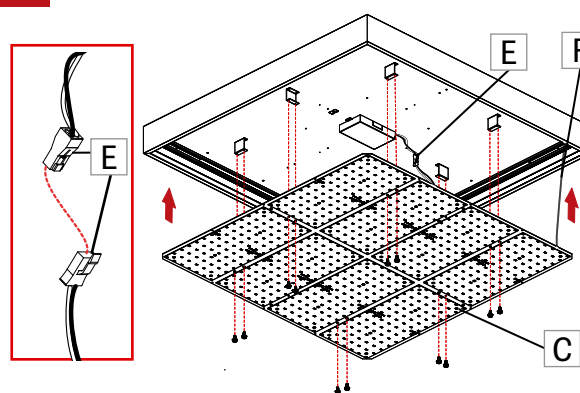


Attach security cable (F). Make wires connection between the driver and the LED board by connecting quick connectors (E). Screw the LED plate holder (C) back in place.

POP COLOR SQUARE 44

SURFACE - INSTRUCTIONS

7

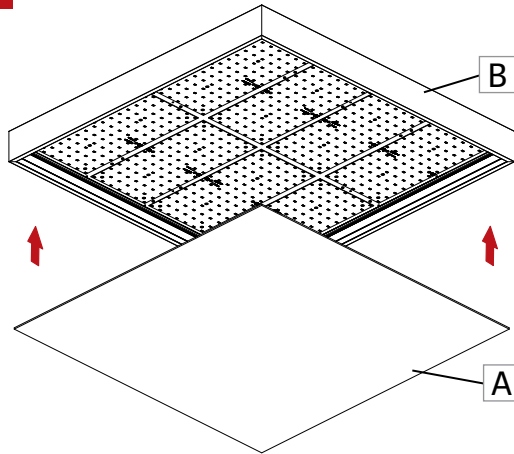

Align and tilt the lens (A) to insert it back into the housing (B).