


# POP CORE SQUARE

## WALL-SURFACE MOUNT - INSTRUCTIONS


**NOTE:** Wire dimming conductors as Class 1

1

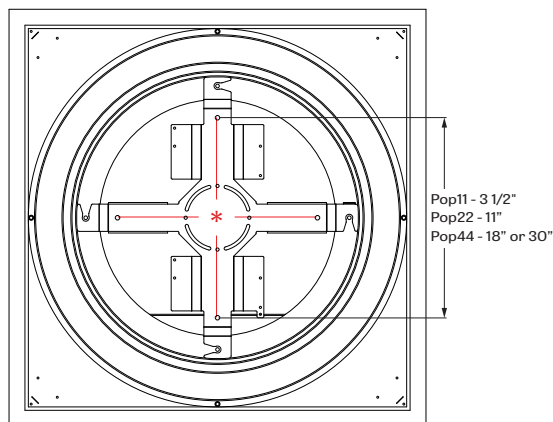


Locate mounting points on the fixture according to the client drawings.

2

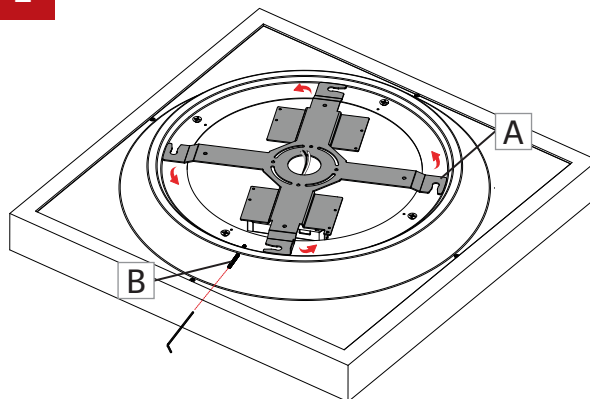


**If wall mount**, remove the set screw (B) on the fixture with an Allen key.  
Turn the mounting bracket (A) counterclockwise.

3

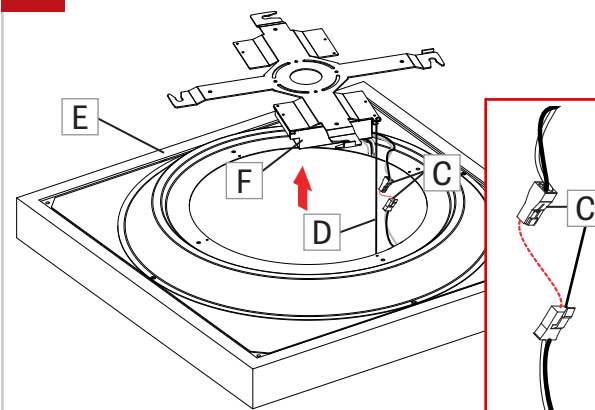


Disconnect quick connector (C) between driver (D) and the LED board (E). Remove security cable (F).

4

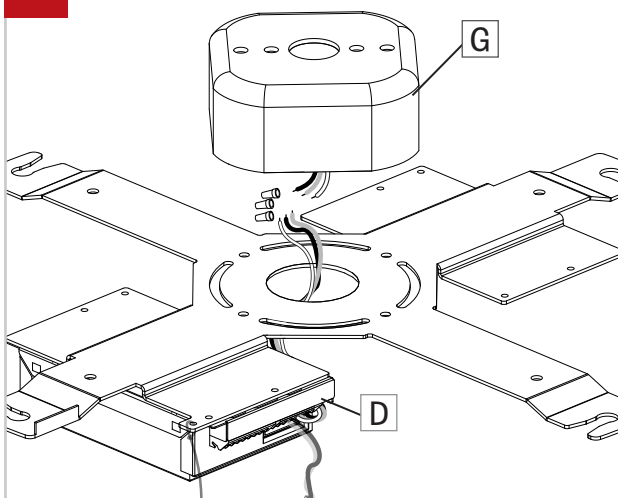


Make wires connection between driver (D) wires and power wires, inside the junction box (G).

5

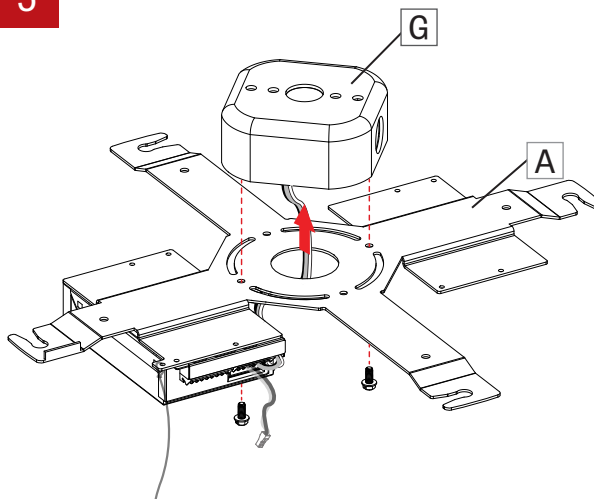

Attach mounting bracket (A) on the junction box (G).


6

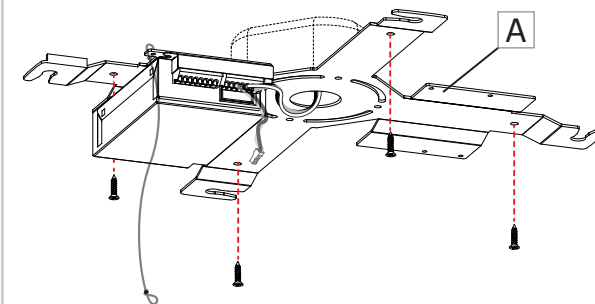


Screw the mounting bracket (A) to the wall or the ceiling to secure it in place.

# POP CORE SQUARE

## WALL-SURFACE MOUNT - INSTRUCTIONS

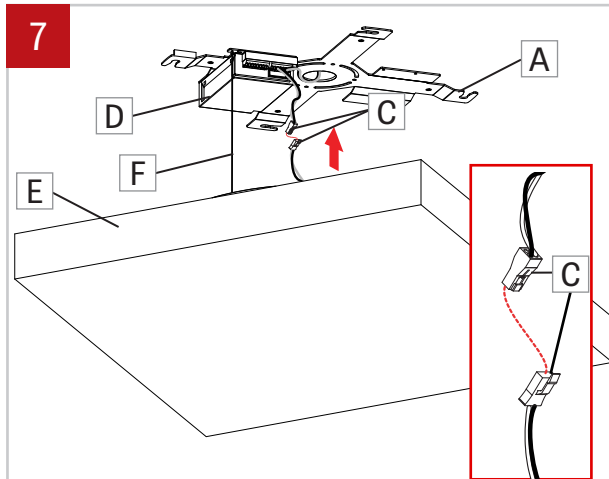

Attach security cable (F) from the mounting bracket (A) to the LED board (E). Make wires connection between the driver (D) and the LED board (E) by connecting quick connectors (C).

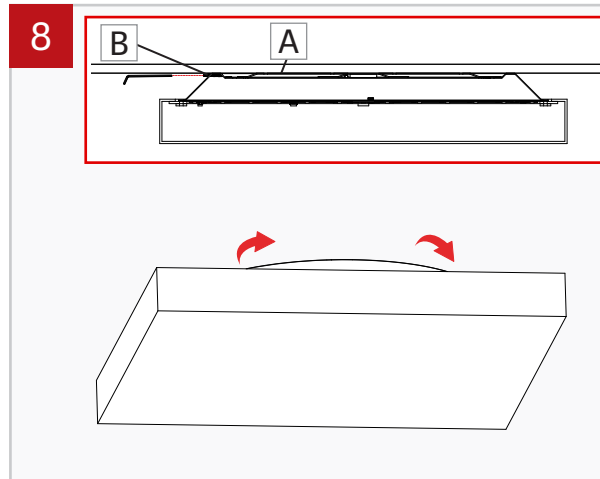

Place the fixture on the mounting bracket (A) and turn it clockwise to fix it.

**If wall mount,** lock the bracket by tightening the set screw (B) using an Allen key.