

Recessed - Acoustix - Blank



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.


Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familiale avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Shown with Pop 1' x 1' and applies to Pop 1' x 2' & Pop 2' x 2'.


1 PREPARE THE CEILING.

Remove the ceiling tile [A] where the fixture will be installed.

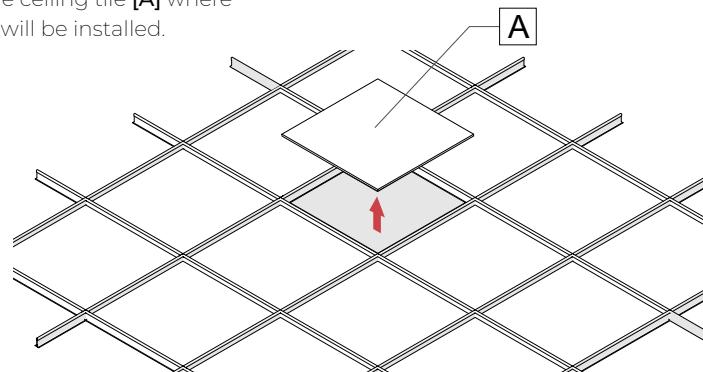


2 PREPARE THE FELT BOX.

Fold all four sides of the felt box [B].

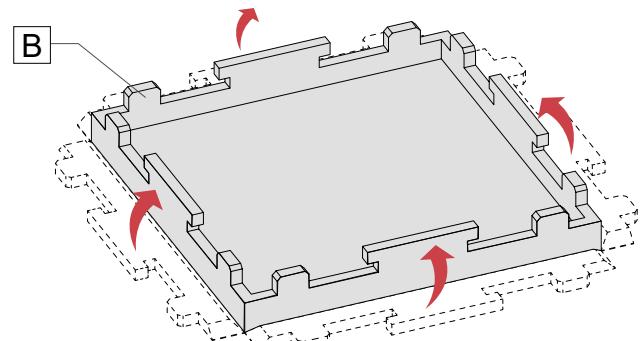

3 PREPARE THE BASE FELT.

Pivot the long felt pieces [C] on the long holes of the base felt panel [D] (do not remove them).

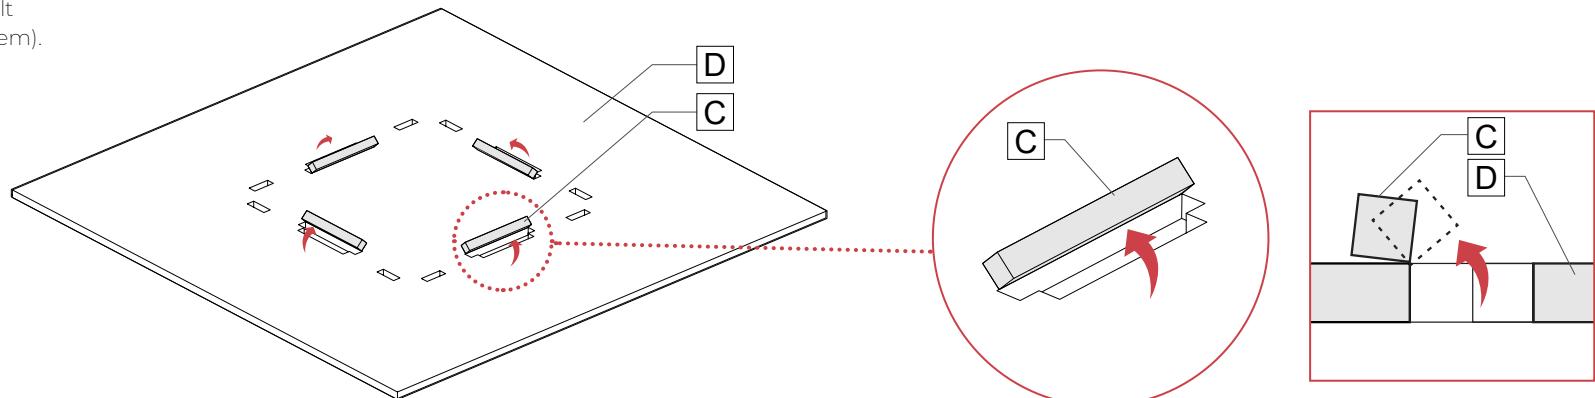


Recessed - Acoustix - Blank

4 ATTACH THE FELT BOX TO THE BASE FELT PANEL

Align the tabs [E] [F] on the felt box [B] with the holes on the base felt panel [D].

On the small holes, simply insert tabs [E] into the hole.

For the longer holes, bend a bit the felt box sides to insert the tabs [F] in place. Then push them back to the sides to fix the felt box [B] on the felt base [D].

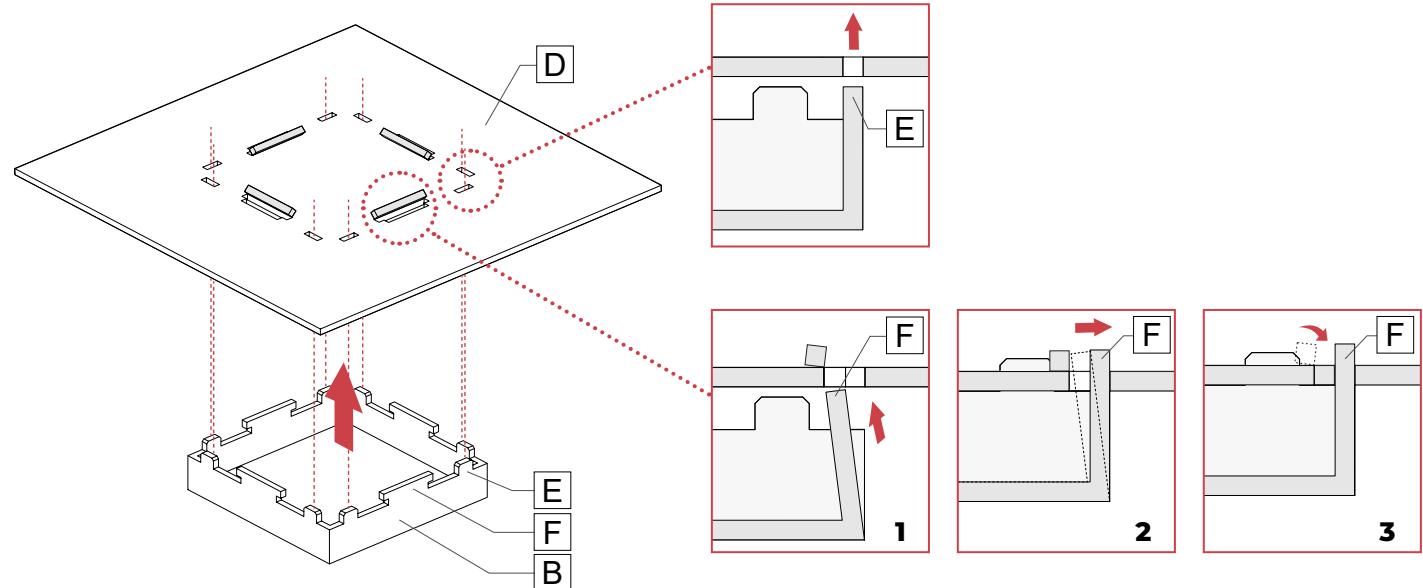**5 INSTALL THE FIXTURE.**

Raise the base felt panel [D] above the T-bars and put it in the place.

